



Service Manual SmartRadar FlexLine

Contact Information:

Head Office - Delft, The Netherlands

**Honeywell Enraf
Delftechpark 39, 2628 XJ Delft
PO Box 812, 2600 AV Delft
The Netherlands**

Tel.: +31 (0)15 2701 100

Fax: +31 (0)15 2701 111

E-mail: enraf.helpdesk@honeywell.com

Website: <http://www.honeywell.com/ps>

| | | |
|------------------|---------------------------------------|------------|
| CHAPTER 1 | General | 1-1 |
| 1.1 | Target Group for this Service Manual | 1-1 |
| 1.2 | Structure of this Manual | 1-1 |
| 1.3 | Related Documents | 1-1 |
| 1.4 | Trademarks | 1-2 |
| 1.5 | Contact | 1-2 |
| CHAPTER 2 | Safety | 2-1 |
| 2.1 | General | 2-1 |
| 2.2 | Safety Conventions | 2-1 |
| 2.2.1 | Warnings | 2-1 |
| 2.2.2 | Cautions | 2-1 |
| 2.3 | Safety Instructions | 2-1 |
| 2.3.1 | Safety Instructions | 2-1 |
| 2.3.2 | EC Declaration of Conformity (for EU) | 2-1 |
| 2.3.3 | Control Drawings for FM & CSA | 2-2 |
| 2.3.4 | Users | 2-2 |
| 2.3.5 | Additional Information | 2-2 |
| 2.3.6 | Environmental Conditions | 2-2 |
| 2.4 | Liability | 2-2 |
| 2.5 | Labels | 2-3 |
| 2.6 | Personal Safety | 2-3 |
| 2.7 | Warnings and Cautions | 2-4 |
| 2.7.1 | General | 2-4 |
| 2.7.1.1 | Opening of the Instrument | 2-4 |
| 2.7.1.2 | Tools | 2-4 |
| 2.7.1.3 | Working Environment | 2-4 |
| 2.7.1.4 | Required Skills | 2-4 |
| 2.8 | Electrical | 2-4 |
| 2.8.1 | IEC Safety Standards | 2-4 |
| 2.8.2 | Grounding | 2-5 |
| 2.9 | Accordance to Regulations | 2-5 |
| 2.9.1 | Explosion Safety - Without SmartConn | 2-5 |
| 2.9.2 | Explosion Safety - With SmartConn | 2-6 |
| 2.9.3 | Compliance to FCC, R&TTE | 2-6 |
| 2.9.4 | Low-Voltage Directive | 2-7 |
| CHAPTER 3 | System Architecture | 3-1 |
| 3.1 | SmartRadar FlexLine Architecture | 3-1 |
| 3.2 | FlexConn Modules | 3-2 |
| 3.3 | Entities | 3-6 |
| 3.3.1 | Status Entities | 3-6 |
| 3.3.1.1 | Health Entity | 3-6 |

| | | |
|------------------|--|-------------|
| 3.3.1.2 | Commissioned Entity | 3-8 |
| 3.3.2 | Generic Entity | 3-8 |
| 3.3.3 | Function-specific Entities | 3-8 |
| 3.4 | SmartView Display | 3-9 |
| 3.4.1 | General | 3-9 |
| 3.4.2 | Status Entities on SmartView | 3-10 |
| 3.4.3 | Generic Entities on SmartView | 3-11 |
| 3.4.4 | Specific Entities on SmartView | 3-11 |
| 3.5 | Engauge Service Tool | 3-12 |
| 3.5.1 | Status Entities in Engauge | 3-13 |
| 3.5.2 | Generic Entities in Engauge | 3-13 |
| 3.5.3 | Board-specific Entities in Engauge | 3-13 |
| 3.5.4 | Specific Entities on Engauge | 3-13 |
| 3.5.5 | Function-generic Entities on Engauge | 3-13 |
| CHAPTER 4 | Service Tools | 4-1 |
| 4.1 | SmartView | 4-1 |
| 4.1.1 | General | 4-1 |
| 4.1.2 | SmartView Versions | 4-1 |
| 4.1.3 | Connections | 4-1 |
| 4.1.4 | SmartView Controls | 4-2 |
| 4.1.5 | SmartView Menu Structure | 4-4 |
| 4.1.5.1 | SmartView Screens | 4-4 |
| 4.1.5.1.1 | Start-up Screen | 4-5 |
| 4.1.5.1.2 | Menu Screen | 4-5 |
| 4.1.5.1.3 | Backlight Screen | 4-6 |
| 4.1.5.1.4 | Display Contrast Screen | 4-7 |
| 4.1.5.1.5 | Display Settings Screen | 4-7 |
| 4.1.5.1.6 | Display Test Screen | 4-7 |
| 4.1.5.1.7 | Identification Screen | 4-8 |
| 4.1.5.1.8 | Level & Temperature Screen | 4-9 |
| 4.1.5.1.9 | Primary Value Screen | 4-9 |
| 4.1.5.1.10 | Password Screen | 4-11 |
| 4.1.5.1.11 | Commands Menu Screens | 4-12 |
| 4.1.5.1.12 | Commissioning Menu Screen | 4-13 |
| 4.2 | Engauge | 4-16 |
| 4.2.1 | Connecting the Engauge Service Tool | 4-16 |
| 4.2.2 | Using Engauge | 4-17 |
| 4.2.3 | Some Engauge Screen Examples | 4-18 |
| CHAPTER 5 | Installation Check | 5-1 |
| CHAPTER 6 | Commissioning | 6-1 |
| 6.1 | General | 6-1 |
| 6.1.1 | Introduction | 6-1 |

| | | |
|------------|--|-------------|
| 6.1.2 | Text Conventions | 6-1 |
| 6.2 | Enraf Fieldbus (HCI-BPM) | 6-2 |
| 6.2.1 | Introduction | 6-2 |
| 6.2.2 | Commissioning the HCI-BPM | 6-3 |
| 6.3 | Enraf GPU Protocol (HCI-GPU) | 6-5 |
| 6.3.1 | Introduction | 6-5 |
| 6.3.2 | Commissioning the HCI-GPU | 6-6 |
| 6.4 | Product Level Measurement (TII-XR) | 6-8 |
| 6.4.1 | Introduction | 6-8 |
| 6.4.2 | Basic Commissioning | 6-8 |
| 6.4.2.1 | General | 6-8 |
| 6.4.2.2 | Level Start-Up | 6-9 |
| 6.4.2.3 | Level Check | 6-11 |
| 6.4.2.4 | Alarm Settings | 6-13 |
| 6.4.2.5 | Alarm Loop Checking | 6-14 |
| 6.4.2.6 | Compensations | 6-14 |
| 6.4.2.6.1 | Filtering | 6-14 |
| 6.4.2.6.2 | Verification Pins | 6-15 |
| 6.4.2.7 | Errors and Warnings | 6-15 |
| 6.4.2.8 | Additional Information | 6-15 |
| 6.5 | Relay Contacts (FII-DO) | 6-16 |
| 6.5.1 | Introduction | 6-16 |
| 6.5.2 | Operation Mode | 6-17 |
| 6.5.3 | Relay Configuration | 6-17 |
| 6.5.3.1 | Jumper Settings | 6-17 |
| 6.5.3.2 | Relay Mode | 6-18 |
| 6.5.4 | Alarm Mode | 6-18 |
| 6.5.4.1 | PV Monitor | 6-18 |
| 6.5.4.1.1 | Monitor Mode | 6-19 |
| 6.5.4.1.2 | Status Behavior | 6-19 |
| 6.5.4.2 | Remote Control | 6-20 |
| 6.5.4.3 | Not in Use | 6-21 |
| 6.5.5 | Commands | 6-21 |
| 6.5.5.1 | Activate | 6-21 |
| 6.5.5.2 | Deactivate | 6-21 |
| 6.5.5.3 | Acknowledge | 6-21 |
| 6.5.6 | LED Association | 6-22 |
| 6.5.7 | Terminal Allocation | 6-22 |
| 6.5.8 | Commissioned Entities | 6-23 |
| 6.5.9 | Board Commissioned Entity | 6-24 |
| 6.5.10 | Fail-safe Level Application | 6-24 |
| 6.6 | SmartView Display Interface (FII-SMV) | 6-27 |
| 6.6.1 | Introduction | 6-27 |
| 6.6.2 | Commissioning the FII-SMV | 6-28 |

| | |
|---|-------------|
| 6.7 Pressure & Density Measurement and Other HART Inputs (FCI-HT) . . . | 6-29 |
| 6.7.1 Introduction | 6-29 |
| 6.7.2 Software Description | 6-30 |
| 6.7.3 Software Specifications | 6-34 |
| 6.7.3.1 General | 6-34 |
| 6.7.3.2 P1 Pressure | 6-35 |
| 6.7.3.3 P3 Pressure | 6-36 |
| 6.7.3.4 HIMS Density | 6-38 |
| 6.7.3.5 Generic HART Devices | 6-39 |
| 6.7.3.6 Function Identification | 6-41 |
| 6.7.3.7 SmartView Display | 6-43 |
| 6.7.4 Board Commissioning | 6-44 |
| 6.7.4.1 Function 1 Commissioning | 6-44 |
| 6.7.4.2 Function 2 Commissioning | 6-45 |
| 6.7.4.3 Function 3 through 7 Commissioning | 6-46 |
| 6.7.4.4 Function 8 Commissioning | 6-47 |
| 6.7.5 Hardware Configuration | 6-48 |
| 6.7.5.1 Terminal Allocation | 6-48 |
| 6.7.5.2 LED Allocation | 6-48 |
| 6.8 Average Temperature & Water Level Measurement (FII-VT) | 6-49 |
| 6.8.1 Introduction | 6-49 |
| 6.8.2 VITO Interface Types | 6-50 |
| 6.8.3 Commissioning | 6-50 |
| 6.8.3.1 Commissioning Parameters for MTT/LT Probes | 6-50 |
| 6.8.3.1.1 Product Temperature | 6-53 |
| 6.8.3.1.2 Vapour Temperature | 6-54 |
| 6.8.3.1.3 Water Level (for 766/768 Combi probes and 765 Water probe only) | 6-55 |
| 6.8.3.2 Commissioning Parameters for MRT or RTD | 6-57 |
| 6.8.3.2.1 Product Temperature | 6-58 |
| 6.8.3.2.2 Vapour Temperature | 6-62 |
| 6.8.3.3 Commissioning Parameters for the 765 VITO Water Probe | 6-63 |
| 6.8.3.3.1 Water Level | 6-64 |
| 6.8.4 Commissioning Check | 6-65 |

CHAPTER 1 GENERAL

1.1 Target Group for this Service Manual

This SmartRadar FlexLine Service Manual is meant for service engineers who are assigned to commission a SmartRadar FlexLine.

1.2 Structure of this Manual

| Chapter Title | Contents Description |
|-------------------------|---|
| 1 - GENERAL | This introductory manual part |
| 2 - SAFETY | Here all safety-related information is housed. All essential and mandatory safety instructions, precautions, and measures are described here. Moreover, the used safety conventions, the labeling information, and compliance information can be found in this chapter. |
| 3 - SYSTEM ARCHITECTURE | This chapter gives an introductory impression of the SmartRadar FlexLine's modular-shaped hardware architecture. |
| 4 - SERVICE TOOLS | In this chapter, both the SmartView and the Engauge service tool are described in more detail. |
| 5 - INSTALLATION | To make sure the relevant module (s) is (are) properly installed, before starting with commissioning, only a reference is made here to the <i>Installation Guide</i> for the SmartRadar FlexLine. |
| 6 - COMMISSIONING | This chapter gives all information needed for a proper commissioning of one or more SmartRadar FlexConn modules. |

1.3 Related Documents

- SmartRadar FlexLine Safety instructions for installation, commissioning, operation, and maintenance; shipped with the device
- Installation Guide SmartRadar Antennas
- CE Declaration of Conformity
- EC-Type Examination Certificate
- IEC-Ex Certificate of Conformity
- FCC Authorization
- Control drawings for FM and CSA

1.4 Trademarks

HART[®] is a registered trademark of the HART Communication Foundation.

1.5 Contact

Head Office - Delft, The Netherlands

Honeywell Enraf
Delftechpark 39, 2628 XJ Delft
PO Box 812, 2600 AV Delft
The Netherlands

Tel.: +31 (0)15 2701 100

Fax: +31 (0)15 2701 111

E-mail: enraf.helpdesk@honeywell.com

Website: <http://www.honeywell.com/ps>

CHAPTER 2 SAFETY

2.1 General

The SmartRadar FlexLine is a radar-based level gauge to be used in inventory measurement systems. It can also be used to interface with other systems and sensors such as temperature gauges.

For the correct and safe servicing of this product, it is essential that all personnel follow generally accepted safety procedures in addition to the safety precautions specified in this document.

2.2 Safety Conventions

2.2.1 Warnings

Following warning mark is used within this document to urge attention in order **to prevent personal injuries** or dangerous situations, further described within this document.

| Symbol | Description | Remark |
|---|-----------------|-----------------------------------|
|  | General warning | Will always be explained by text. |

2.2.2 Cautions

Following caution mark is used within this document to urge attention in order **to prevent damages to the equipment** further described within this document.

| Symbol | Description |
|---|----------------------|
|  | General caution sign |

2.3 Safety Instructions

2.3.1 Safety Instructions

See the safety instructions shipped with the device for installation, commissioning, operation, and maintenance.

2.3.2 EC Declaration of Conformity (for EU)

Refer to the EC declaration of conformity shipped with the device.

2.3.3 Control Drawings for FM & CSA

Refer to the control drawings shipped with the device.

2.3.4 Users

The mechanical and electrical installation must be carried out only by trained personnel with knowledge of the requirements for installation of explosion-proof equipment in hazardous areas.

The entire installation procedure must be carried out in accordance with national, local, and company regulations.

The entire electrical installation shall be carried out in accordance with the national requirements for electrical equipment to be installed in hazardous areas.

NOTE: See EN IEC 60079-14 or NEC (NFPA70).

2.3.5 Additional Information

If you require additional information, contact Enraf or its representative.

2.3.6 Environmental Conditions

Observe the environmental conditions for the temperature and the pressure.

2.4 Liability

The information in this installation guide is the copyright property of Enraf B.V., Netherlands. Enraf B.V. disclaims any responsibility for personal injury or damage to equipment caused by:

- Deviation from any of the prescribed procedures,
- Execution of activities that are not prescribed,
- Neglect of the safety regulations for handling tools and use of electricity.

The contents, descriptions and specifications in this Service Manual are subject to change without notice. Enraf B.V. accepts no responsibility for any errors that may appear in this Service Manual.



WARNING! *Only certified technicians are authorized to make changes on the SmartRadar configuration. All modifications must be in accordance to the guidelines as set forth by Enraf. Modifications not authorized by Enraf will invalidate the approval certificates.*

2.5 Labels

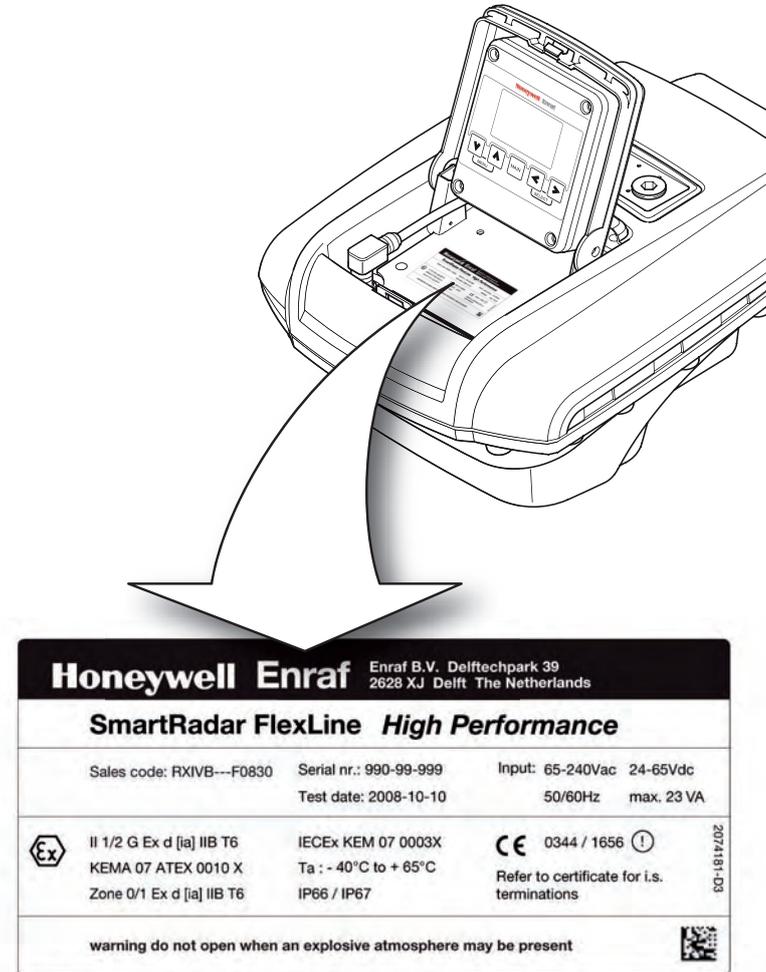


FIGURE 2-1

Identification label with Safety note on the SmartRadar FlexLine

2.6 Personal Safety



WARNING! *In hazardous areas it is compulsory to use personal protection and safety gear.*

This can be: Safety helmet, fire-resistive overall, safety shoes, safety glasses, working gloves, LEL-meter.

Pay attention to the kind of product in the tank. If there is any danger for your health, wear a gas mask and take all necessary precautions.



WARNING! *Take appropriate precautions when chemical or toxic product vapors are present (compressed air, chemical protection suit, detection equipment).*

NOTE: The emitted microwave energy is far below the accepted limits for exposure of the human body. The antenna generates a maximum radiation of 0.1 mW/cm².

2.7 Warnings and Cautions

2.7.1 General

2.7.1.1 Opening of the Instrument

When it is required to open the instrument in an explosive hazardous environment, take care of the following.



WARNING! *Make sure that all power to the device is switched off before you open the covers of the device. Failure to do so may cause danger to persons or damage the equipment. All covers of the device must be closed before switching the power on again.*



WARNING! *Treat the flange surface of the cover and the housing with care.
Keep the flange surface free of dirt.
The O-ring must be present and undamaged.*

2.7.1.2 Tools



WARNING! *Use non-sparking tools and explosion-proof testers. Use suitable explosion-proof tools (e.g. testing devices)!*

2.7.1.3 Working Environment

WARNING! *Avoid generation of static electricity. Make sure no explosive gas mixtures build up in the working area.*

2.7.1.4 Required Skills



WARNING! *The technician must have technical skills to be able to safely install the equipment. The technician also must be trained to work in accordance with the national requirements for electrical equipment in hazardous areas.*

2.8 Electrical

2.8.1 IEC Safety Standards

- The entire electrical installation must be in accordance with the International Standard EN IEC 60079-14 for electrical equipment in hazardous areas or with NEC (NFPA70) requirements.
- The stopping plugs, cable glands and reducers must be installed in accordance with appropriate IP requirements

- Use explosion proof (Ex-d) compound barrier glands (due >2 litres IIB) in case of use without SmartConn (Ex-e junction box).
- Use increased safe (Ex-e) cable glands in case a SmartConn box is used.
- Improper installation of cable glands, conduits or stopping plugs will invalidate the Ex approval of this device.

2.8.2 Grounding



WARNING! *Make sure the housing of the device is properly connected to the ground reference! Make sure that the electrical resistance of the ground connection is below the maximum of prescribed by local requirements!*

2.9 Accordance to Regulations

2.9.1 Explosion Safety - Without SmartConn

Type of protection:

ATEX / IEC Ex / CSA / FM

Certificate numbers:

ATEX / IEC Ex

- SmartRadar FlexLine:
KEMA 07ATEX0010X and IECEx KEM 07.0003 X.
- SmartView: KEMA 07ATEX0011X and IECEx KEM 07.0004 X.
- SmartConn: KEMA 07ATEX0093 and IECEx KEM 07.0031.
- Without SmartView: Ex d [ia] T6 Ta: -40 °C - +65 °C.
- With SmartView: Ex d [ia] ia T4 Ta: -25 °C - +65 °C.

FM

- Without SmartView:
Class I DIV I group C,D T6 NEMA 4X Ta: -40 °C - +65 °C.
- With SmartView:
Class I DIV I group C,D T4 NEMA 4X Ta: -25 °C - +65 °C.

CSA

- Without SmartView:
Class I DIV I group C,D T6 NEMA 4X Ta: -40 °C - +65 °C.
- With SmartView:
Class I DIV I group C,D T4 NEMA 4X Ta: -25 °C - +65 °C.

2.9.2 Explosion Safety - With SmartConn

Type of protection:

ATEX / IEC Ex / CSA

- Without SmartView: Ex de [ia] T6 Ta: -40 °C - +65 °C.
- With SmartView: Ex de [ia] ia T4 Ta: -25 °C - +65 °C.

2.9.3 Compliance to FCC, R&TTE

This device complies with EN 302372 of the R&TTE Directive and Part 15 of the FCC Rules. The device does not cause harmful interference and accepts any interference received.



WARNING! *Changes or modifications made to this equipment not approved by Enraf B.V. invalidate the R&TTE/ FCC authorization to operate this equipment.*



CAUTION! *This equipment has been tested. It complies with a Field disturbance sensor device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and radiates radio frequency energy. If this device is not installed and used in accordance with the instructions, it can cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.*

NOTE: *This device is certified to measure liquid levels in metal, concrete or similar materials, enclosed tanks.*

NOTE: *The radiated output power of the device is far below the exposure limits. Nevertheless, use the device in such a manner that the potential for human contact during normal operation is minimal.*

EN302372-1 ANNEX B

The following installation requirements shall be fulfilled:

1. SmartRadar FlexLine instruments are required to be installed at a permanent fixed position at a closed (not open) metallic tank or reinforced concrete tank, or similar enclosure structure made of comparable attenuating material;
2. Flanges and attachments of the radar equipment shall provide the necessary microwave sealing by design.
3. Sight glasses shall be coated with a microwave proof coating when necessary (i.e. electrically conductive coating);
4. Manholes or connection flanges at the tank shall be closed to ensure a low-level leakage of the signal into the air outside the tank.

5. Whenever possible, mounting of the radar equipment shall be on top of the tank structure with the orientation of the antenna to pointing in a downward direction;
6. Installation and maintenance of the radar equipment shall be performed by professionally trained individuals only.

2.9.4 Low-Voltage Directive

The device is suitable for:

- Pollution degree 2
- Overvoltage category II
- Class I equipment

CHAPTER 3 SYSTEM ARCHITECTURE

3.1 SmartRadar FlexLine Architecture

With its modular-shaped hardware architecture, the SmartRadar FlexLine system is built up from interchangeable hardware modules. These modules consist of uniform printed circuit boards (PCBs), each of them representing a different, unique functionality. Together with the software implemented on these hardware parts, each PCB makes up a so-called FlexConn module. Via the serial CAN-bus on the backplane of the DIN rail on which they are mounted, these FlexConn modules communicate with each other. See FIGURE 3-1.

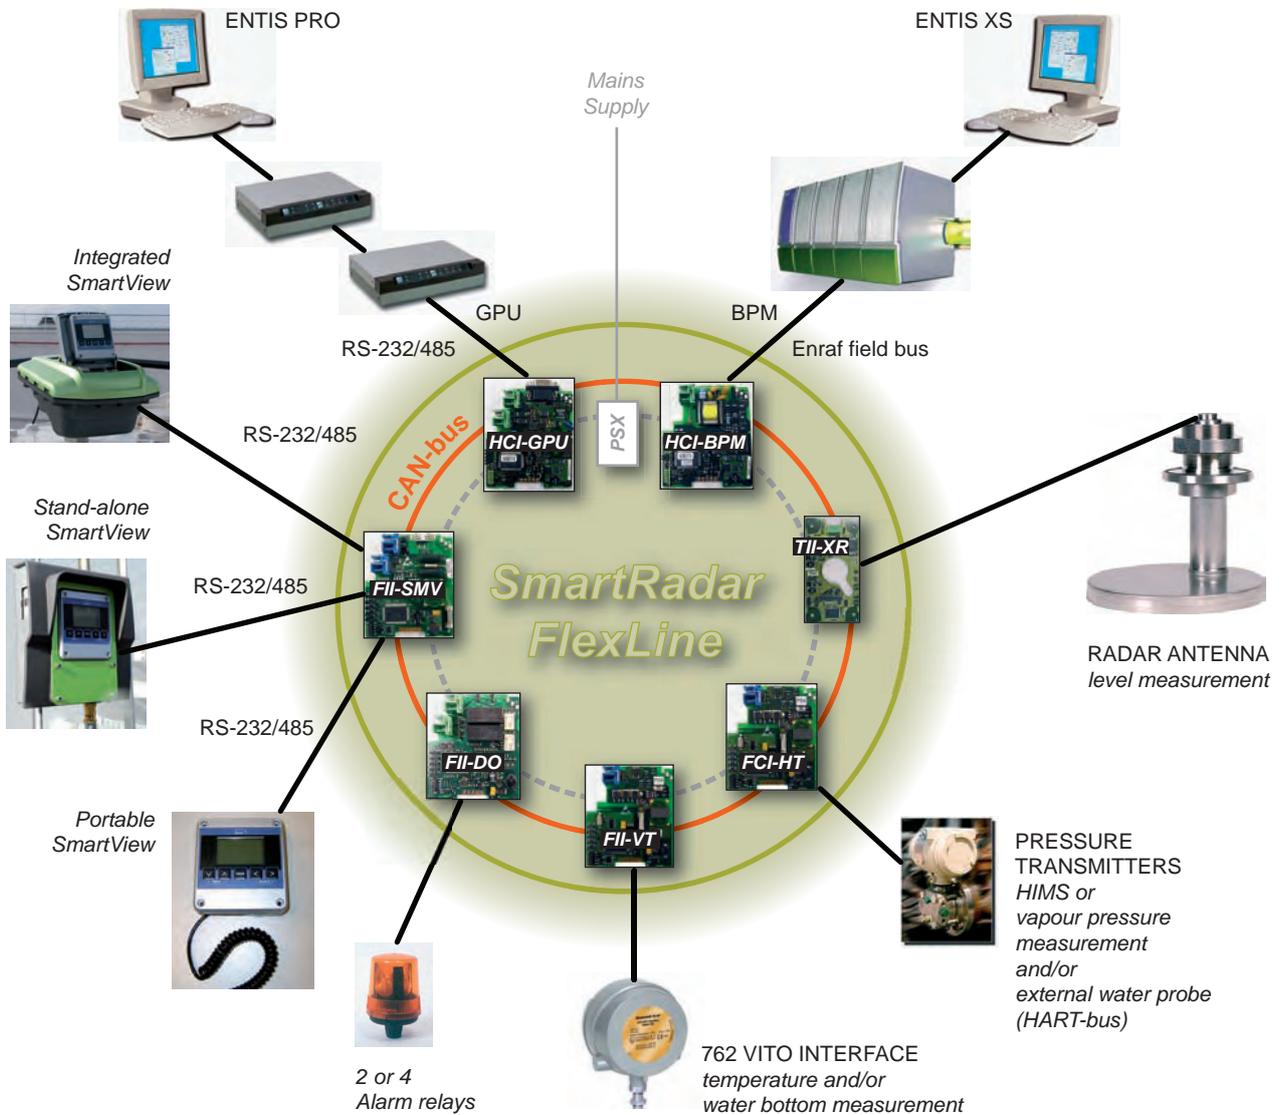


FIGURE 3-1

SmartRadar FlexLine system architecture overview

ESF07-0026

3.2 FlexConn Modules

One of the main characteristics of the SmartRadar FlexLine architecture is its placement flexibility of the FlexConn modules. If desired, any types of modules can be added at any locations. Even placement of 2 identical modules is possible within the SmartRadar FlexLine system.

Each FlexConn module has one or more functions. In general, this can be a *sensor* function, a *communication* function, or a *digital-interface* function.


A *sensor* function measures or calculates a process value, or it obtains a process value from a connected external instrument.

A *communication* function takes care of the communication with a communication interface unit or with a DCS, SCADA, tank inventory, or another terminal automation system.

A *digital-interface* function controls digital output or reads digital input from instruments around the storage tank.

NOTE: Some FlexConn PCBs are also used within the so-called SmartLink system.

Each FlexConn module has a unique name, which is built up according to the following outline:

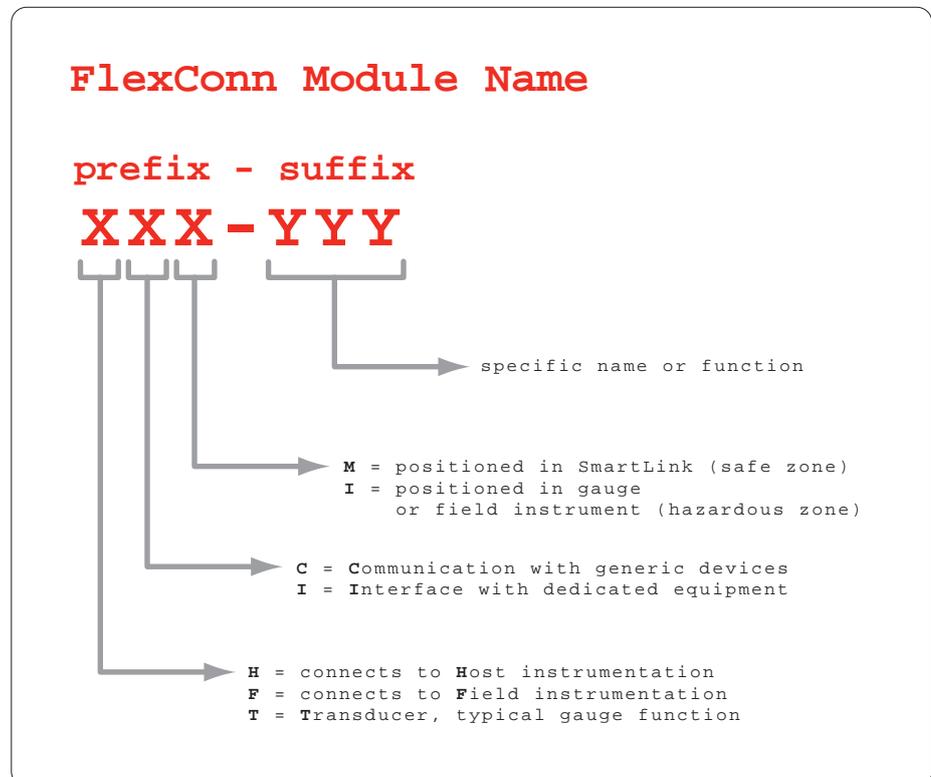

Each FlexConn PCB consists of a *generic* and a *specific* electronics part. The generic part can be found on any FlexConn modules. The specific electronics part represents an application-specific function. See FIGURE 3-2

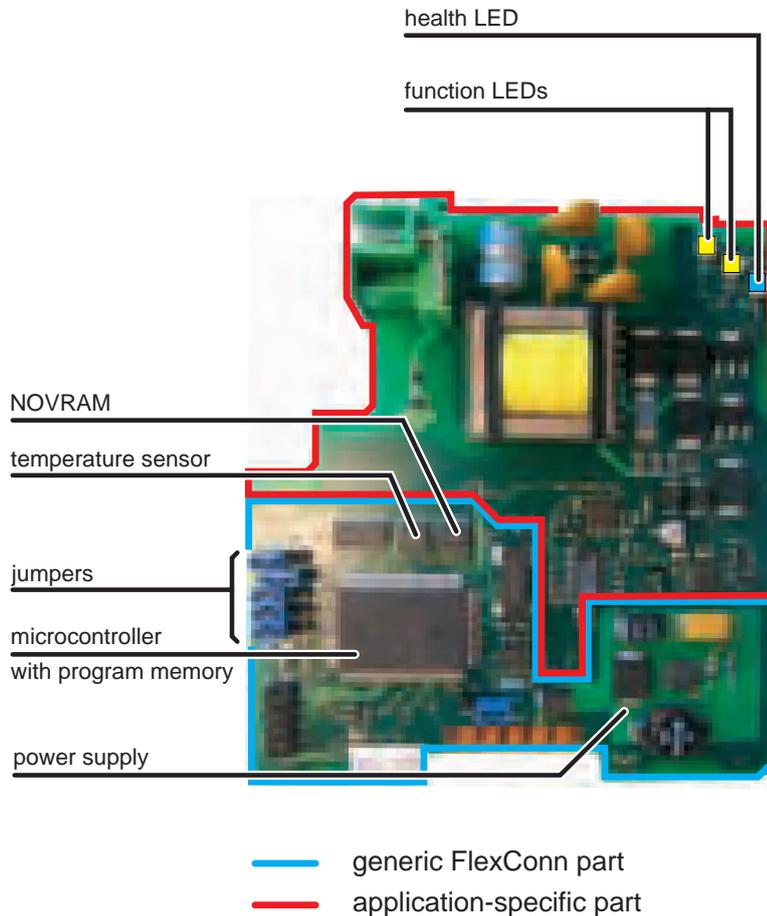


FIGURE 3-2

A typical FlexConn PCB layout

ESF07-0021

On the *generic* electronics part, the following parts can be found:

■ **The program memory**

This memory contains the module-specific software.

■ **The microprocessor / controller**

The microprocessor executes the module-specific software stored in the program memory.

■ **The non-volatile memory**

Here the commissioning parameters and the diagnostics data are stored when the power is switched off.

■ **3 voltage monitors**

The output of these monitors, being voltage levels from 3 different FlexConn PCB locations, are used for diagnostics purposes.

See FIGURE 3-3.

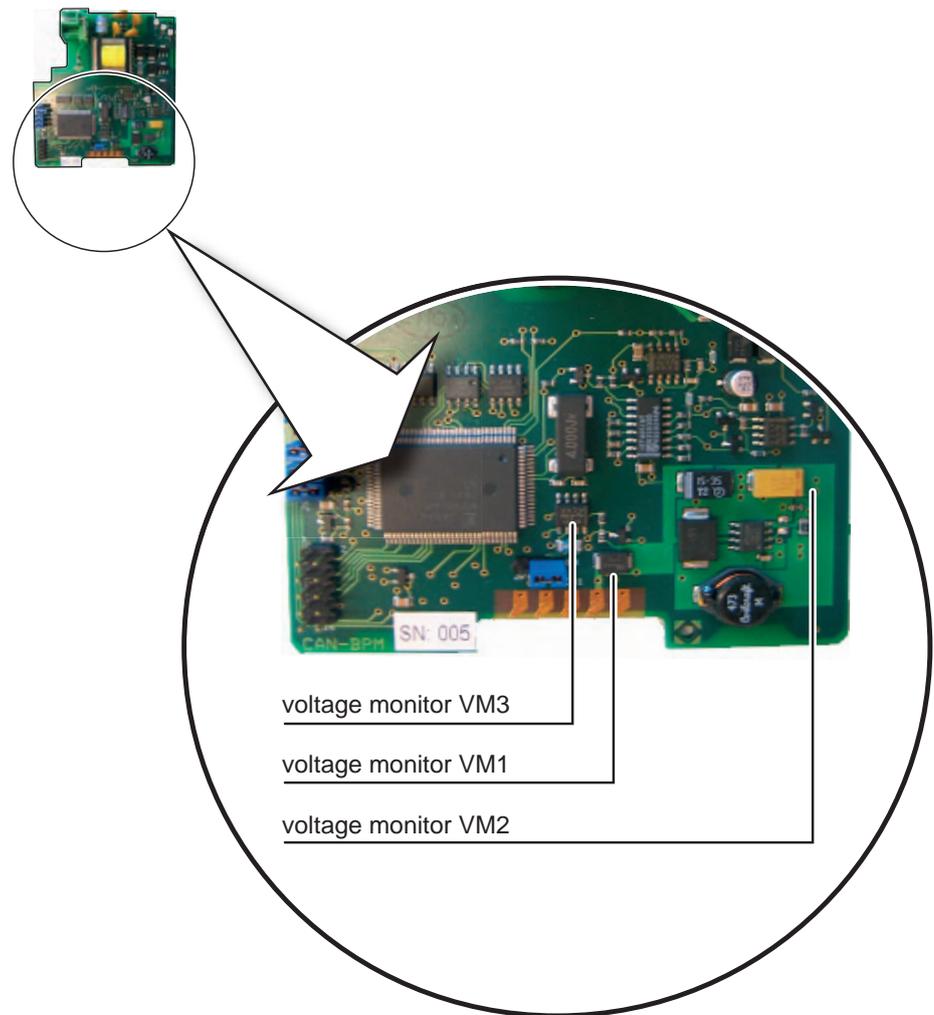


FIGURE 3-3

Locations of the 3 voltage monitors

ESF07-0023

■ **1 temperature sensor**

For the operational PCB, this sensor acts as an input for environmental-temperature diagnostics. The PCB's environmental temperature is taken as a measure for the temperature inside the SmartRadar FlexLine.

3.3 Entities

Information exchange between the various FlexConn modules takes place by means of the so-called *entities*.

An *entity* represents a unique information association within the FlexConn architecture. This information may consist of measuring data, status data, commissioning parameters, diagnostics data, or commands.

In addition to information exchange between FlexConn modules, entities are used for data presentation on the SmartView display, and for the communication between the Engauge service tool and the SmartRadar FlexLine.

The entities are represented by a textual description, for example, “Reset”, “Tank bottom”, “Health”, or “Baudrate”.

The entities’ structure is related to:

- general status information;
- the generic FlexConn part;
- the function-specific FlexConn part.

3.3.1 Status Entities

The “Health” and “Commissioned” entities give information about the general FlexConn module status and the functions implemented on this module.

3.3.1.1 Health Entity

The “Health” entity reflects the condition of the entire module, each single module function, and the calculated or measured value of a sensor function.

The “Health” entity structure is defined by following items:

1. status
2. status category
3. status code

The *status* field gives high-level information:

- good
- uncertain
- bad

Residing one level below, the *status category* informs about the general reason *why* the status is good, uncertain, or bad.

System Architecture

| Status | Status Category |
|-----------|-------------------------------|
| Good | actual |
| | manual |
| | last valid |
| | stored |
| Uncertain | instrument |
| | environment |
| Bad | general hardware fail |
| | general firmware fail |
| | general commissioning fail |
| | general calibration fail |
| | general operational fail |
| | over range (data available!) |
| | under range (data available!) |
| | no data available |
| | un-initialized |
| | killed |

Finally the *status code* informs about the *specific reason* why the status is good, uncertain, or bad. This information is presented as an information number coupled with a textual description of this specific situation. See table below.

| Good | | | | Uncertain | | | | Bad | | | | | | |
|--------|--------|------------|--------|------------|-------------|---------|--------|---------|-------------|------------|---------|---------|----------|-------|
| actual | manual | last valid | stored | instrument | environment | un-init | killed | no data | under range | over range | hw fail | sw fail | cal fail | |
| 001 | 056 | 077 | 104 | 632 | 328 | 207 | 782 | 065 | 478 | 199 | 389 | 011 | 072 | |

- Each **board** implements “health” as generic information based on the function (s) health(s).
- Each **function** implements “health” as generic information.
- Each **sensor** and **digital I/O** function implements an entity called “Primary Value”, which in addition to the actual measured value also contains a “health” status.

3.3.1.2 Commissioned Entity

The “Commissioned” entity informs the end user if the most important commissioning entities of the concerned FlexConn module and its implemented functions are set correctly.

- True = the most important entities are set correctly
- False = the most important entities are **not** set correctly

3.3.2 Generic Entity


The following command entities are implemented as generic functions:

- “Reset device”
- “Reset board”

The following information is available through the entities:

- “Board name” = FlexConn module name
- “Board hardware version” = Hardware version of the FlexConn PCB
- “Firmware version” = Version of the software running on the FlexConn module

De firmware (software) version data is built up according to the format below:

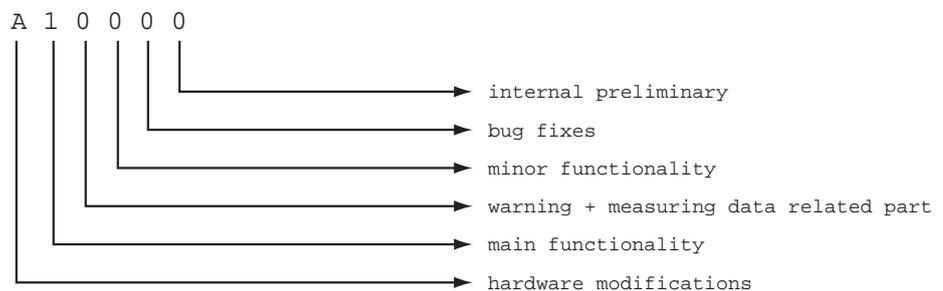

The last digit will not be shown in the official or formal releases.

3.3.3 Function-specific Entities

For the function-specific entities, see *Chapter 6 - Commissioning*.

3.4 SmartView Display

3.4.1 General

By means of the SmartView most of the FlexConn module settings can be controlled.

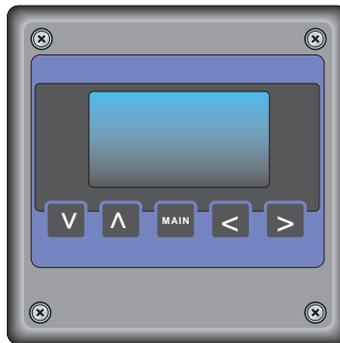


FIGURE 3-4

An impression of the SmartView

ESF07-0024

For each *sensor* and *digital I/O* function implemented on a FlexConn module, a Primary Value screen becomes available on the *SmartView* display.

In the left bottom quarter of the display, the Primary Value's "Health" status is shown:

| Status | Display Text |
|-----------|--------------|
| Good | |
| Uncertain | uncertain |
| Bad | bad |

Below the Status field, the Status category is displayed:

| Status Category | Display Text |
|----------------------------|--------------|
| actual | |
| manual | manual |
| last valid | last valid |
| stored | stored |
| instrument | instrument |
| environment | environment |
| general hardware fail | hardware |
| general firmware fail | software |
| general commissioning fail | commission |
| general calibration fail | calibration |
| general operational fail | operational |

| Status Category | Display Text |
|-------------------|--------------|
| over range | over range |
| under range | under range |
| no data available | no data |
| un-initialized | no init |
| killed | killed |

3.4.2 Status Entities on SmartView

Choosing sub-menu “commissioning” from the main menu, a survey results of all FlexConn modules present in the SmartRadar FlexLine system.

Each module is followed by an indication for the “**H**Health” and the “**C**Commissioned” status respectively. In case of an unreliable or fault situation, the “**I**Information” column shows an information code in addition. This information code reveals the specific reason about the current status.

This diagnostics goes for each individual FlexConn module. See example below.

| | |
|--------|--------------|
| | H C I |
| FII-DO | G N |

- The “Health” indication can be:

“G” = Good

“U” = Uncertain

“B” = Bad

- The “Commissioned” indication can be:

“Y” = the most important entities are set correctly

“N” = the most important entities are **not** set correctly

Starting from the “commissioned” menu and choosing the specific FlexConn module, the above diagnostics is repeated for each module *function*. See example below.

| | |
|--------------------|--------------|
| FII-DO:> | |
| board | H C I |
| Relay 1 | G N |
| Relay 2 | G Y |
| Relay 3 | U Y nnn |
| Relay 4 | B Y |

3.4.3 Generic Entities on SmartView

From the functions survey screen of the concerning FlexConn module, the generic entity commands or the commissioning entity can be selected via the “board” entry.

| | |
|--------------------|--------------|
| FII-DO:> | |
| board | H C I |
| Relay 1 | G N |
| Relay 2 | G Y |
| Relay 3 | U Y nnn |
| Relay 4 | B Y |

3.4.4 Specific Entities on SmartView

Selecting a specific function, for instance, “Relay 2”, gives access to the specific entities for this function.

The specific entities are described in *Chapter 6 - Commissioning*.

3.5 Engauge Service Tool

The Engauge service tool is a PC application with which all FlexConn module settings can be done as well.

By means of the Engauge's explorer, each FlexConn module of the concerned SmartRadar FlexLine system can individually be selected by double-clicking on the module's icon. The so-called "board descriptor" is loaded then resulting in a screen with "tab" pages. By selecting these tab pages, all settings of the specific module are accessible.

See example below.

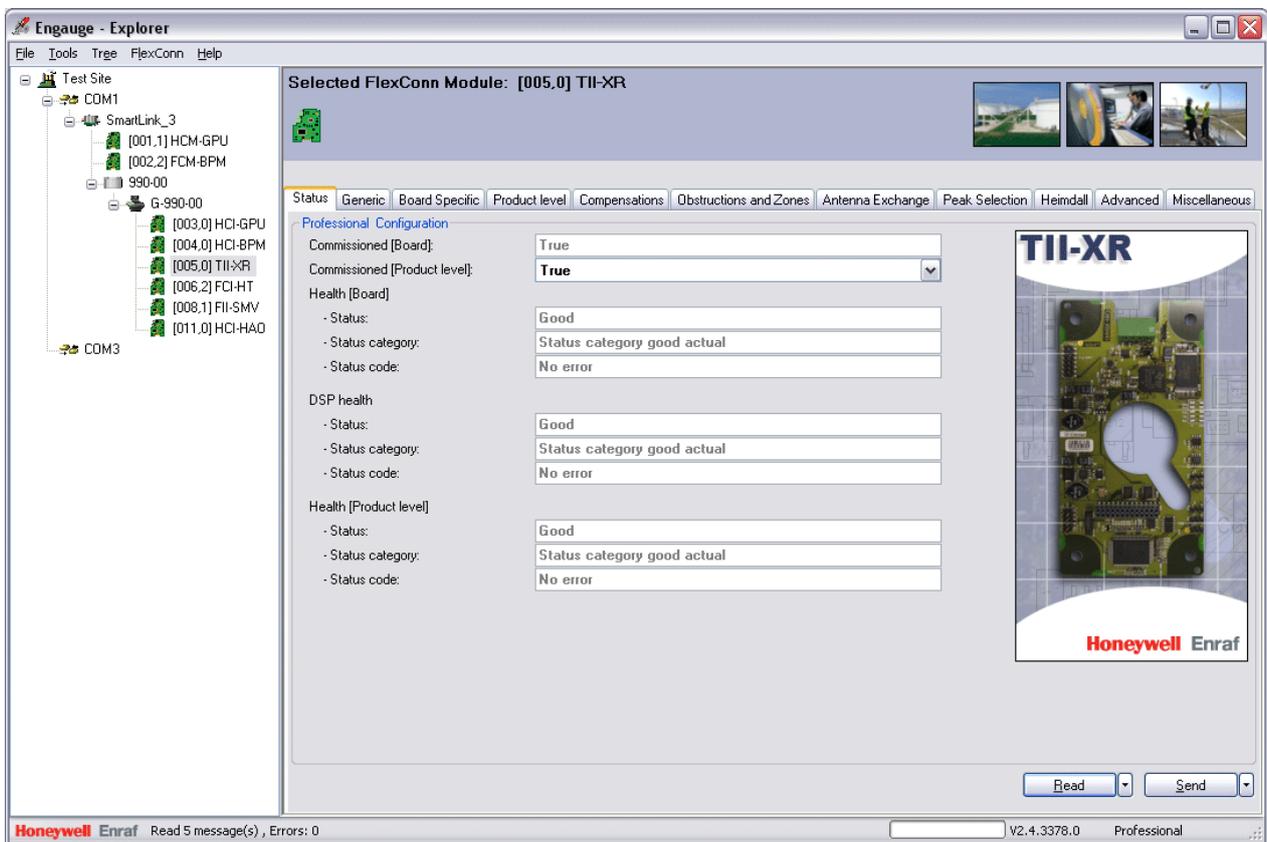


FIGURE 3-5

Example of an Engauge screen

ESF09-0001

3.5.1 Status Entities in Engauge

Each board descriptor user interface starts with the tab page “Status”. On this tab page the “Health” and “Commissioning” entities for the whole module and the individual functions are placed.

3.5.2 Generic Entities in Engauge

The “Status” tab page is always followed by the “Generic” tab page, on which the general commands and diagnostics entities are placed.

3.5.3 Board-specific Entities in Engauge

The “Generic” tab page is always followed by the “Board specific” tab page, on which the board-specific entities are placed. These entities are specific for each individual FlexConn module type. The board-specific entities are further described in *Chapter 6 - Commissioning*.

3.5.4 Specific Entities on Engauge

After the board-specific tab page, for each implemented function on the concerned FlexConn module a specific tab page follows.

For example, for the FII-DO module, the below listed specific tab pages will be present:

- Relay 1
- Relay 2
- Relay3
- Relay 4

In case of complex functions, extra tab pages may exist, containing those specific functions involved.

The specific entities are described in *Chapter 6 - Commissioning*.

3.5.5 Function-generic Entities on Engauge

The function category “generic entities” are placed at the bottom of each function tab page in Engauge.

For each category (sensor, digital I/O, communication, display), the basic Engauge version will have only one entity:

“Function identification”.

With this entity, the user can change the function name, which will then become available on the SmartView Primary Value screen and in Engauge as well.

CHAPTER 4 SERVICE TOOLS

4.1 SmartView

4.1.1 General

The *SmartView* is the basic tool with which the user can communicate with the SmartRadar FlexLine modules.

As normally open keyboard contacts may be dangerous in an explosion-hazardous environment, the *SmartView* is built up as a totally shielded explosion-safe tool.

4.1.2 SmartView Versions

The *SmartView* can be delivered in 3 versions:

- *SmartView* fixed on the instrument
- *SmartView* as a tank-side indicator (stand-alone)
- A portable *SmartView*



fixed on the instrument



as a tank-side indicator



as a portable tool

FIGURE 4-1

The 3 different SmartView options

ESF07-0027

4.1.3 Connections

Within a hazardous environment, connecting or disconnecting electrical equipment is dangerous, because of the sparking risks involved.

The *SmartView* **fixed** versions (integrated within the instrument or tank-side mounted) of course have before installed, fixed connections.

In contrast with standard terminals (e.g. a laptop), the **portable** *SmartView* is designed such that it **may be connected/disconnected within a hazardous zone**.

4.1.4 SmartView Controls

The SmartView has 5 push buttons and an LCD-screen with a backlight that can be switched on/off as desired. By using a menu, most SmartRadar FlexLine control operations can be done.

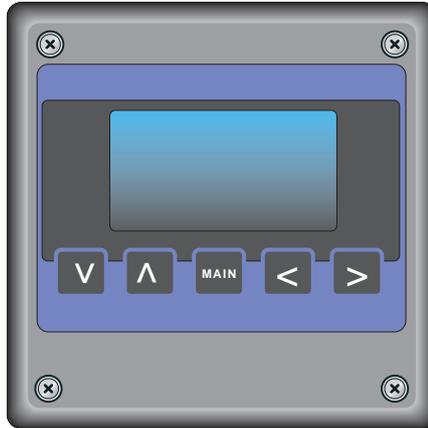


FIGURE 4-2

The SmartView controls

ESF07-0024

The buttons have the following functions:

| Button | Function | |
|---|------------------|--|
|  | PV | Go to next PV screen |
| | Commissioning | Move cursor 1 position to the right |
| | Display contrast | Increase contrast |
| | Backlight | Toggle between ON and OFF |
| | Display settings | Toggle between ON and OFF |
|  | PV | Go to previous PV screen |
| | Commissioning | Leave current menu screen, and go to higher-level menu. <i>Important: Leaving an edit screen this way will undo all editing!</i> |
| | Commands | Leave current menu screen, and go to higher-level menu. |
| | Display contrast | Decrease contrast |
| | Backlight | Toggle between ON and OFF |
| | Display settings | Toggle between ON and OFF |
|  +  | Commissioning | Confirm selected choice |
| | Commands | Confirm selected choice |


Service Tools

| Button | Function | |
|---|---|---|
| | <i>within menu ...</i> | |
|  | Commissioning | Within the <i>menu</i> screens, move cursor 1 line up Within the <i>edit</i> screens, scroll characters as long as the button is pressed |
| | Commands | Move cursor 1 line up |
| | Display settings | Toggle between <i>Main screen</i> and <i>Standby mode</i> |
| | Identification | Go to next identification screen |
|  | Commissioning | Within the <i>menu</i> screens, move cursor 1 line down Within the <i>edit</i> screens, scroll down 1 character |
| | Commands | Move cursor 1 line down |
| | Display settings | Toggle between <i>Main screen</i> and <i>Standby mode</i> |
| | Identification | Go to next identification screen |
|  +  | Show menu | |
|  | Go to PV screen | |
|  +  | Decrease contrast | |
|  +  | Increase contrast | |
|  +  | Standby mode - Pressing any buttons will activate SmartView again | |

4.1.5 SmartView Menu Structure

4.1.5.1 SmartView Screens

Depending on the state of the menu process and the pressed button(s), following screens can be displayed:

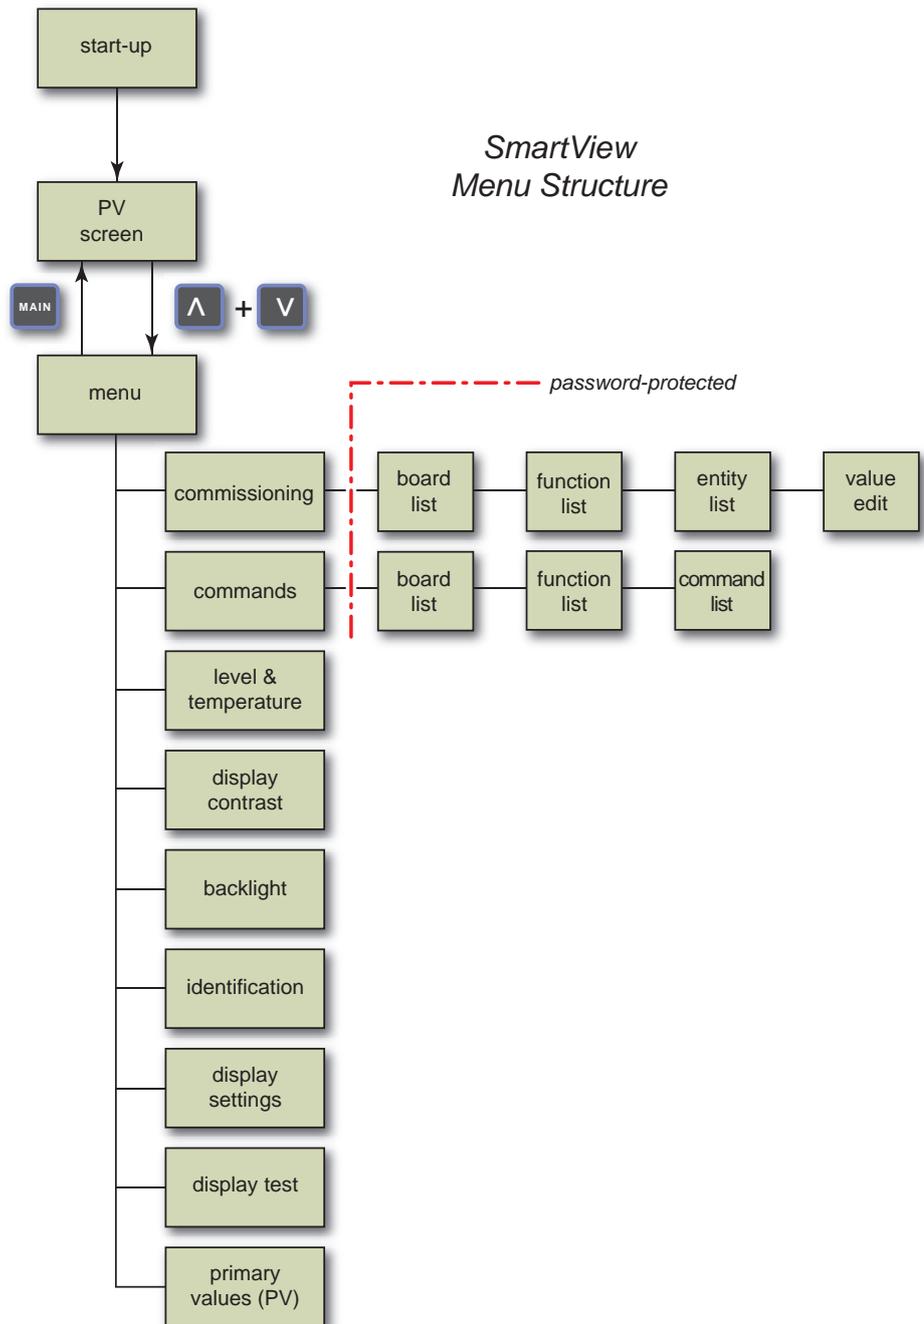

ESF07-0043

4.1.5.1.1 Start-up Screen

The *SmartView* starts up showing:

1. Black test
2. Blank test
3. Enraf logo + software version + tank ID
4. PV screen

4.1.5.1.2 Menu Screen

By using the [menu] screen of the *SmartView* (see FIGURE 4-3) you can view and/or modify settings, or you can send a specific command to a sensor or a digital I/O board.

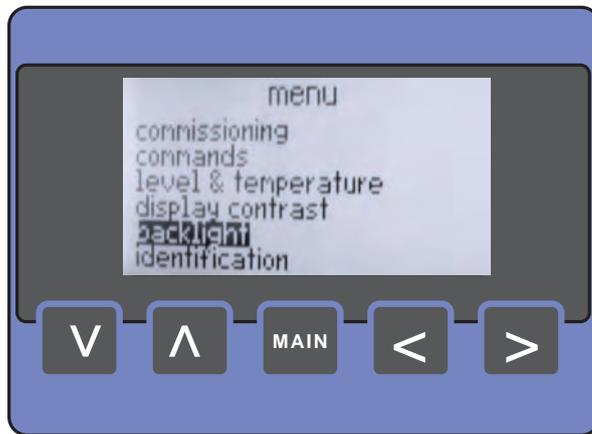


FIGURE 4-3

The menu screen

ESF07-0030

| Menu Item | Description |
|--------------------|--|
| [menu] | Screen title. |
| [commissioning] | Within this menu, configuration parameters can be set |
| [commands] | Allows you to send a command to a sensor or digital I/O board |
| [display contrast] | Allows you to adjust the display contrast |
| [backlight] | Allows you to switch ON or OFF the backlight |
| [identification] | Shows information about: <ul style="list-style-type: none"> • Tank name • Tank address • Customer ID • SmartView software version • SmartView address • FlexConn module name, board ID, board instance, and software version |

| Menu Item | Description |
|-----------------------|--|
| [display settings] | Allows you to switch ON/OFF buttons time-out: <ul style="list-style-type: none"> • Main screen: If no button is pressed within 15 minutes, <i>SmartView</i> switches to PV screen • Standby mode: If no button is pressed within 15 minutes, <i>SmartView</i> switches to standby mode |
| [display test] | Performs blank/black test |
| [level & temperature] | Displays the product level and temperature within one screen |

TABLE 4-1

The menu items

4.1.5.1.3 Backlight Screen

The [backlight] screen (see FIGURE 4-4) allows you to *enable/disable the backlight*. The *SmartView* will only turn the backlight ON if following conditions are met:

- [backlight] is enabled by the host
- [backlight] is enabled by the user

When the left or right button is pressed, the backlight setting immediately changes. The backlight setting is stored in non-volatile memory.

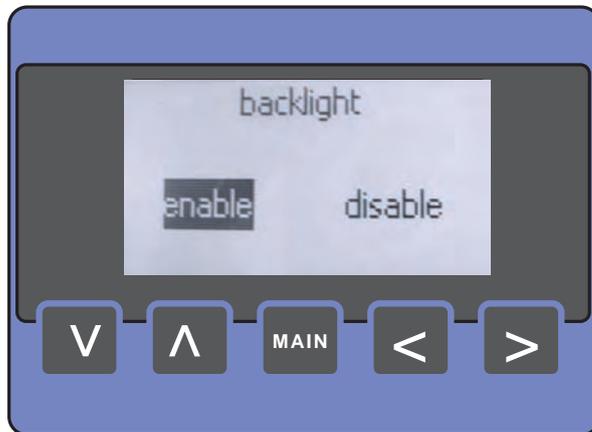


FIGURE 4-4

The backlight screen

ESF07-0031

4.1.5.1.4 Display Contrast Screen

The [display contrast] screen (see FIGURE 4-5) displays a horizontal scroll bar. By moving the scroll bar, you can *adjust the contrast*. Moving to the right immediately increases contrast, moving to the left decreases contrast.

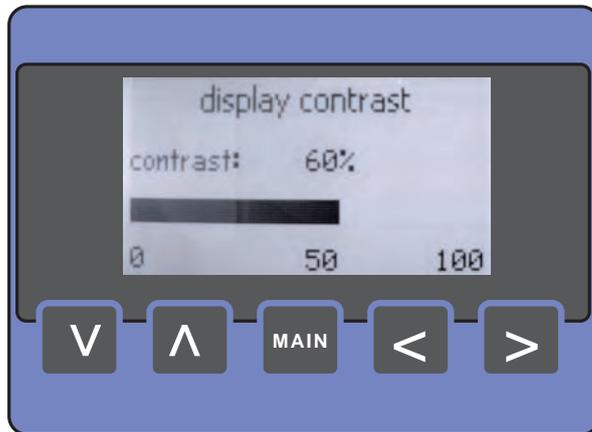


FIGURE 4-5

The display contrast screen

ESF07-0032

4.1.5.1.5 Display Settings Screen

The [display settings] screen allows you to *set the buttons time-outs*. The screen displays the following items:

| Feature | Possible States | Default |
|----------------------------------|-----------------|---------|
| Buttons time-out to main screen | ON/OFF | ON |
| Buttons time-out to standby mode | ON/OFF | ON |

4.1.5.1.6 Display Test Screen

When the [display test] screen is selected, *SmartView* performs a *black/blank test*. *SmartView* begins drawing a rectangle of 64 x 128 pixels, filled with black pixels for a period of 2s. After that, the screen is cleared using a rectangle filled with white pixels for a period of 2s. You can then see if there are dead pixels.

4.1.5.1.7 Identification Screen

The [identification] screen (see examples in FIGURE 4-6) allows you to scroll through the available FlexConn modules, using the up and down buttons, to obtain information about:

- SmartView (see left screen)
 - the tank name
 - the tank address
 - software version
 - SmartView address
 - customer ID
- FlexConn modules (see right screen)
 - board name
 - board ID
 - instance
 - software version

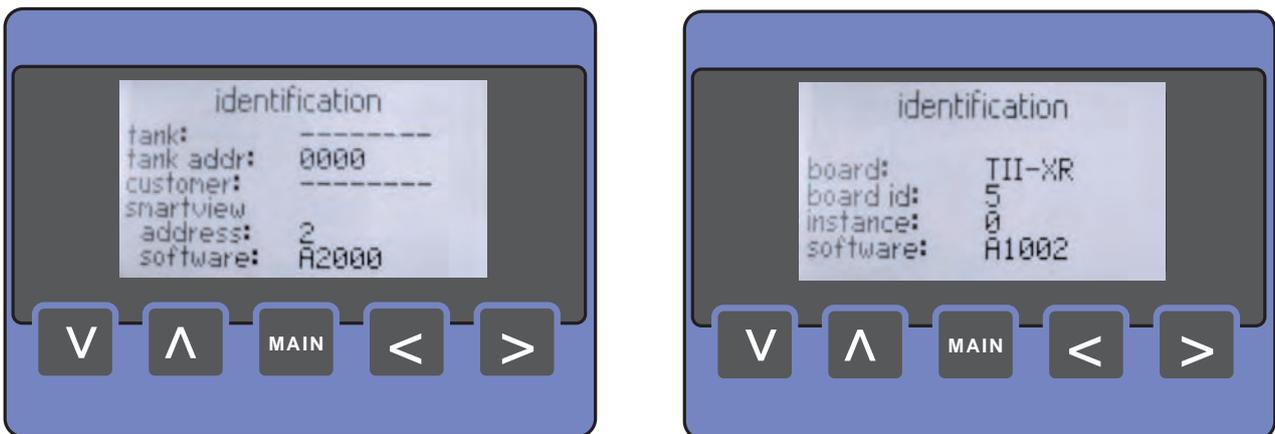


FIGURE 4-6

Identification screen examples

ESF07-0033 + 0029

4.1.5.1.8 Level & Temperature Screen

The [level & temperature] screen (see FIGURE 4-7) shows information about the measured product level and temperature. In this menu mode, it is *not* possible to change any settings.

NOTE: In case of an error situation, the level fields are filled with “#” and the temperature fields with “9”.

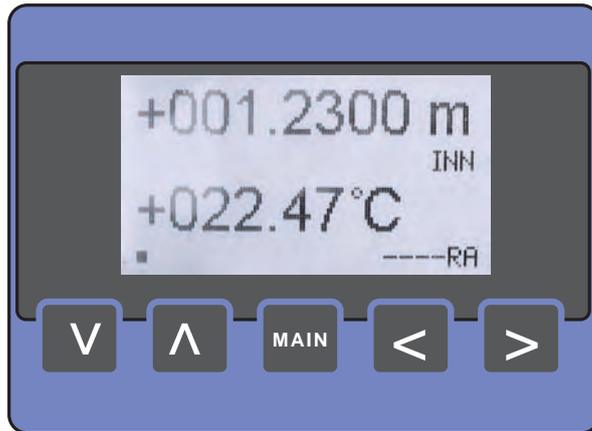


FIGURE 4-7

The level & temperature screen

ESF07-0039

4.1.5.1.9 Primary Value Screen

The [Primary Value] screen (PV-screen), shown in FIGURE 4-8, depicts information about data measured by a sensor, or information about the status of a digital I/O. See table TABLE 4-2.

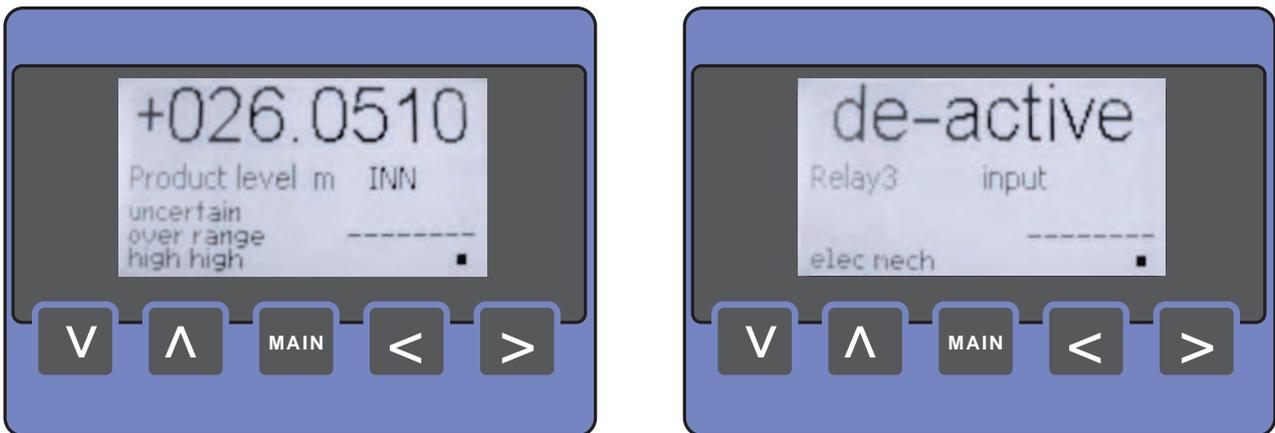


FIGURE 4-8

PV-screen examples (left: level status, right: digital I/O status)

ESF07-0028 + 0044

Service Tools

| Data Field | Max. Size [characters] | Description |
|---------------------|---------------------------|---|
| Primary Value | 9 | The measured value, e.g. +025.1277 |
| PV identification | 13 | Quantity name, e.g. <ul style="list-style-type: none"> • Product level • Product temperature • P1 pressure |
| PV units | 5 | Quantity unit, e.g. <ul style="list-style-type: none"> • m • kg/m³ • kPa |
| PV type | 3 | Type can be: <ul style="list-style-type: none"> • INN (innage) • ULL (ullage) • REL (relative) • ABS (absolute) |
| PV health | 9 | Status of the Primary Value: <ul style="list-style-type: none"> • UNCERTAIN • BAD |
| PV representation | 15 | Representation of the PV: <ul style="list-style-type: none"> • Manual • Last valid • Stored • Instrument • Environment • Hardware • Software • Commission • Calibration • Operational • No data • No init. • Killed • Over range • Under range |
| PV alarms | 9 | Alarm type that occurred: <ul style="list-style-type: none"> • High High • High • Low • Low Low |
| Tank identification | 8 | Tank name, e.g. CRUDE 07 |
| Alive indicator | 1 | Blinking cursor (bottom right) indicates PV being updated |

TABLE 4-2

Primary Value (PV) items

- REMARKS:
1. In error situation, the data fields are filled with “#”.
 2. *SmartView* will enter standby mode when the communication with the host is lost.
 3. The data fields PV health, PV representation, and PV alarms are only visible if they are applicable.

4.1.5.1.10 Password Screen

The [commands] and [commissioning] menus are password-protected. The [password] screen (see FIGURE 4-9) appears when you enter the [commands] or the [commissioning] menu.

Once the password is entered correctly (only once will do for both menu entries), you can change the values. 15 minutes after the last button was pressed, the password needs to be re-entered.

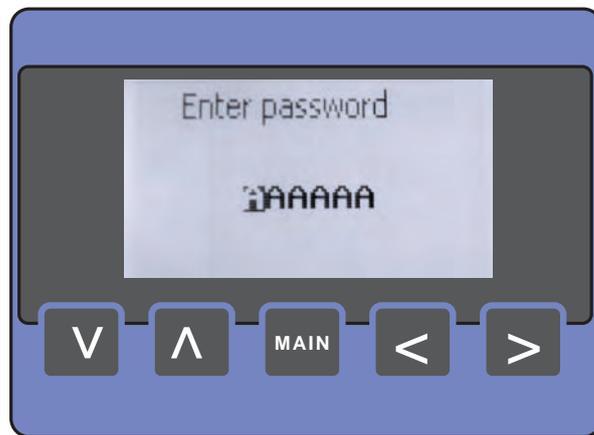


FIGURE 4-9

The password screen

ESF07-0040

4.1.5.1.11 **Commands Menu Screens**

- The [\[commands\]](#) menu starts with the [\[board list\]](#) screen (see FIGURE 4-10).

You can *navigate through the board list* by using the up and down buttons. A board can be selected by simultaneously pressing the left + right button.

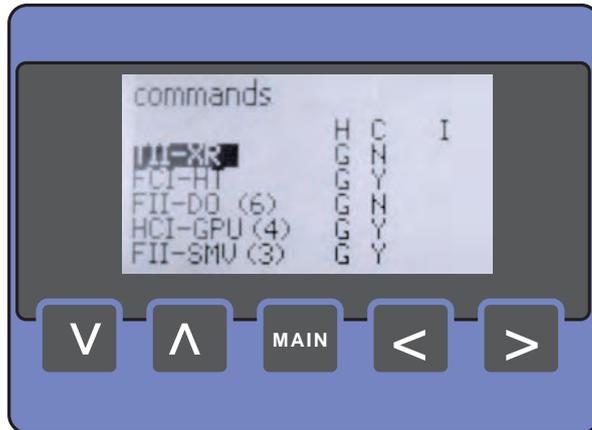


FIGURE 4-10

The board list screen

ESF07-0034

- The [\[function list\]](#) screen (see FIGURE 4-11) shows all *available functions* of the previously selected board. You can navigate through the function list by using the up and down buttons. You can return to the [\[board list\]](#) screen by pressing the left button. A function can be selected by simultaneously pressing the left + right button. If a FlexConn module does *not* contain any function commands, this will be indicated in the list ([<no cmd>](#)).

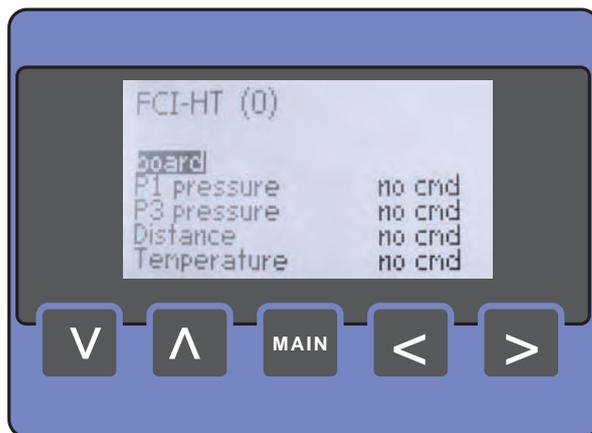


FIGURE 4-11

The function list screen

ESF07-0045

- On selection of an available function, the [\[command list\]](#) screen is presented (see FIGURE 4-12). You can navigate through the

function list by using the up or down button. A command can be selected by simultaneously pressing the left + right button. You can return to the [function list] screen by pressing the left button.

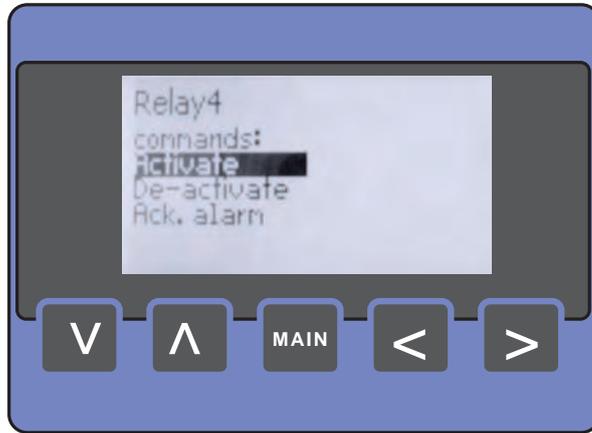


FIGURE 4-12

The command list screen

ESF07-0035

4.1.5.1.12 Commissioning Menu Screen

- The [commissioning] menu starts with the [board list] screen (see FIGURE 4-13).

You can *navigate through the board list* by using the up or down button. A board can be selected by simultaneously pressing the left + right button.

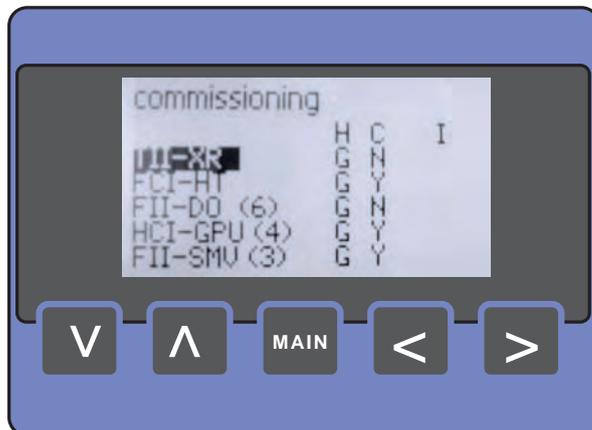


FIGURE 4-13

The board list screen (commissioning)

ESF07-0036

- The [\[function list\]](#) screen (see FIGURE 4-14) displays all configurable entities of a function. The actual entity value is visible as well. You can *navigate through the board list* by using the up or down button. A function can be selected by simultaneously pressing the left + right button. You can return to the [\[board list\]](#) screen by pressing the left button.

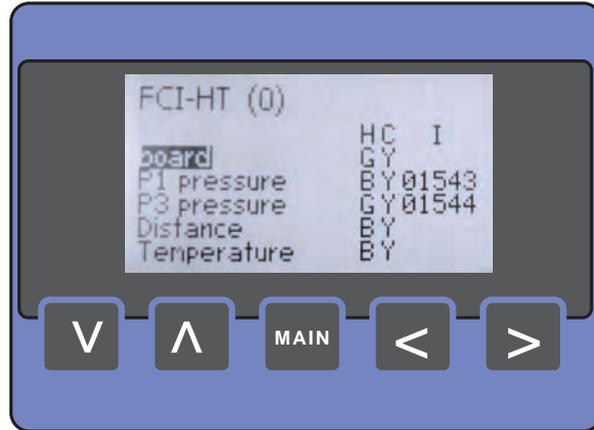


FIGURE 4-14

The function list screen (commissioning)

ESF07-0046

- On selection of an available function, the [\[entity list\]](#) screen is presented (see FIGURE 4-15). You can *navigate through the entity list* by using the up or down button. An entity can be selected by simultaneously pressing the left + right button. You can return to the [\[function list\]](#) screen by pressing the left button.

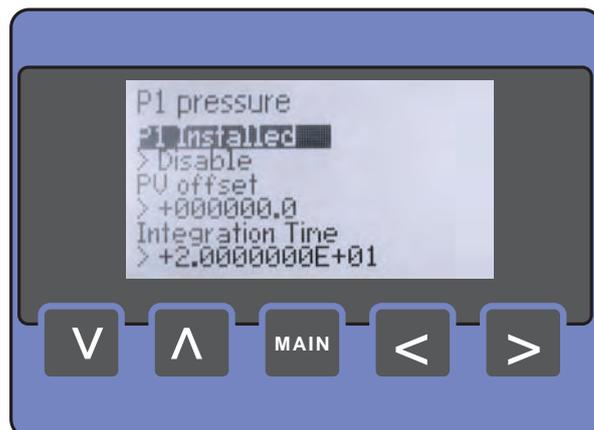


FIGURE 4-15

The entity list screen

ESF07-0047

- On selection of an available entity, the [value edit] screen is presented (see FIGURE 4-16).
 - If an *invalid* value is entered, the message “value out of range” will be displayed.
 - If the value is *not accepted* by the FlexConn module, the message “value not accepted” will be displayed.
 - You can scroll along the characters by push and hold the up button.
 - An entity modification is only executed on simultaneously pressing the left + right button. After this, first a range check is done. If the modification is accepted, you will be returned to the [value edit] screen.
 - The cursor can be shift to the right by pressing the right button.
 - You can return to the [entity list] screen by pressing the left button.

*NOTE: By using the left button to return to the [entity list] screen **without executing** the modification(s) by pressing the left + right button simultaneously will undo this (these) modification(s)!*

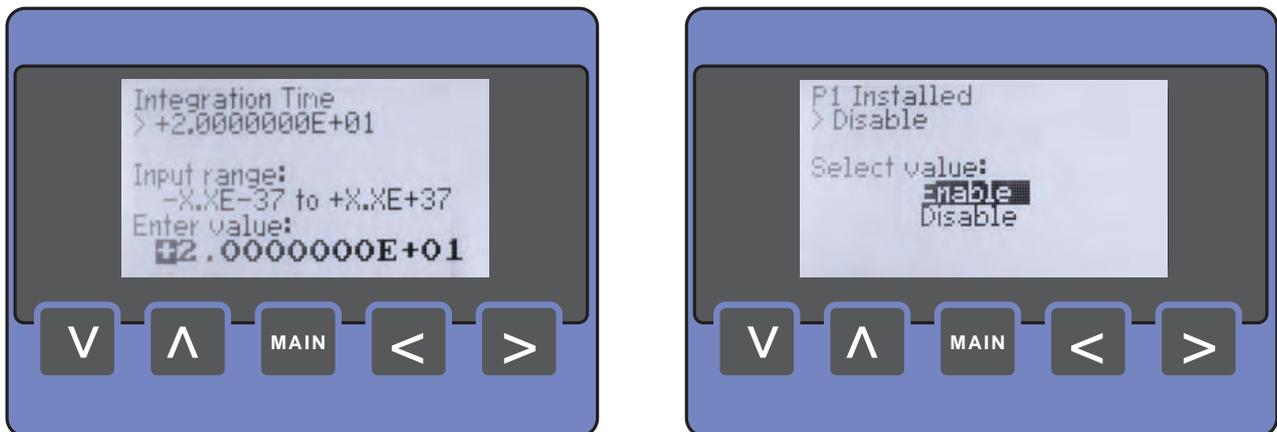


FIGURE 4-16

Examples of the value edit screen

ESF07-0037

4.2 Engauge

4.2.1 Connecting the Engauge Service Tool

The *Engauge* service tool is a PC application with which all FlexConn module settings can be done as well. Connecting the serial COM-port of a PC or laptop via an RS-232 (or RS-485) transmission line to either a Communication Interface Unit (CIU) or a SmartLink, enables the control of a SmartRadar FlexLine system.

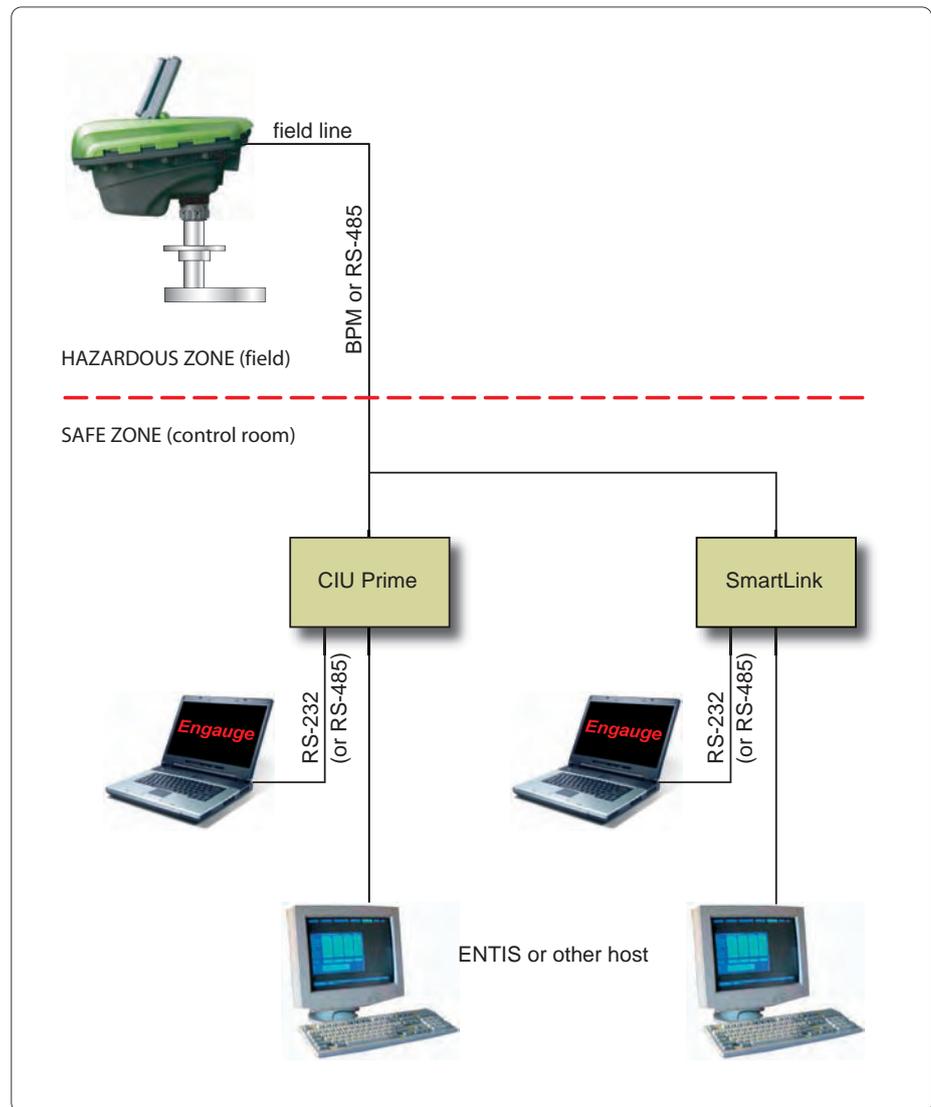


FIGURE 4-17

Connecting the *Engauge* service tool

ESF07-0041

4.2.2 Using Engauge

After starting up the *Engauge* application, first the specific transmission address of the concerned SmartRadar FlexLine system must be set correctly. Also the transmission speed (baudrate) must be set.

After this is done, *Engauge's* explorer appears, and each FlexConn module of the concerned SmartRadar FlexLine system is visible on the left panel. See FIGURE 4-18.

Now each individual SmartRadar FlexLine module can be controlled by double-clicking on the module's icon on the left panel. The so-called "board descriptor" is then loaded and a screen with "tab" pages appears.

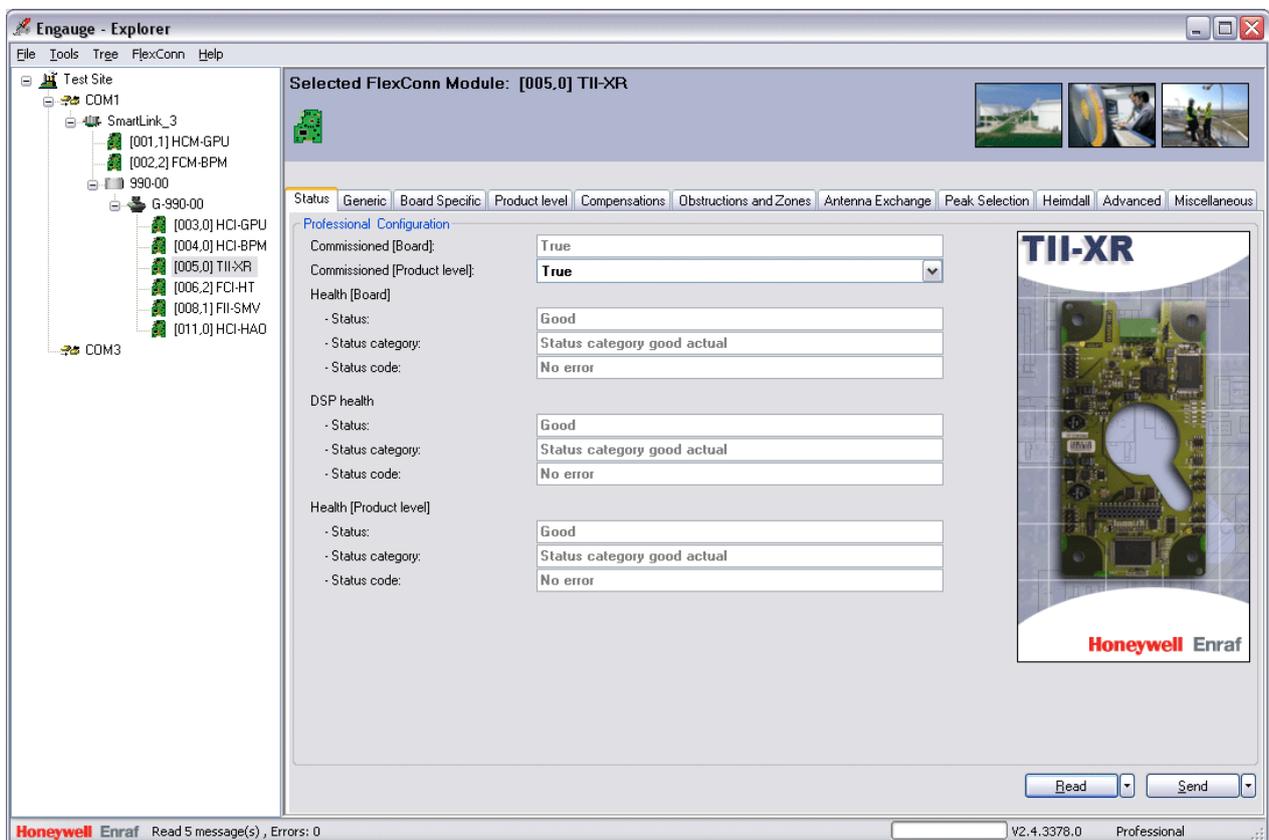


FIGURE 4-18

Example (1) of an *Engauge* screen

ESF09-0001

Browsing through the tab pages reveals the same information/parameter settings as can be found using the *SmartView*, although in a more user friendly way.

However, some settings or commands can only be executed by *Engauge*. For example, executing an Alarm simulation test is only possible with *Engauge*.

4.2.3 Some Engauge Screen Examples

In the following some *Engauge* screen samples follow.

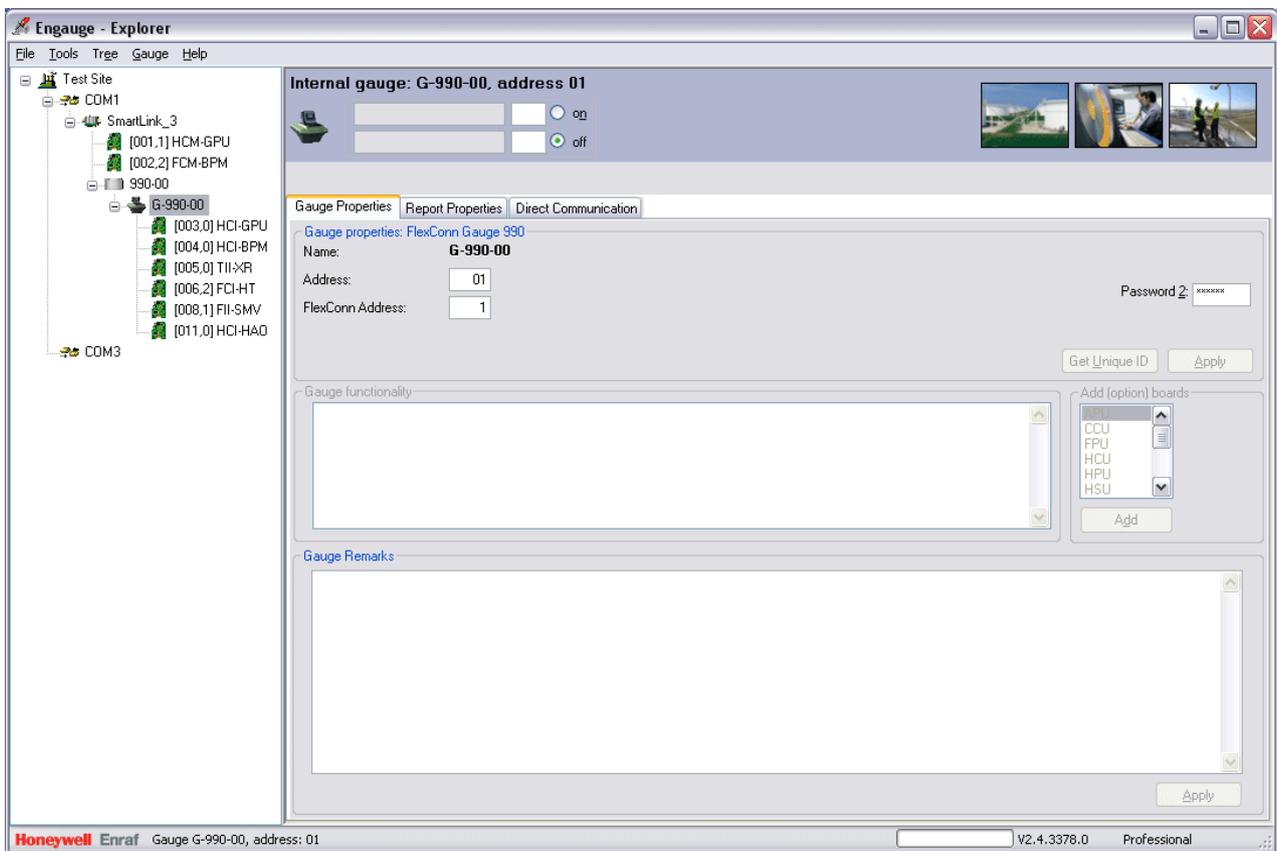


FIGURE 4-19

Example (2) of an *Engauge* screen

ESF09-0002

Service Tools

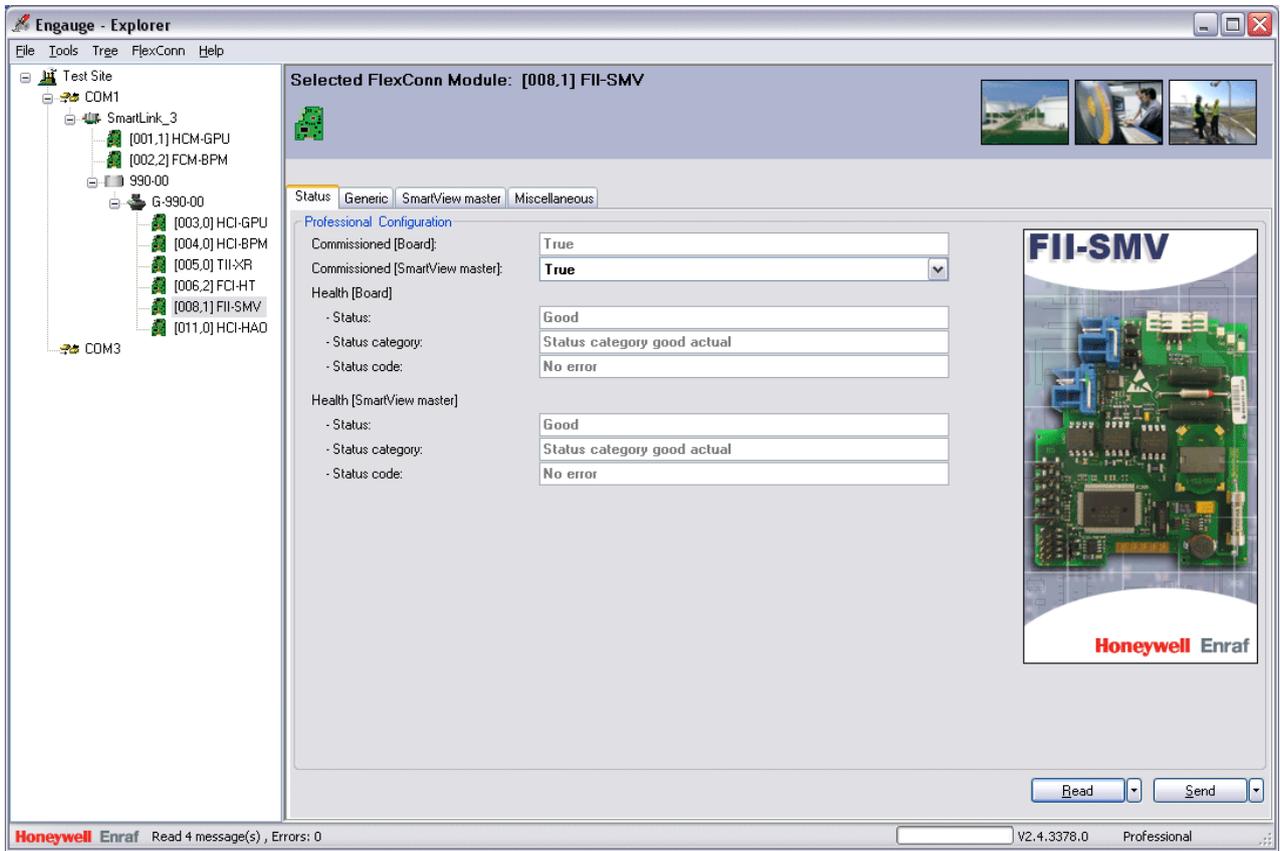


FIGURE 4-20

Example (3) of an Engauge screen

ESF09-0003

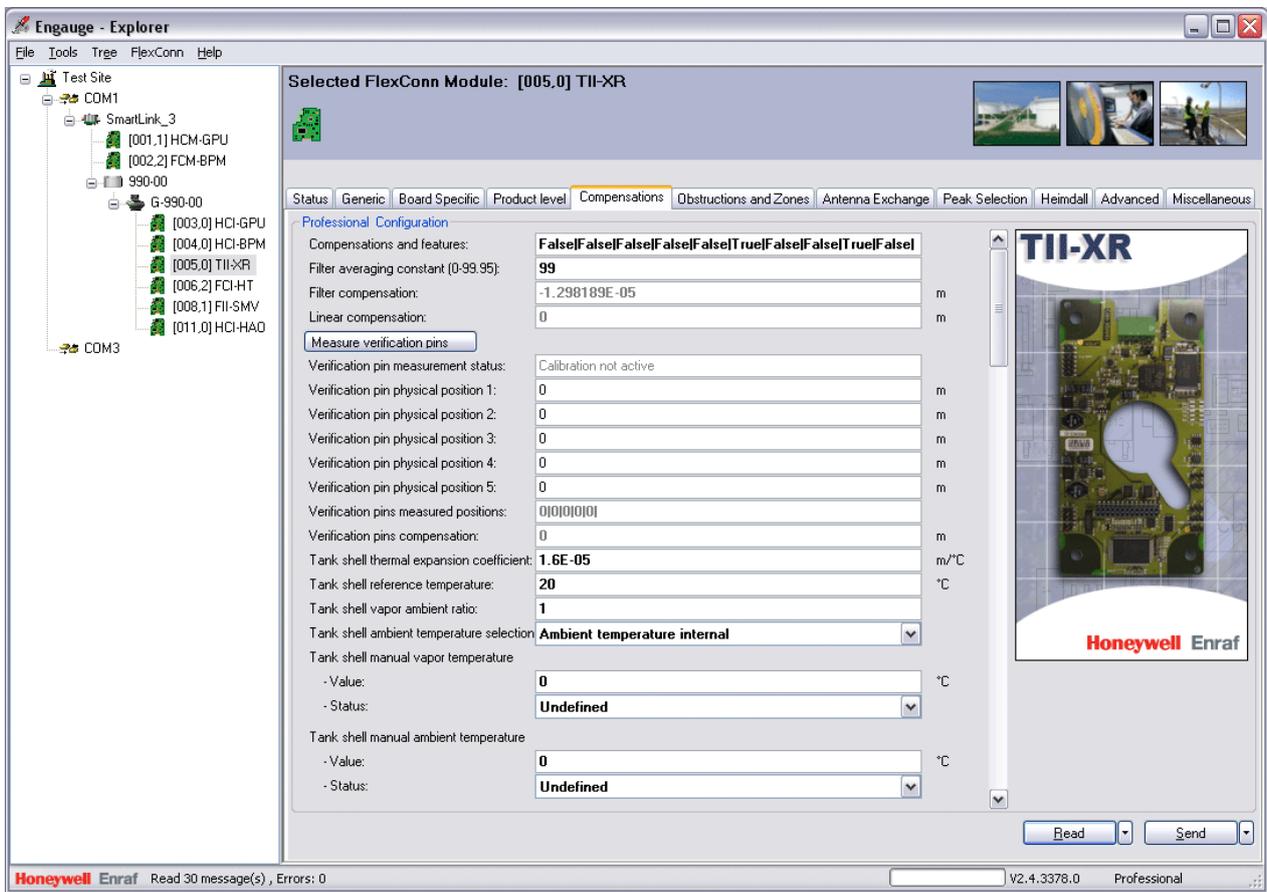


FIGURE 4-21

Example (4) of an Engauge screen

ESF09-0004

CHAPTER 5 INSTALLATION CHECK



Before starting with commissioning activities, first **make sure all mechanical and electrical installation aspects have been completed correctly.**

See the *Installation Guide* for the SmartRadar FlexLine.

Installation Check

CHAPTER 6 COMMISSIONING

6.1 General

6.1.1 Introduction

This chapter gives an overview of the *commissioning* information per FlexConn module.

NOTE: *Not all modules are always present.*

Commissioning of a FlexConn module is done by setting software parameters, the so-called *entities* (see Chapter 3), to the desired specific values. This can either be done by using *Engauge* or *SmartView* (see Chapter 4).

6.1.2 Text Conventions

In contrast with explanatory text, all *instruction* text will be preceded by a .

Engauge
SmartView

In this chapter, each *commissioning-instruction* text is recognizable by the *Engauge/SmartView icon* in the margin.

When a commissioning instruction or command *cannot* be initiated by *SmartView*, the  icon will be given.

All [Entity] and <entity-related> text is recognizable formatted. When - for instance - all required FlexConn module entities are commissioned, the [Board Commissioned] entity will display <True>. If not, it will display <False>.

All !Command! text is also recognizable formatted, If - for instance - an !Activate! command is given, the result will be <Activated>.

6.2 Enraf Fieldbus (HCI-BPM)

6.2.1 Introduction

The Host Communication Instrument - Bi-Phase Mark (HCI-BPM) board is a communication module for the instrument (gauge).

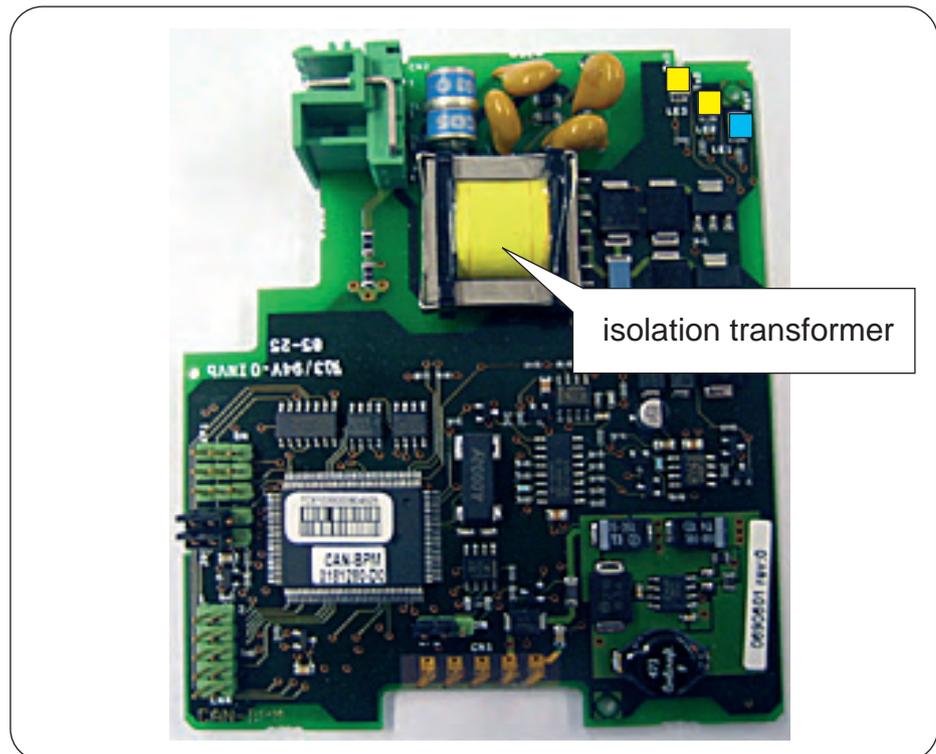


FIGURE 6-1

The HCI-BPM board with its isolation transformer

ESF07-0005

As a result of hardly any requirements on cable quality, the connection of 10 to 15 devices per field bus, and cable lengths up to 10 km, the Bi-Phase Mark (BPM) signalling is used in many data transmission installations between various instrumentation and Communication Interface Unit (CIU) configurations.

Moreover, the BPM technology provides excellent protection against lightning. For the exchange of the BPM signals, the HCI-BPM board uses an isolation transformer for galvanic isolation (see FIGURE 6-1). Further protection against heavy lightning is realized by internal ground shields, separated wiring, and ground tracks.

Commissioning

The HCI-BPM module supports 2 protocols:

- The Enraf GPU protocol with its records and items (limited);
- The Enraf FlexConn protocol with its so-called entities.

The module can communicate with:

- 880 CIU prime
- 858 CIU
- 780 SmartLink

6.2.2 Commissioning the HCI-BPM

For a correct functioning of the HCI-BPM module within an instrument (gauge), the following entities can be set by using either *Engauge* or *SmartView*.

☛ By using the following table, check each entity for correctness.

Engauge

SmartView

| Name | Value Range | Default Value | Explanation |
|--|---|---------------|---|
| [Baudrate] | <1200> <2400> <4800> | <1200> | Communication speed |
| [BPM sensitivity]  | <1..8> | <8> | The sensitivity of the receiver circuit 1 = weakest 8 = strongest |
| [Identification] | 8 characters e.g. <TANK1234> | <-----> | Name of a tank or instrument |
| [GPU instrument address] | <0..99> | <0> | The address of this instrument for GPU messages. Note: Each instrument must have a unique GPU address. |
| [FlexConn instrument address] | <0..1899> | <0> | The address of this instrument for FlexConn messages. Note: Each instrument must have a unique FlexConn address. |
| [Level units] | <metres> <inches> <feet> <fractions> | <metres> | The unit in which level-related GPU records and items are shown |

Commissioning

| Name | Value Range | Default Value | Explanation |
|--|---|---------------|---|
| [Temperature units] | <celsius> <fahrenheit> | <celsius> | The unit in which temperature-related GPU records and items are shown |
| [Pressure units] | <pascal> <kilo pascal> <psi small> (2 digits before separator) <psi large> (3 digits before separator) | <pascal> | The unit in which pressure-related GPU records and items are shown |
| [Density units] | <kilogram m3> <degrees API> <pounds ft3> | <kilogram m3> | The unit in which density-related GPU records and items are shown |
| [Decimal separator] | <point> <comma> | <point> | The decimal separator in which GPU-related records and items are shown |
| [Level type] | <innage> <ullage> | <innage> | The level-related GPU records and items can be shown as an innage or ullage. Note: <ul style="list-style-type: none"> <i>Innage</i> is the level of the product measured from the bottom. <i>Ullage</i> is the level of free space from the roof till the product. |
| [Password] | <.....> 6 characters | <ENRAF2> | Password for entering the protected level. Note: Some settings reside under the protected level. |
| [Function identification]  | <.....> 13 characters | <BPM-slave> | The name of the current function of this module. This name is visible on the <i>SmartView</i> display. |

Engauge
SmartView

- ☛ After having checked/set all before listed entities, make sure
 - the [Board Commissioned] and the [BPM slave Commissioned] entities are <True>;
 - the [Board Health] and the [BPM slave Health] entities are <GOOD>.

6.3 Enraf GPU Protocol (HCI-GPU)

6.3.1 Introduction

The Host Communication Instrument - Gauge Processing Unit (HCI-GPU) board is a communication module for the instrument (gauge).

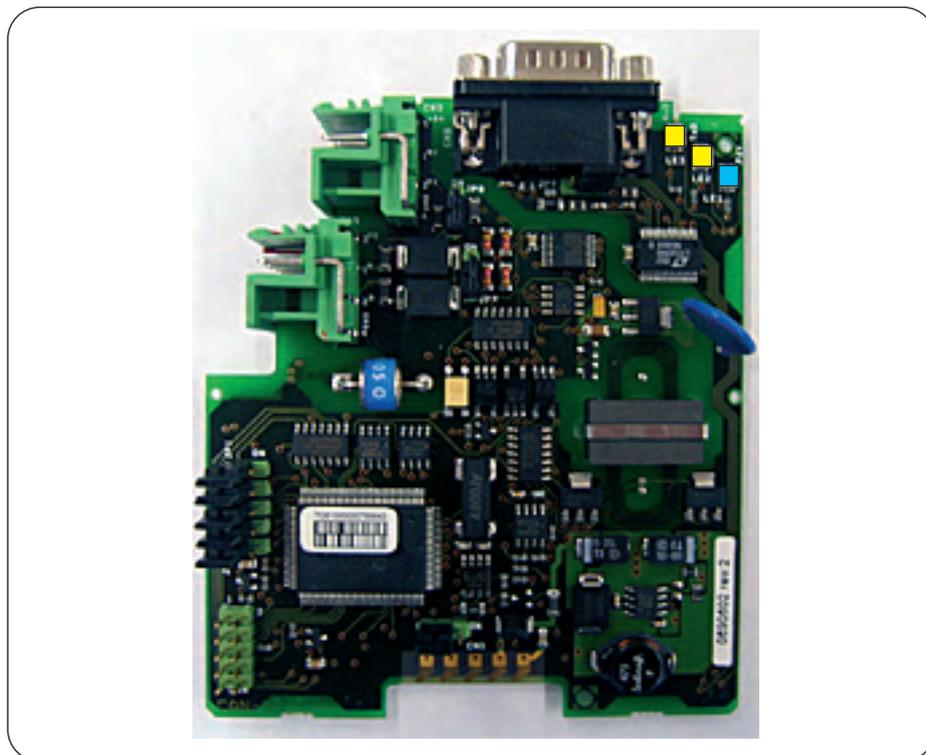


FIGURE 6-2

The HCI-GPU board

ESF07-0006

The HCI-GPU module supports 2 protocols:

- The Enraf GPU protocol with its records and items (limited);
- The Enraf FlexConn protocol with its so-called entities.

The module can communicate with any hosts that support the above mentioned protocols. *Example:* diagnostic tools.

The physical layers for the communication are RS-232, isolated and non-isolated, and RS-485, isolated.

RS-232 is used for direct point-to-point connections whereas RS-485 facilitates a multi-point network with up to 32 drivers and 32 receivers.

The HCI-GPU (slave) module can be used in any field device provided with the FlexConn architecture.

Commissioning

6.3.2 Commissioning the HCI-GPU

For a correct functioning of the HCI-GPU module within an instrument (gauge), the following entities can be set by using either *Engauge* or *SmartView*.

☛ By using the following table, check each entity for correctness.

Engauge

SmartView

| Name | Value Range | Default Value | Explanation |
|---|---|---------------|---|
| [Baudrate] | <1200> <2400> <4800> <9600> <19200> <38400> | <38400> | Communication speed |
| [Turn around delay]  | <0..2000 ms> | <0 ms> | The turnaround delay is a certain time the HCI-GPU waits, before it answers the host. |
| [Identification] | 8 characters e.g. <TANK1234> | <-----> | Name of a tank or instrument |
| [GPU instrument address] | <0..99> | <0> | The address of this instrument for GPU messages. Note: Each instrument must have a unique GPU address. |
| [FlexConn instrument address] | <0..1899> | <0> | The address of this instrument for FlexConn messages. Note: Each instrument must have a unique FlexConn address. |
| [Level units] | <metres> <inches> <feet> <fractions> | <metres> | The unit in which level-related GPU records and items are shown |
| [Temperature units] | <celsius> <fahrenheit> | <celsius> | The unit in which temperature-related GPU records and items are shown |
| [Pressure units] | <pascal> <kilo pascal> <psi small> (2 digits before separator) <psi large> (3 digits before separator) | <pascal> | The unit in which pressure-related GPU records and items are shown |

Commissioning

| Name | Value Range | Default Value | Explanation |
|--|---|-----------------|--|
| [Density units] | <kilogram m3> <degrees API> <pounds ft3> | <kilogram m3> | The unit in which density-related GPU records and items are shown |
| [Decimal separator] | <point> <comma> | <point> | The decimal separator in which GPU-related records and items are shown |
| [Level type] | <innage> <ullage> | <innage> | The level-related GPU records and items can be shown as an innage or ullage. Note: <ul style="list-style-type: none"> <i>Innage</i> is the level of the product measured from the bottom. <i>Ullage</i> is the level of free space from the roof till the product. |
| [Password] | <.....> 6 characters | <ENRAF2> | Password for entering the protected level. Note: Some settings reside under the protected level. |
| [Communication type]  | <comm ni RS232> <comm iso RS232> <comm iso RS485> | <comm ni RS232> | Communication type |
| [Function identification]  | <.....> 13 characters | <GPU-slave> | The name of the current function of this module. This name is visible on the <i>SmartView</i> display. |

Engauge
SmartView

- ☛ After having checked/set all before listed entities, make sure
 - the [Board Commissioned] and the [GPU slave Commissioned] entities are <True>;
 - the [Board Health] and the [GPU slave Health] entities are <GOOD>.

6.4 Product Level Measurement (TII-XR)

6.4.1 Introduction

The Transducer Interface Instrument - X-Band Radar (TII-XR) - is the heart of Enraf's precision X-band (10 GHz) radar system.

It uses the Frequency Modulated Continuous Wave (FMCW) and synthesized pulse reflection principle. Using Enhanced Performance Signal processing (EPS), a smart level detection is possible by filtering out known obstacles.

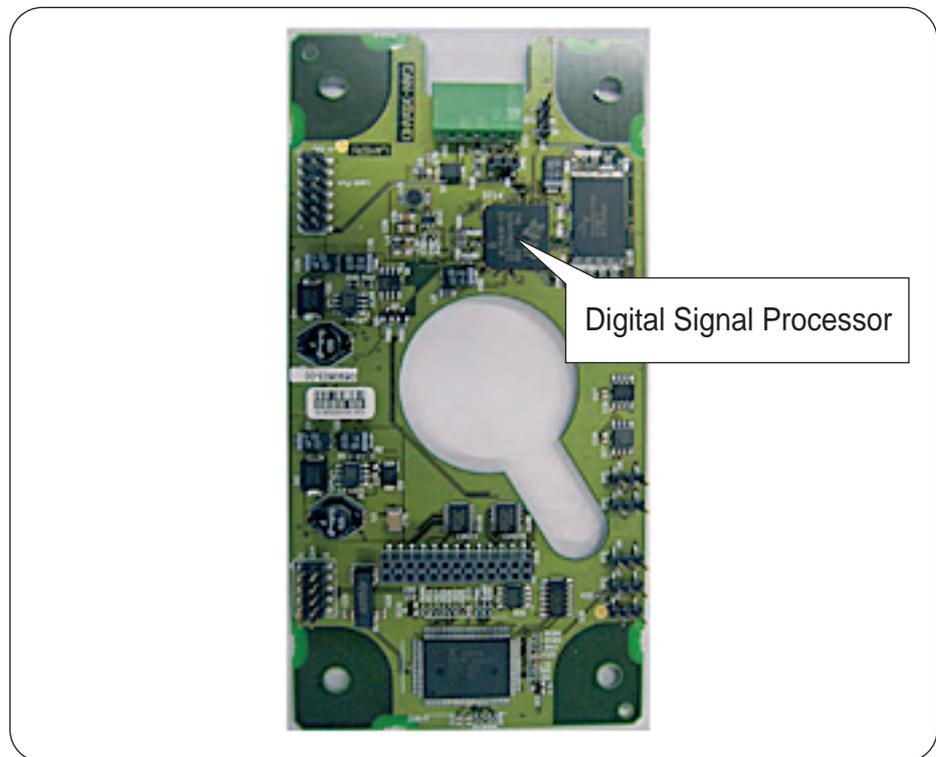


FIGURE 6-3

The TII-XR board with its Digital Signal Processor

ESF07-0007

Housed within an explosion-proof, RF-shielded compartment - which also contains a number of other FlexLine modules - and together with a planar radar antenna, it forms the SmartRadar FlexLine system.

6.4.2 Basic Commissioning

6.4.2.1 General

In general the user is interested in the tank's product *volume*. To calculate this volume, the primary input is the product *level* within the tank. This level is measured by the radar.

Commissioning

For correct measuring results, a number of parameters such as [Tank bottom position], [Upper reference position], and [Offset to roof] must be defined before.

In addition, alarm settings and compensation (filtering) constants are to be set.

This can be done by using either *Engauge* or *SmartView*.

6.4.2.2 Level Start-Up

For entity definitions, see FIGURE 6-4 and FIGURE 6-5.

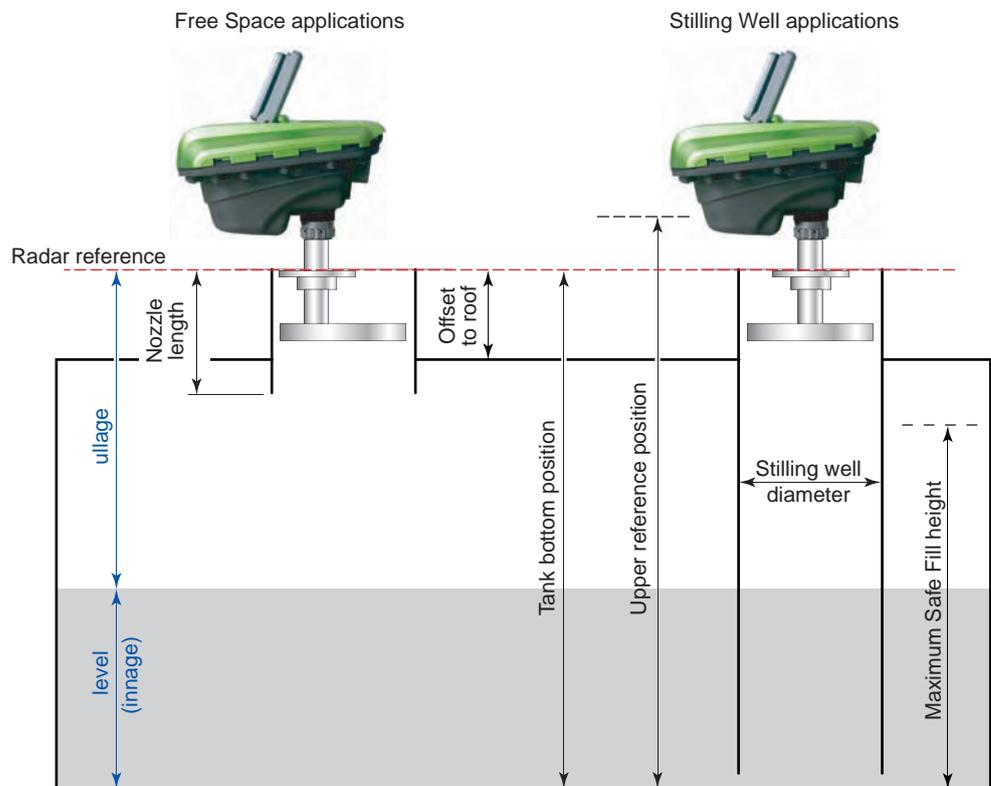


FIGURE 6-4

Basic commissioning entities

ESF07-0008

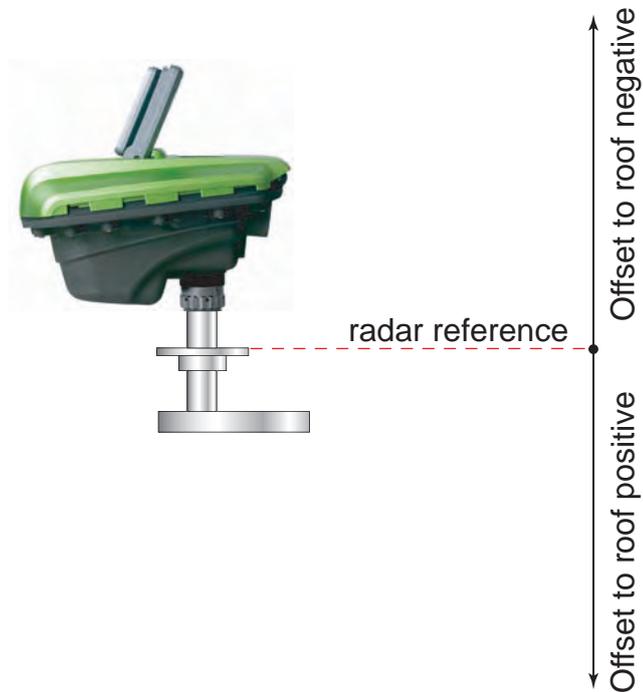


FIGURE 6-5

Definition of [\[Offset to roof\]](#)

ESF07-0011

*Engauge
SmartView*

- ☛ To get the radar gauge level without any compensations enabled (but with averaging filter and maximum Safe fill warnings enabled), program the entities listed in the tables below.
- ☛ For a *Free space* application, program following entities:

| Entity Name | Explanation |
|--|---|
| [Tank bottom position] | The gauge uses this information to calculate the level (innage), and to determine the position of the bottom reflection (part of peak selection). |
| [Maximum Safe fill] | With this entity the gauge checks if the programmed upper measuring range is valid ([Minimum measurable distance] at least $<0.5\text{ m}>$ from the antenna). |
| [Upper reference position] | This entity is only used if "ullage" is to be read from the SmartRadar FlexLine. The ullage is then calculated from the measured level (innage) as [Upper reference position] -measured level. |
| [Offset to roof] | The distance between radar reference and the tank roof. The gauge uses this information to determine the position of the echoes caused by the product and the roof. A positive value means the roof is below radar reference (see also FIGURE 6-5). |

Commissioning

| Entity Name | Explanation |
|-----------------|---|
| [Nozzle length] | Needs only to be set if the antenna is installed inside the nozzle. |

☛ For a *Stilling well* application, program following entities:

| Entity Name | Explanation |
|----------------------------|---|
| [Tank bottom position] | The gauge uses this information to calculate the level (innage), and to determine the position of the bottom reflection (part of peak selection). |
| [Maximum Safe fill] | With this entity the gauge checks if the programmed upper measuring range is valid ([Minimum measurable distance] at least <0.5 m> from the antenna). |
| [Upper reference position] | This entity is only used if “ullage” is to be read from the SmartRadar FlexLine. The ullage is then calculated from the measured level (innage) as [Upper reference position]-measured level. |
| [Stilling well diameter] | The inner diameter of the stilling well |

6.4.2.3 Level Check

With the [Accept reference] command, the gauge’s innage or ullage value is initialized in accordance with the before programmed reference data. From here the gauge will follow all relative level changes.

This command will only be accepted if the product level is <GOOD>.

This command also puts the SmartRadar FlexLine in accurate level measurement mode, so this command **MUST** be given!

The [Accept reference] command can handle either a reference *innage* or a reference *ullage* level. To adjust to an innage level fill in entity [Reference innage], to adjust to an ullage level fill in entity [Reference ullage]. This level value is mostly obtained by a manual level measurement (hand dip); see FIGURE 6-6.

When all values are sent to the SmartRadar FlexLine, the [Accept reference] command can be given.

When an innage or ullage reference value is not available, the [Accept reference] command must be given without filling any of these entities. The SmartRadar FlexLine will now be put into accurate level measurement mode.

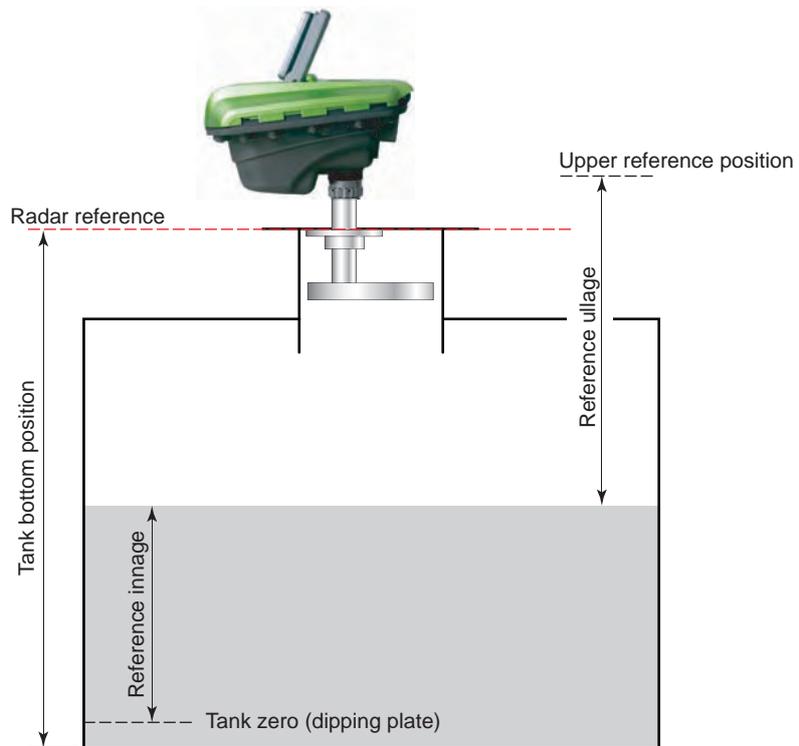


FIGURE 6-6

Level check entities

ESF07-0009

NOTE: This command does not adjust the [Tank bottom position], so this entity should be set manually to approximately the correct value (within ± 0.1 m).

Engauge
SmartView

- ☛ Give the [Accept reference] command.
- ☛ Make sure the [Accept reference status] is <GOOD>.

Some remarks for the *Engauge* users:

- To make sure the [Accept reference] command works fine, all entities must have been sent to the gauge (no yellow backgrounds may be visible) prior to giving the command.
- ☛ To read the [Accept reference status], push the [Read] button (is *not* automatically displayed).

Some remarks for the *SmartView* users:

- On the *SmartView* display, the advanced entity [Reference radar] is visible as well. The value of this entity must be left to the default value <+999.9999>.
- ☛ Check [Reference status] in the commissioning menu, to see if the command has been accepted.

6.4.2.4 Alarm Settings

Engage
SmartView

- Set the entities [High high alarm], [High alarm], [Low alarm], [Low low alarm], and [Alarm hysteresis] to the desired values.

For definitions, see FIGURE 6-7

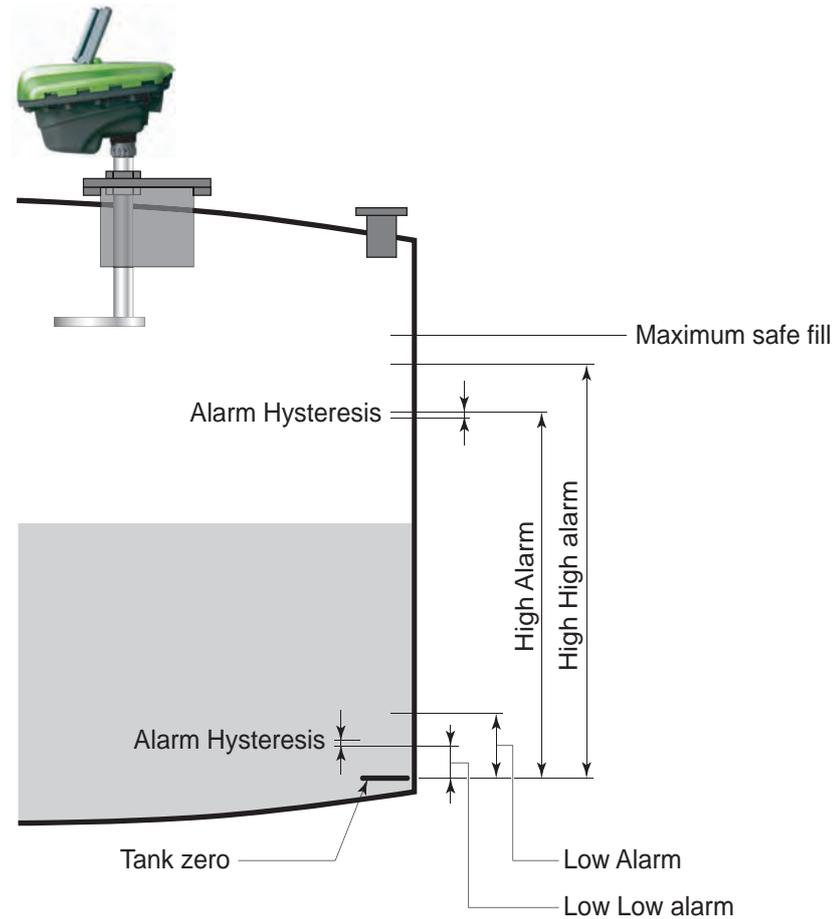


FIGURE 6-7

Alarm and hysteresis definitions

ESF07-0012

Attention!

- All above mentioned entities **MUST** be set as the defaults are extremes (1E+12). If they are not, no errors will be displayed, but the [Commissioned] entity will be <False>.
- If the alarm entities are correctly set, but the [Alarm hysteresis] is not, then any alarms that would raise will never be set off! So watch the [Commissioned] status.
- Be aware that the alarm status is only visible in the [Primary value] entity (*innage*)! It is *not* visible in the [Secondary value] entity (ullage).
- Although the GPU-protocol always contains the alarm status, the current software only passes the actual alarm status to this protocol if the gauge is set to *innage* control. So when ullage status is asked for by the GPU-protocol, NO alarm statuses are displayed.
Workaround solution: Set the GPU records to *innage*.

6.4.2.5 Alarm Loop Checking

Normally, level alarms can be verified when the level reaches the low-level or high-level alarm set point. The level alarms and, if applicable, the hard alarm contact coupled to one of the level alarms can be checked by a “loop check” command. This check is independent from the actual level value.

The level alarm signalling can be checked in several ways:

- via the communication line to the host
 - via the hard alarm output contact
- ☛ To perform the alarm test, set [Alarm test enable] to <Enable> and set [Alarm test] to the required alarm (<High High alarm>, <High Alarm>, <Low Alarm>, or <Low Low alarm>). [Alarm test] is a parameter command, and the command will be executed when the parameter is sent to the gauge. When the command is given, the corresponding alarm will be set for 1 minute.

Engauge
SmartView

6.4.2.6 Compensations

6.4.2.6.1 Filtering

The gauge contains an output filter for both radar innage and radar ullage. The higher the [Filter averaging constant], the more damping on the radar innage and radar ullage values. The filter also introduces a lag between actual ullage/innage and filtered ullage/innage when the product level is changing. The higher the [Filter averaging constant], the larger the lag. The minimum [Filter averaging constant] value is 0 (no filtering), the maximum [Filter averaging constant] value is 99. For the general filter behavior, see FIGURE 6-8.

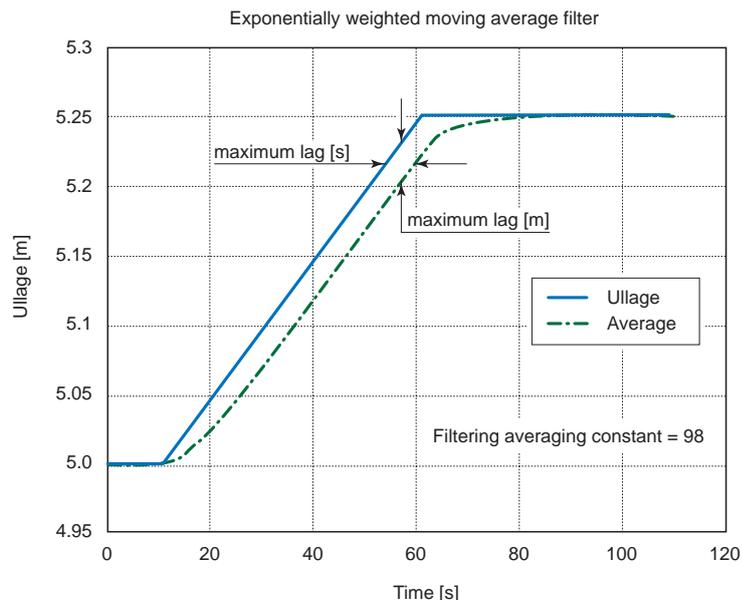


FIGURE 6-8

Filtering characteristic example (level change = 5 mm/s)

Commissioning

In the table below some filtering figures are given.

| [Filter averaging constant] | Approximate noise reduction factor | Maximum lag [s] | Maximum lag [distance] |
|-----------------------------|------------------------------------|-----------------|------------------------|
| 50 | 1.4 | 0.1 | 0.1 * dL/s |
| 70 | 1.8 | 0.25 | 0.25 * dL/s |
| 90 | 3 | 1 | 1 * dL/s |
| 95 | 4.5 | 2 | 2 * dL/s |
| 98 | 7 | 5.5 | 5.5 * dL/s |
| 99 | 10 | 11 | 11 * dL/s |

6.4.2.6.2 Verification Pins

See the *Instruction Manual Verification Pins SmartRadar Flexline*.

6.4.2.7 Errors and Warnings

The status code of the [Primary value] or the [Secondary value] can display an error (status = <BAD>) or a warning (status = <UNCERTAIN>).

Most common error messages are:

| Message | Cause |
|-----------------------------------|---|
| Radar max safe fill not set error | [Maximum safe fill] still set to 0 (zero) |
| Radar max safe fill out of range | [Maximum safe fill] value too high |

6.4.2.8 Additional Information

Following information can be extracted from the TII-XR system:

| Entity | Description |
|-------------------------|---|
| [DSP firmware version] | Besides a generic processor, the TII-XR has a Digital Signal Processor for algorithm calculations. See also FIGURE 6-3. |
| [Production date] | Production date of the complete SmartRadar FlexConn system. |
| [ART2A serial number] | The serial number of the high-frequency module. This module does all measurements. |
| [Device serial number] | Serial number of the complete SmartRadar FlexConn system. |
| [Antenna serial number] | Serial number of the measuring antenna. |

6.5 Relay Contacts (FII-DO)

6.5.1 Introduction

The Field Interface Instrument - Digital Output (FII-DO) board has 4 software-controlled, electromechanical relays; see FIGURE 6-9.

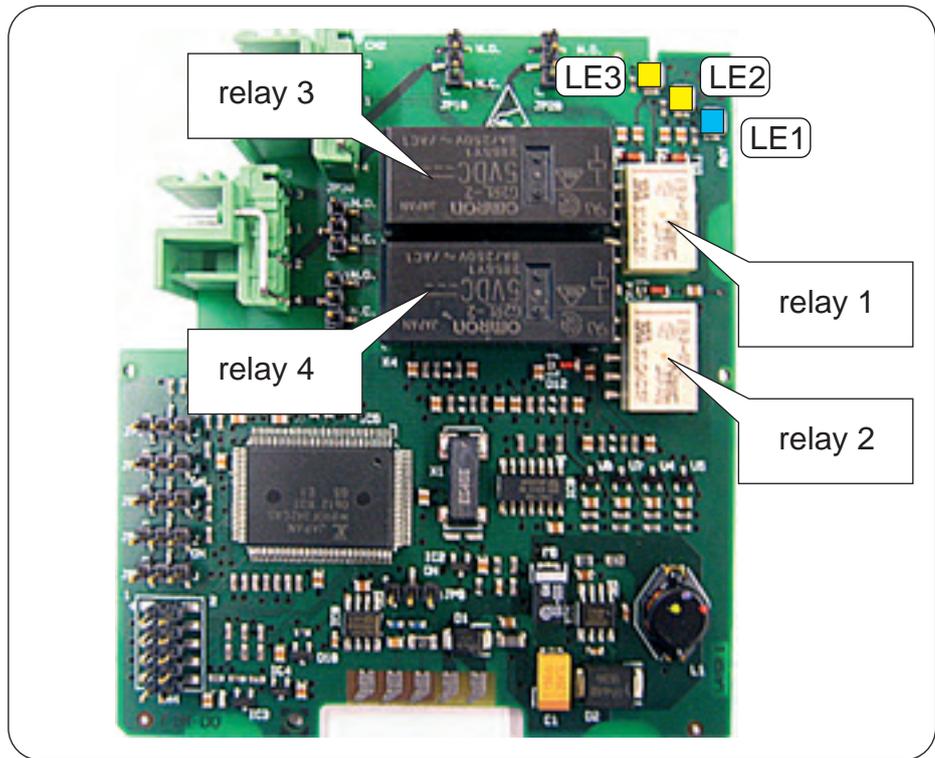


FIGURE 6-9

The relays and LEDs on the FII-DO board

ESF07-0001

These relays are allocated to FlexConn functions as shown below:

| Function Number | Function |
|-----------------|----------|
| 1 | Relay 1 |
| 2 | Relay 2 |
| 3 | Relay 3 |
| 4 | Relay 4 |

The relays have output status read-back lines.

With jumpers, the relays can individually be set to Normally Open (NO) or Normally Closed (NC).

In addition to the board's [\[Health\]](#) LED LE1, the LEDs LE2 and LE3 are available (see FIGURE 6-9). They can be associated to a relay, by setting the [\[LED Association\]](#) entity.

☛ For a *fail-safe level application*, continue with section 6.5.10.

6.5.2 Operation Mode

The FII-DO can operate in one of two modes: [Alarm Mode] and [Fallback Mode]. This is controlled by the [Operation Mode] entity.

Fallback Mode is *not* implemented yet.

☛ Set the [Operation Mode] entity to [Alarm Mode].

Engage
SmartView

6.5.3 Relay Configuration

6.5.3.1 Jumper Settings

At installation, each individual relay contact was configured as required with the hardware jumpers JPx0, where x = Relay 1 to 4 respectively. See FIGURE 6-10.

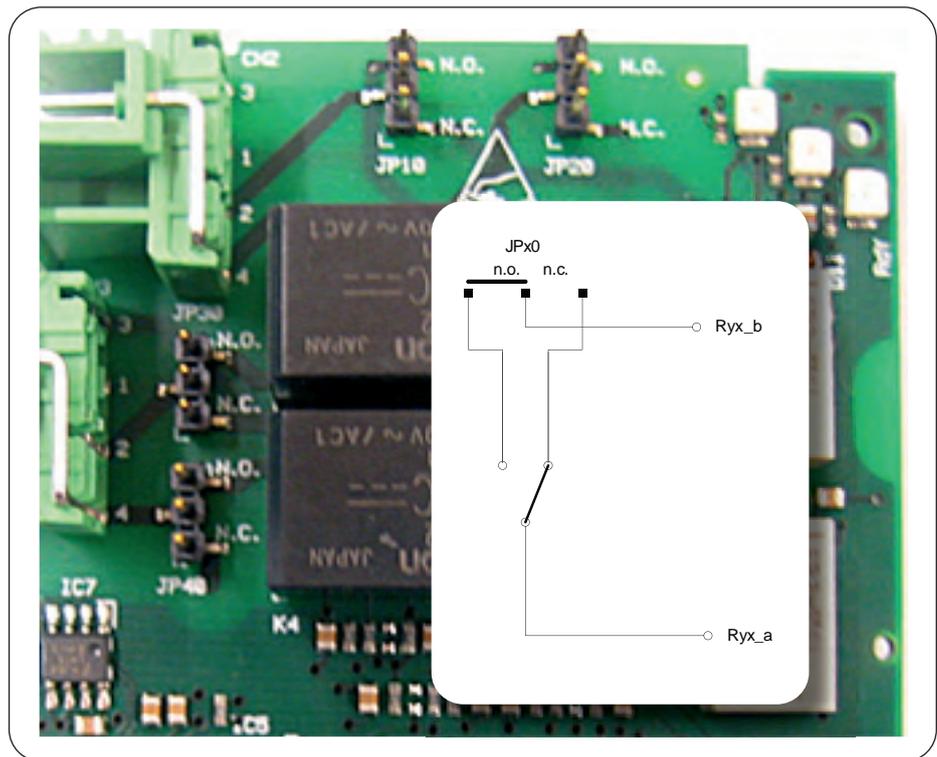


FIGURE 6-10

The relays' hardware jumpers

ESF07-0002

NOTE: *In the Commissioning stage, no jumper setting can be changed without breaking the compartment screw sealing.*

6.5.3.2 Relay Mode

Each individual relay can be set to be *energized* or *de-energized* during operation, by setting the [Relay Mode] entity to <Energized> or <De-energized> respectively.

If the [Relay Mode] entity is set to <Energized>, the relay coil will be energized when the relay state is <Deactivated>, and the relay coil will be de-energized when the relay state is <Activated>.

If the [Relay Mode] entity is set to <De-Energized>, the relay coil will be de-energized when the relay state is <Deactivated>, and the relay coil will be energized when the relay state is <Activated>.

The <Energized> option is used for *fail-safe* operation whereas the <De-Energized> option is used for *non-fail-safe* operation.

- ☛ Set each individual relay to the required configuration, by selecting the proper entities. See also next overview (fail-safe configuration is coloured).

Engauge
SmartView

| Physically Configured | Relay Mode | Relay State | Physical Result |
|-----------------------|--------------|-------------|-----------------|
| Normally Open (NO) | De-Energized | Activated | Closed |
| | | Deactivated | Open |
| | Energized | Activated | Open |
| | | Deactivated | Closed |
| Normally Closed (NC) | De-Energized | Activated | Open |
| | | Deactivated | Closed |
| | Energized | Activated | Closed |
| | | Deactivated | Open |

6.5.4 Alarm Mode

Each individual relay can operate in one out of three modes, by setting the [Alarm Mode] entity to either [PV Monitor], [Remote Control], or [Not In Use].

6.5.4.1 PV Monitor

In [PV Monitor] mode, each individual FII-DO-relay unit can monitor the Primary Value (PV) or Secondary Value (SV) of another board connected to the CAN bus, and either activate or deactivate the associated relay if a certain condition is <True> or <False>.

- ☛ If [Remote Control] or [Not In Use] mode must be selected, skip to section 6.5.4.2 or 6.5.4.3 respectively.

- ☛ From the [Alarm Mode] menu, select [PV Monitor].

- ☛ Select [Monitor Board ID], set proper value.

Engauge
SmartView

- ☛ Select [Monitor Board Instance], set proper value.
- ☛ Select [Monitor Function Instance], set proper value.
- ☛ Select [Monitor Source], select either <PV> or <SV>, as desired.

The [Monitor Board ID], [Monitor Board Instance], and [Monitor Function Instance] entities determine the *location* of the entity to be scanned.

The [Monitor Source] entity determines if either the Primary Value <PV> or Secondary Value <SV> entity shall be scanned.

The behavior of each individual relay in PV Monitor mode is further controlled by the [Monitor Mode] and the [Status Behavior] entities; see next.

6.5.4.1.1 Monitor Mode

The [Monitor Mode] entity can either be set to [Remote] or [Local].

- If the [Monitor Mode] is set to [Remote], the *alarm status* of the scanned PV or SV is monitored. The alarm status is compared against the value set in the [Remote Threshold Source] entity. The [Remote Threshold Source] entity can be set to <HH>, <HA>, <LA>, or <LL>.

Example: If the [Remote Threshold Source] is set to <HH> and a High High Alarm occurs, the relay will be activated. It will not be activated by any other alarms.

- ☛ If [Local] [Monitor Mode] is to be set, skip to next bullet (■).

- ☛ From the [Monitor Mode], select [Remote].

- ☛ Select [Remote Threshold Source], set desired value.

- If the [Monitor Mode] is set to [Local], the scanned PV or SV value is compared against the value set in the [Threshold] entity. The behavior is modified by the [Threshold Mode] and the [Hysteresis] entities. The [Threshold Mode] entity can be set to either <Treat as HA> or <Treat as LA>.

If the [Threshold Mode] entity is set to <Treat as HA>, the relay is activated if the scanned PV or SV is greater than or equal to the [Threshold] entity value, and the relay is deactivated if the scanned PV or SV is less than the [Threshold] entity value minus the [Hysteresis] entity value.

If the [Threshold Mode] entity is set to <Treat as LA>, the relay is activated if the scanned PV or SV is greater than or equal to the [Threshold] entity value, and the relay is deactivated if the scanned PV or SV is less than the [Threshold] entity value plus the [Hysteresis] entity value.

- ☛ From the [Monitor Mode], select [Local].

- ☛ Select [Threshold Mode], and choose either <Treat as HA> or <Treat as LA>.

- ☛ Select [Hysteresis], set desired value.

6.5.4.1.2 Status Behavior

The Status Behavior entity determines what happens to the relay if the health of the scanned PV or SV differs from Good. The [Status Behavior]

Engauge
SmartView

Engauge
SmartView

should be set to one of the following options: <BAD>, <BAD-UNCERTAIN>, or <Not Used>.

- If the [Status Behavior] is set to <BAD>, and the scanned PV or SV health is Bad, the respective relay will be activated.
 - If the [Status Behavior] is set to <BAD-UNCERTAIN>, and the scanned PV or SV health is Bad or Uncertain, the respective relay will be activated.
 - If the [Status Behavior] is set to <Not Used>, the respective relay will *not* be activated if the scanned PV or SV health is Bad or Uncertain.
- ☛ Set the [Status Behavior] entity either to <BAD>, <BAD-UNCERTAIN>, or <Not Used>.

Engauge
SmartView

NOTE: This behavior takes priority over the [Remote] or [Local] monitoring. For example: If the [Status Behavior] is set to <BAD>, and the scanned PV or SV health is Bad, the respective relay will be activated regardless of the [Monitor Mode] entity settings. The [Remote] or [Local] option PV or SV checks will then not affect the relay status.

6.5.4.2 Remote Control

In [Remote Control] mode, each individual relay can directly be activated or deactivated, by sending an !Activate! respectively a !Deactivate! command via the CAN bus.

The behavior of each individual relay is further controlled by the [Remote Control] mode entity, which can be set to either <Restricted> or <Not Restricted>.

- If the [Remote Control] mode entity is set to <Not Restricted>, any source can be used to control the relay with an !Activate! or a !Deactivate! command.
 - If the [Remote Control] mode entity is set to <Restricted>, the relay can only be controlled by the source that matches the values set in the [Control Board ID], the [Control Board Instance], and the [Control Function Instance].
- ☛ From the [Remote Control] mode menu, select either <Restricted> or <Not Restricted>.
- ☛ If Not Restricted was selected, skip to 6.5.4.3.
- ☛ Select [Control Board ID], set proper value.
- ☛ Select [Control Board Instance], set proper value.
- ☛ Select [Control Function Instance], set proper value.

Engauge
SmartView

6.5.4.3 Not in Use

If an individual relay is not required in a particular application, the [\[Alarm Mode\]](#) entity must be set to [<Not In Use>](#).

Example: If a particular application requires only two relays to be used, say relay 1 and 2, then for relay 3 and 4 the [\[Alarm Mode\]](#) entities must be set to [<Not In Use>](#).

☛ For the FII-DO relays *not used* within the application, set the [\[Alarm Mode\]](#) entities to [<Not In Use>](#).

Engauge
SmartView

6.5.5 Commands

The following commands can be given to the FII-DO:

- Activate
- Deactivate
- Acknowledge

6.5.5.1 Activate

The [!Activate!](#) command will cause the specified relay to become [<Activated>](#). This command is only available in [\[Remote Control\]](#) mode; see 6.5.4.2.

The [!Activate!](#) command behavior is modified by the [\[Time Setting\]](#) entity. If the [\[Time Setting\]](#) entity is set to zero, the relay will stay permanently activated until a [!Deactivate!](#) command is given.

If the [\[Time Setting\]](#) entity is set to a value other than zero, the relay will be activated for a time in seconds equal to the value set in the [\[Time Setting\]](#) entity, then deactivated. During the period the relay is activated, the relay state will be [!Time Setting Active!](#). This is useful for site commissioning.

☛ For each relay, set the [\[Time Setting\]](#) entity to the desired value.

Engauge
SmartView

6.5.5.2 Deactivate

The [!Deactivate!](#) command will cause the specified relay to become [<Deactivated>](#). This command is only available in [\[Remote Control\]](#) mode; see 6.5.4.2.

6.5.5.3 Acknowledge

The [!Acknowledge!](#) command will cause the specified relay to be physically deactivated, but the relay status will be set to [!Acknowledged!](#). This command is only available in [\[PV Monitor\]](#) mode; see 6.5.4.1. This

command can only be given when the concerned relay has already been activated.

For example, this command is useful if the relay is connected to an alarm system. The alarm can be silenced by the command, but it is still possible to determine if an alarm has occurred. When the alarm condition is then removed, the relay state will become deactivated, and normal operation will resume.

6.5.6 LED Association

Depending on the value set in the [\[LED Association\]](#) entity, the 4 individual relays on the FII-DO board can be associated with one out of 2 LEDs, LE2 or LE3 (see FIGURE 6-9).

The associated LED will be ON when the relay state is [<Activated>](#), and the LED will be OFF when the relay state is [<Deactivated>](#).

*NOTE: The LEDs do **not** indicate the **physical** relay state (coil state or contacts state), as this depends on the software settings and the physical settings (jumper), see 6.5.3.*

☛ Set the value of the [\[LED Association\]](#) entity as desired (optional). For an example, see table below.

Engauge
 SmartView

| LED Association | LED Number | Relay Number |
|-----------------|------------|--------------|
| 1 + 2 | LE2 | 1 |
| | LE3 | 2 |
| 3 + 4 | LE2 | 3 |
| | LE3 | 4 |

6.5.7 Terminal Allocation

| Terminal Number | Name | Function |
|-----------------|-------|-------------------|
| 14 | Ry1_a | Relay 1 Common |
| 15 | Ry1_b | Relay 1 NO or NC* |
| 16 | Ry2_a | Relay 2 Common |
| 17 | Ry2_b | Relay 2 NO or NC* |
| 18 | Ry3_a | Relay 3 Common |
| 19 | Ry3_b | Relay 3 NO or NC* |
| 20 | Ry4_a | Relay 4 Common |
| 21 | Ry4_b | Relay 4 NO or NC* |

*) See jumper settings, section 6.5.3.1.

Commissioning

6.5.8 Commissioned Entities

Engauge
SmartView

☛ By using the table below, make sure all entities are commissioned.

The [Commissioned] entity will display either <True> if the function is commissioned or <False> if the function is not commissioned. To commission the function, the entities must be set in accordance with the table below.

| Operation Mode | Alarm Mode | Remote Control Mode | Parameters | Commissioned | |
|----------------|----------------|---------------------|--|---|---------|
| Alarm Mode | Remote Control | Restricted | [Control Board ID] ≥ 1 and ≤ 255 [Control Board Instance] ≥ 0 and ≤ 7 [Control Function Instance] ≥ 1 and ≤ 15 [Time Setting] = 0 | <True> | |
| | | | [Control Board ID] < 1 or > 255 [Control Board Instance] < 0 and > 7 [Control Function Instance] < 1 and > 15 [Time Setting] $\neq 0$ | <False> | |
| | | Not Restricted | [Time Setting] = 0 | <True> | |
| | | | [Time Setting] $\neq 0$ | <False> | |
| | PV Monitor | Remote | Remote | [Monitor Board ID] ≥ 1 and ≤ 255 [Monitor Board Instance] ≥ 0 and ≤ 7 [Monitor Function Instance] ≥ 1 and ≤ 15 [Time Setting] = 0 | <True> |
| | | | | [Monitor Board ID] < 1 or > 255 [Monitor Board Instance] < 0 and > 7 [Monitor Function Instance] < 1 and > 15 [Time Setting] $\neq 0$ | <False> |
| | | | Local | [Monitor Board ID] ≥ 1 and ≤ 255 [Monitor Board Instance] ≥ 0 and ≤ 7 [Monitor Function Instance] ≥ 1 and ≤ 15 [Time Setting] = 0 [Threshold] = value entered [Hysteresis] = value entered | <True> |
| | | | | [Monitor Board ID] < 1 or > 255 [Monitor Board Instance] < 0 and > 7 [Monitor Function Instance] < 1 and > 15 [Time Setting] $\neq 0$ [Threshold] = value entered [Hysteresis] = value entered | <False> |
| | | Not In Use | N/A | N/A | <True> |
| | | Fallback Mode | N/A | N/A | N/A |

6.5.9 Board Commissioned Entity

The [Board Commissioned] entity will display either <True> if all functions are commissioned or <False> if any of the functions are not commissioned.

- ☛ If the [Board Commissioned] entity displays <False>, check each function parameter again. Use the table from 6.5.8.

Engauge
SmartView

6.5.10 Fail-safe Level Application

Following steps include all commissioning-aspects settings for the Fail-safe level application.

- ☛ The corresponding jumper of the concerned relay must be in the Normally Open (NO) state (= *default* setting).

NOTE: In the Commissioning stage, no jumper setting can be changed without breaking the compartment screw sealing. See also section 6.5.3.1.

Engauge
SmartView

- ☛ Set [Operation Mode] to [Alarm Mode].
- ☛ Set [Relay Mode] to <Energized>.
- ☛ Set [Alarm Mode] to [PV Monitor].
- ☛ Set [Monitor Board ID] to <board id> of product-level board.
- ☛ Set [Monitor Board Instance] to <board instance> of related product-level board.
- ☛ Set [Monitor Function Instance] to <function instance> of related product-level board.
- ☛ Set [Monitor Source] to <PV>.
- ☛ Set [Monitor Mode] to [Remote].
- ☛ Set [Remote Threshold Source] to <HH>, <HA>, <LA>, or <LL>.
- ☛ Set corresponding alarm setting of the related product-level board.
- ☛ Set [Status Behavior] to <BAD-UNCERTAIN>

FII-DO

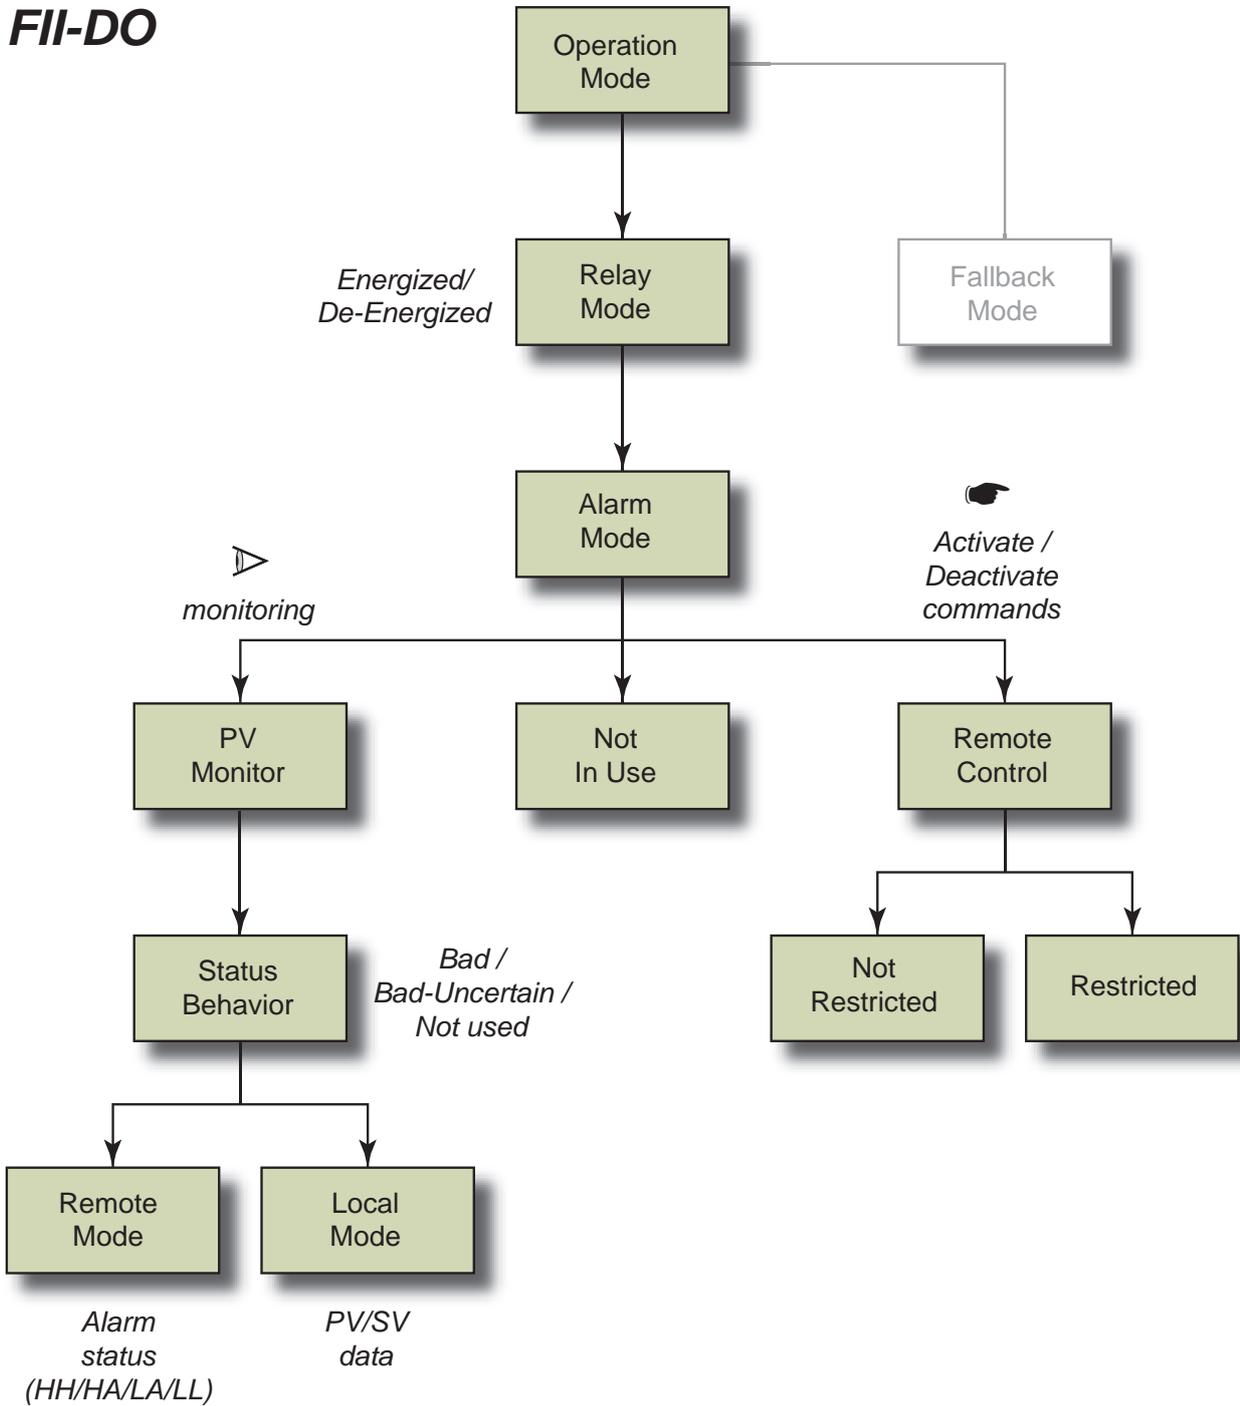


FIGURE 6-11

FII-DO operation mode survey

ESF07-0004

Commissioning

6.6 SmartView Display Interface (FII-SMV)

6.6.1 Introduction

The Field Interface Instrument - SmartView (FII-SMV) board is a module that communicates with *SmartView*.

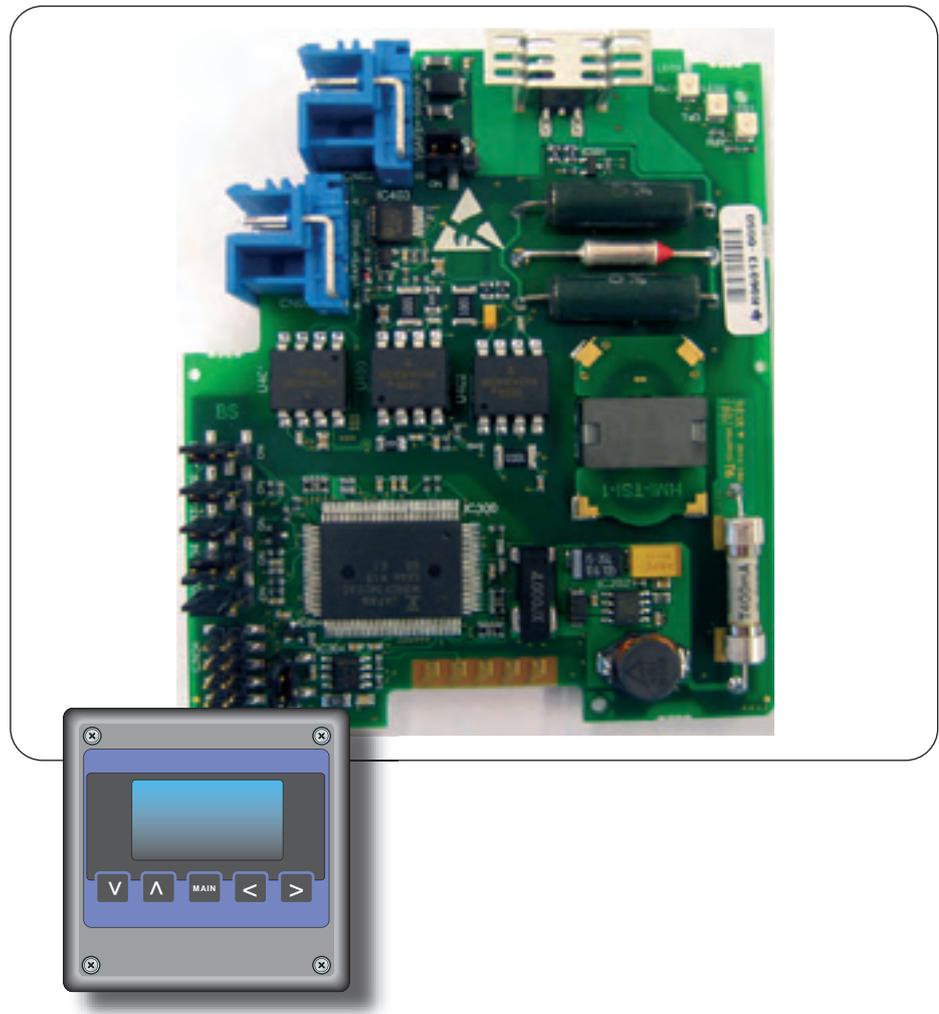


FIGURE 6-12

The FII-SMV board with the *SmartView* display

ESF07-0013

At request from *SmartView* the FII-SMV board prepares data sets for it. The requests from *SmartView* depend on the actual screen at the time. The communication between the FII-SMV and *SmartView* uses an own protocol on an RS-485 physical layer.

Commissioning

The *SmartView* display can be delivered in 3 versions, each version having its own specific address:

- Portable *SmartView* (address 1)
- *SmartView* fixed on the instrument (address 2)
- *SmartView* as a tank-side indicator (address 3)

The FII-SMV board continuously scans all addresses, and only the one with the lowest address will be served.

So, for example, if a stand-alone *SmartView* (address 3) and an integrated *SmartView* (address 2) are connected, the stand-alone *SmartView* (address 3) will be served as soon as the integrated *SmartView* (address 2) is closed (set to idle).

6.6.2 Commissioning the FII-SMV

For a correct functioning of the FII-SMV module in an instrument the following entities can be set by using either *Engauge* or *SmartView*.

☛ By using the following table, check each entity for correctness.

Engauge

SmartView

| Name | Value Range | Default Value | Explanation |
|--|---------------------------------|-----------------|---|
| [Decimal separator] | <point> <comma> | <point> | The decimal separator in which entities are shown on the <i>SmartView</i> display. |
| [Tenth millimeter selection] | <enable> <disable> | <enable> | Determines whether the tenth millimeter is shown on the display in the [PV screen] in case a level entity is shown. |
| [Identification] | 8 characters e.g. <TANK1234> | <-----> | Name of a tank or instrument. This string is visible within a [PV screen]. |
| [Password] | <.....> 6 characters | <ENRAF2> | The password <i>SmartView</i> uses for entering the protected level. Note: Some settings reside under the protected level. |
| [Function identification]  | <.....> 13 characters | <SmartView mst> | The name of the current function of this module. This name is visible on the <i>SmartView</i> display. |

6.7 Pressure & Density Measurement and Other HART Inputs (FCI-HT)

6.7.1 Introduction

The Field Communication Instrument - HART (FCI-HT) board is a HART^{®1} master module that enables hybrid-signal (both analog + digital) communication between the FlexConn instrument and a HART sensor.

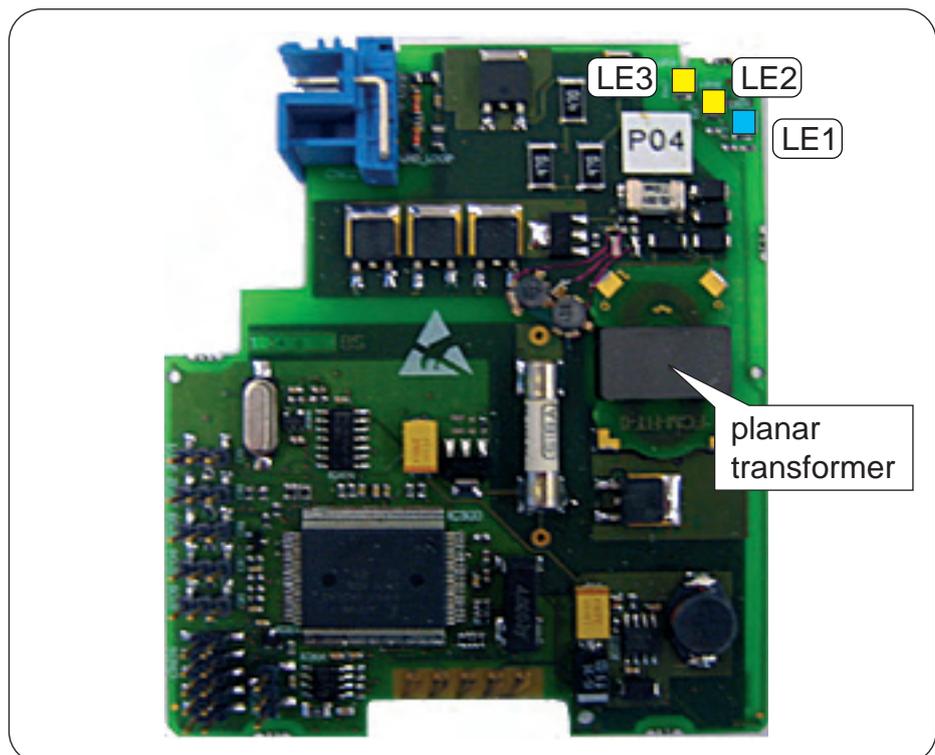


FIGURE 6-13

The FCI-HT board

ESF07-0014

The HART protocol is a bi-directional master-slave communication protocol, which is used to communicate between intelligent field instruments and host systems.

The FCI-HT board has a planar transformer for galvanic isolation from the HART bus. See FIGURE 6-13.

LED LE1 is the board's [\[Health\]](#) LED. LEDs LE2 and LE3 will be flashing to indicate activity on the HART bus. LE2 indicates data is being transmitted (Tx), LE3 indicates data is being received (Rx).

With the HART protocol, an analog 4-20 mA signal can be combined with a digital Frequency Shift Keying (FSK) signal. See FIGURE 6-14.

1. Highway Addressable Remote Transducer.

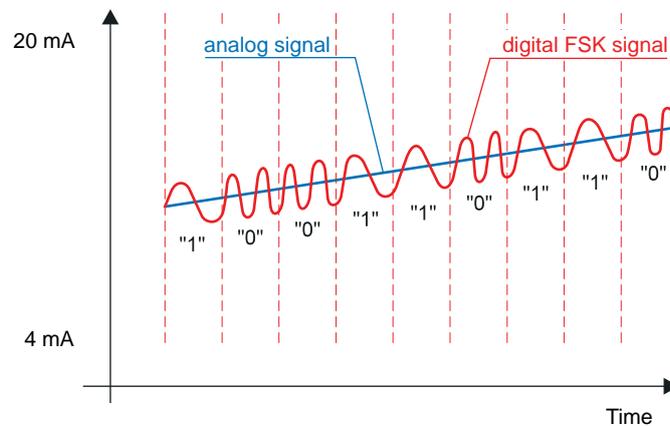


FIGURE 6-14

The analog and digital signals within the HART[®] communication

ESF07-0015

6.7.2 Software Description

The FCI-HT board, being a functional module of the SmartRadar FlexLine, contains embedded software which enables it to collect data input from sensors via both the HART bus and the FlexConn CAN bus.

Moreover the FCI-HT module can calculate the HIMS¹ product density.

The *main* function of the FCI-HT software is to measure HIMS product density, by connecting the FCI-HT board via the HART bus to 1 or 2 pressure sensors, and via the FlexConn bus to a product level and a water level sensor.

To measure product density, the needed standard system configuration is:

- HART pressure sensor P1 (product pressure)
- HART pressure sensor P3 (vapour pressure)
- Product level scanned from a FlexConn board (e.g. TII-XR)
- Water level scanned from a FlexConn board (e.g. FII-VT)

For tanks that are free venting to the atmosphere or floating-roof tanks, P3 pressure is not required. The water level sensor is also optional.

1. Hybrid Inventory Measurement System.

For HIMS density measurement system diagrams, see FIGURE 6-15 and FIGURE 6-16.

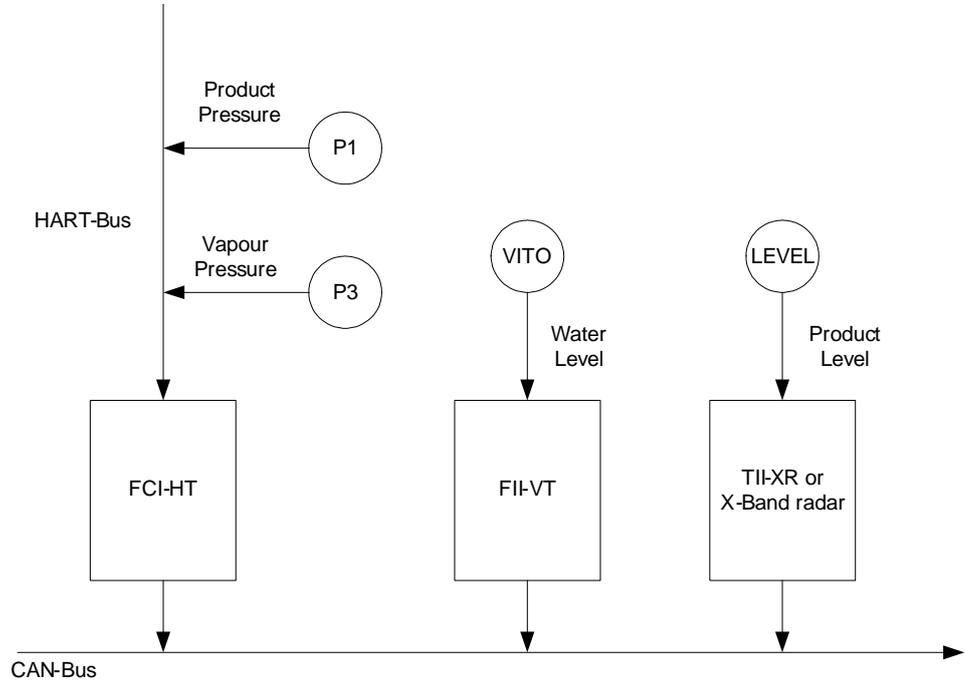


FIGURE 6-15

Standard HIMS density measurement system diagram

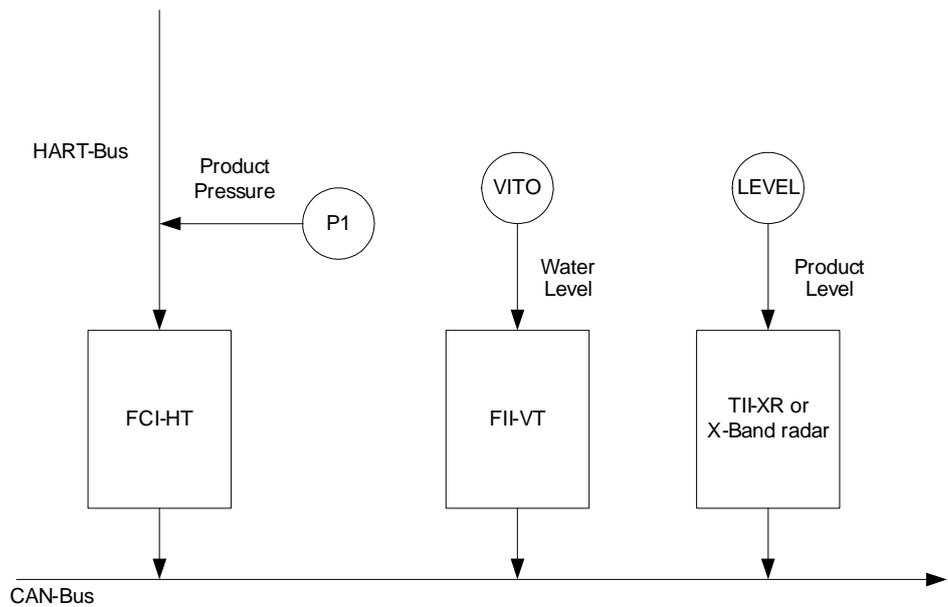


FIGURE 6-16

Floating-roof or free-venting tank HIMS density measurement system diagram

Commissioning

As an *alternative* function, the FCI-HT board also allows the connection of up to 5 generic HART sensors operating in *multi-drop digital* mode or one generic HART sensor operating in *analog* mode.

In the multi-drop digital mode situation, one or two of the generic HART sensors can be [P1 Pressure] or [P3 Pressure], providing product pressure and vapour pressure respectively, but no HIMS density calculation will be available.

The HART sensors and HIMS density measurement are allocated to a function number in the FCI-HT software. See table below.

| FlexConn Function | Device Type |
|-------------------|----------------|
| Function 1 | [P1 Pressure] |
| Function 2 | [P3 Pressure] |
| Function 3 | [Distance] |
| Function 4 | [Temperature] |
| Function 5 | [Pressure] |
| Function 6 | [Density] |
| Function 7 | [Other] |
| Function 8 | [HIMS Density] |

TABLE 6-1

FlexConn function allocation

Function 1 is exclusively reserved for P1 pressure, Function 2 is exclusively reserved for P3 pressure, and Function 8 is exclusively reserved for HIMS density calculation.

Only one of each type of HART device can be allocated to a function. Therefore this limits the number of HART devices of each type that can be fitted.

Example 1

4 HART pressure devices and 1 temperature device can be connected.

- P1 pressure device allocated to Function 1
- P3 pressure device allocated to Function 2
- one pressure device allocated to Function 5
- one pressure device allocated to Function 7
- the temperature device allocated to Function 4

Example 2

2 HART density devices and 1 distance device can be connected.

- density device 1 allocated to Function 6
- density device 2 allocated to Function 7
- the distance device allocated to Function 3

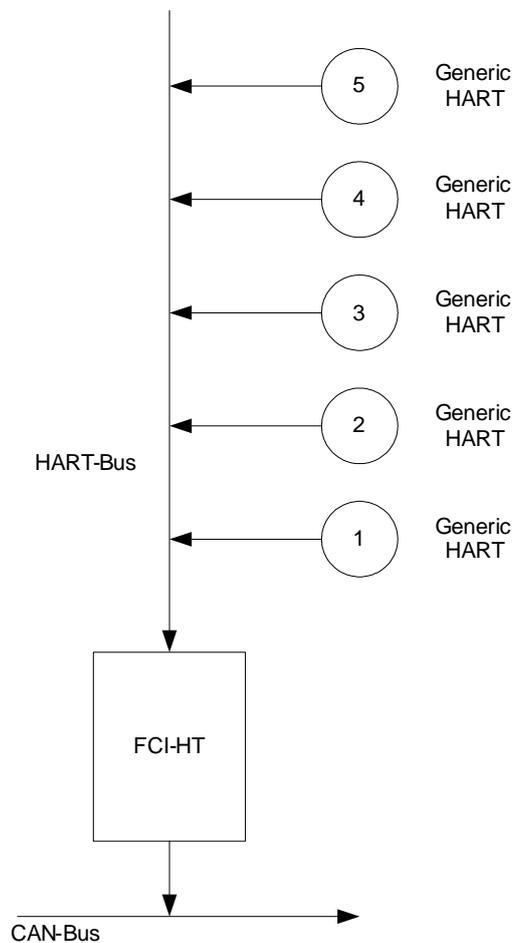


FIGURE 6-17

Alternate system diagram multi-drop digital mode

In analog mode, the connected HART device will be allocated to Function 1 through 7, depending on the type of HART device connected.

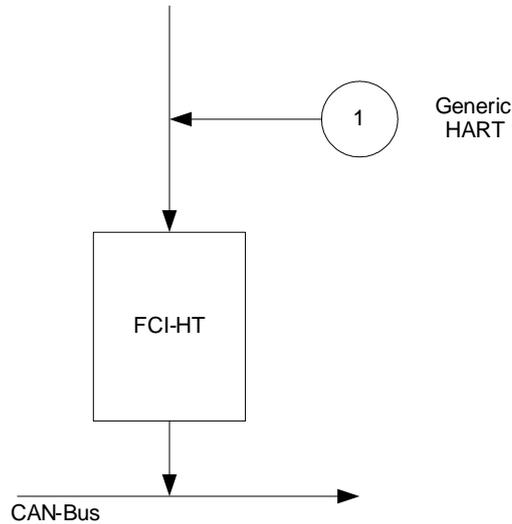


FIGURE 6-18 Analog mode system diagram

6.7.3 Software Specifications

6.7.3.1 General

The *main* function of the FCI-HT software is to measure HIMS product density, by connecting the FCI-HT board via the HART bus to 2 pressure sensors (P1 and P3), and via the FlexConn bus to a product level sensor and an optional water level sensor.

The *alternative* function is to connect up to 5 generic HART devices operating in multi-drop digital mode, or 1 generic HART device operating in analog mode.

The FCI-HT software only supports HART devices with the following addresses.

| HART Address | Function |
|--------------|---|
| 00 | Reserved for HART device in analog mode |
| 01 | Reserved for P1 pressure sensor |
| 02 | N/A Reserved for future use |
| 03 | Reserved for P3 pressure sensor |
| 04 | HART generic sensor |

Commissioning

| HART Address | Function |
|--------------|---------------------|
| 05 | HART generic sensor |
| 06 | HART generic sensor |
| 07 | HART generic sensor |
| 08 | HART generic sensor |
| 09 | HART generic sensor |
| 10 | HART generic sensor |
| 11 | HART generic sensor |
| 12 | HART generic sensor |
| 13 | HART generic sensor |
| 14 | HART generic sensor |
| 15 | HART generic sensor |

TABLE 6-2 Accepted HART addresses

Engauge
SmartView

- ☛ Before proceeding with commissioning, first check the maximum start-up current of all connected HART devices.
- ☛ Make sure the HART address of the installed device(s) are in accordance with TABLE 6-2.

6.7.3.2 P1 Pressure

The FCI-HT software only accepts the Primary Value of a P1 pressure HART device in SI units kilo Pascals (kPa).

Engauge
SmartView

- ☛ Make sure the P1 pressure HART device is configured to output data in kilo Pascals (kPa). If not, correctly configure as yet, by using an appropriate HART configuration tool.

| Sensor Type | Accepted HART PV Unit | Abbreviation | HART PV Unit Code |
|-------------|-----------------------|--------------|-------------------|
| P1 Pressure | Kilo Pascal | kPa | 12 |

TABLE 6-3 Accepted PV unit for a P1 HART device

NOTE: *The Secondary and Tertiary values of a P1 pressure HART device may be any units.*

The PV of the P1 pressure HART device is read and converted into SI Units Pascals (Pa) within the FlexConn function PV.

The value is filtered, and the filtering factor depends on the value set in the entity [\[P1 Integration time\]](#). A higher value gives more filtering, and a lower value gives less filtering.

Commissioning

The correction factor stored in the [P1 PV offset] entity is then subtracted from the filtered value. If the [P1 PV offset] entity = 0 no offset is applied.

Depending on the [PV selected type] entity, the P1 pressure can be displayed as either absolute pressure or relative pressure.

| PV Unit Type | Display Unit Type | PV selected type |
|--------------|-------------------|------------------|
| P1 Pressure | Absolute | 1 |
| | Relative | 2 |

TABLE 6-4

P1 pressure displayed unit types

If Relative pressure is selected, the value stored in the [Ambient Air Pressure] entity is added to the measured pressure. If Absolute pressure is selected, no factor is added. The final result is available in the [Primary Value] entity.

NOTE: Absolute pressure is used in the density calculation; the relative pressure is only displayed in P1 [Primary Value].

For the FCI-HT software to differentiate between a HART device malfunction and a HART device not actually installed, P1 pressure has the entity [P1 Installed] which must be set to either <Installed> if a P1 pressure HART device is actually fitted or <Not Installed> if a P1 pressure HART device is *not* actually fitted.

The Secondary and Tertiary values of a P1 pressure HART device are not converted, and they are simply translated from the HART device to the FlexConn environment.

6.7.3.3 P3 Pressure

The FCI-HT software only accepts the Primary Value of a P3 pressure HART device in SI units kilo Pascals (kPa).

- ☛ Make sure the P3 pressure HART device is configured to output data in kilo Pascals (kPa). If not, correctly configure as yet, by using an appropriate HART configuration tool.

Engauge
SmartView

| Sensor Type | Accepted HART PV Unit | Abbreviation | HART PV Unit Code |
|-------------|-----------------------|--------------|-------------------|
| P3 Pressure | Kilo Pascal | kPa | 12 |

TABLE 6-5

Accepted PV unit for a P3 HART device

NOTE: The Secondary and Tertiary values of a P3 pressure HART device may be any units.

Commissioning

The PV of the P3 pressure HART device is read and converted into SI Units Pascals (Pa) within the FlexConn function PV.

The value is filtered, and the filtering factor depends on the value set in the entity [\[P3 Integration time\]](#). A higher value gives more filtering, and a lower value gives less filtering.

The correction factor stored in the [\[P3 PV offset\]](#) entity is then subtracted from the filtered value. If the [\[P3 PV offset\]](#) entity = 0 no offset is applied.

Depending on the [\[PV selected type\]](#) entity, the P3 pressure can be displayed as either absolute pressure or relative pressure.

| PV Unit Type | Display Unit Type | PV selected type |
|--------------|-------------------|------------------|
| P3 Pressure | Absolute | 1 |
| | Relative | 2 |

TABLE 6-6

P3 pressure displayed unit types

If Relative pressure is selected, the value stored in the [\[Ambient Air Pressure\]](#) entity is added to the measured pressure. If Absolute pressure is selected, no factor is added. The final result is available in the [\[Primary Value\]](#) entity.

NOTE: Absolute pressure is used in the density calculation; the relative pressure is only displayed in P3 [\[Primary Value\]](#).

For the FCI-HT software to differentiate between a HART device malfunction and a HART device not actually installed, P3 pressure has the entity [\[P3 Installed\]](#) which must be set to either [<Installed>](#) if a P3 pressure HART device is actually fitted or [<Not Installed>](#) if a P3 pressure HART device is *not* actually fitted. For example, in the case of free-venting tanks, P3 would usually not be installed.

If the P3 pressure status is [<Good Actual>](#), the P3 pressure value is also stored in memory in the [\[Last Valid P3\]](#) entity, to allow recovery from a power-down situation when a P3 pressure is not available.

If the measured P3 pressure is *invalid* (e.g. HART scan error), the software will check the [\[P3 Installed\]](#) entity to determine if P3 is actually fitted. If P3 is fitted, the software will check for a [\[Manual P3 Pressure\]](#) entity value to be entered. If no manual P3 pressure value is entered, the [\[Last Valid P3\]](#) is used in the density calculation. If no [\[Last Valid P3\]](#) is available, an error will be reported.

If P3 pressure is *not* installed - in the case of free-venting tanks - a default value of 0.0 for P3 pressure is used for density calculations.

The Secondary and Tertiary values of a P3 pressure HART device are not converted, and they are simply translated from the HART device to the FlexConn environment.

6.7.3.4 HIMS Density

To make HIMS density calculation possible, the relevant entity values must be available. See also FIGURE 6-19.

☛ Read also the *Instruction Manual HIMS pressure measurement*.

☛ Enter the appropriate values into the following entities:

- [Distance P1 to Zero Level]
- [Distance P3 to Zero Level]
- [Hydrostatic Deformation Level]
- [Hydrostatic Deformation Factor]
- [Local Gravity]
- [Minimum HIMS Level]
- [HIMS Level Hysteresis]
- [Ambient Air Density]
- [Tank Vapour Density]

Engauge
SmartView

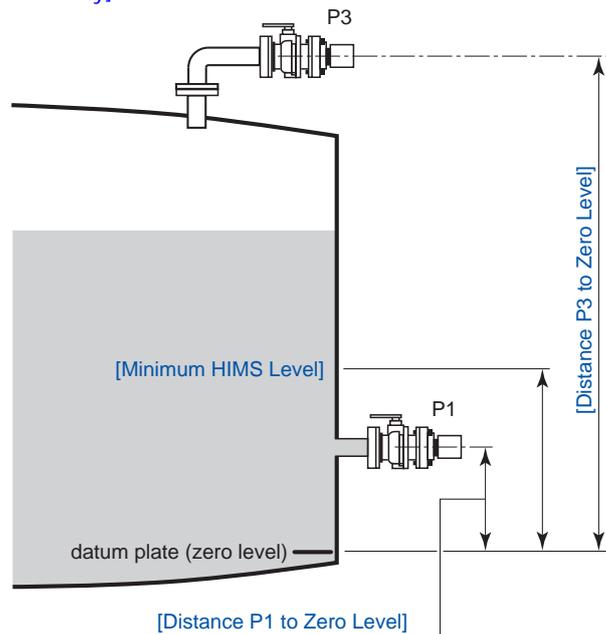


FIGURE 6-19

HIMS configuration principle

ESF07-0022

To calculate HIMS density, the following valid data must be available:

- P1 pressure
- P3 pressure
- Product level
- Water level (optional)

The software analyses the status of these 4 (3) inputs, to determine the value and status of the [HIMS Density PV].

If the HIMS Density PV status is <Good Actual>, the HIMS Density PV value is also stored in memory in the [Last Valid Density] entity, to allow recovery from a power-down situation when a HIMS Density PV value is not available.

If any of the 4 input statuses are bad, the software will check for a [Manual Product Density] entity value to be entered. If a [Manual Product Density] entity value is entered, this value will be used for the HIMS Density PV. If no [Manual Product Density] entity value is entered, the software will check if a [Last Valid Product Density] entity value was stored. If a [Last Valid Product Density] entity value was stored, this value will be used for the HIMS Density PV. If no [Manual Product Density] or [Last Valid Product Density] entity value is found, an error will be reported.

When calculating HIMS Density, the software will check for a negative density value. If the value is negative, the same manual or last-valid mechanism is used as described before. If the value is positive, HIMS Density is calculated.

When calculating HIMS Density, in order to achieve a valid result, the software will also check if the product level is above the [Minimum HIMS Level] entity value. If this condition is <True>, HIMS Density is calculated. If the product level is below the [Minimum HIMS Level] entity value, the same manual or last valid mechanism is used as described before.

When calculating HIMS Density, if the [Water Level Correction] entity is <Enabled>, the software will check if the scanned water level \leq [Distance P1 to Zero Level]. If this is <True>, the HIMS Density is calculated. If the water level $>$ [Distance P1 to Zero Level], the same manual or last valid mechanism is used as described before. If [Water Level Correction] entity is <Disabled>, the software will not check the scanned water level.

6.7.3.5 Generic HART Devices

The FCI-HT software only accepts Generic HART devices at addresses 0 and 4 through 15 with the required sensor type configured.

The generic HART devices are scanned sequentially from address 0 and then address 4 through 15. When a device is detected, initially the HART PV unit code is checked against TABLE 6-7 in the following order: Distance, Temperature, Pressure, and Density.

| Sensor Type | Accepted HART Units | Abbreviation | HART Unit Code |
|-------------|------------------------|--------------|----------------|
| Pressure | Pounds per square inch | psi | 6 |
| | Pascal | Pa | 11 |
| | Kilo Pascal | kPa | 12 |

Commissioning

| Sensor Type | Accepted HART Units | Abbreviation | HART Unit Code |
|-------------|---------------------------|--------------------|----------------|
| Temperature | Degrees Celsius | °C | 32 |
| | Degrees Fahrenheit | °F | 33 |
| Distance | Feet | ft | 44 |
| | Meters | m | 45 |
| | Inches | in | 47 |
| Density | Kilograms per cubic meter | kg/m ³ | 92 |
| | Pounds per cubic foot | lb/ft ³ | 94 |
| | Degrees API | API | 104 |

TABLE 6-7

Accepted units for generic HART devices

- If an accepted HART PV unit code is found, the HART device is allocated to the relevant FlexConn function as detailed in TABLE 6-8.
- If the HART PV unit code is *not* accepted, the HART SV unit code is checked against TABLE 6-7 in the following order: Distance, Temperature, Pressure, and Density. If an accepted HART SV unit code is found, the HART device is allocated to the relevant FlexConn function as detailed in TABLE 6-8.
- The process is repeated for the HART TV unit code.
- If none of the unit codes are accepted, the device is allocated to Function 7.
- ☛ If a generic HART device output is *not* in the accepted units, configure it to accepted units output data, by using the HART configuration tool.

Engauge
SmartView

| FlexConn Function | Device Type |
|-------------------|----------------|
| Function 1 | [P1 Pressure] |
| Function 2 | [P3 Pressure] |
| Function 3 | [Distance] |
| Function 4 | [Temperature] |
| Function 5 | [Pressure] |
| Function 6 | [Density] |
| Function 7 | [Other] |
| Function 8 | [HIMS Density] |

TABLE 6-8

FlexConn function allocation

Once a device has been allocated to a function, the HART PV, SV, and TV are translated into the FlexConn function's PV, SV, and TV.

The required sensor value of the generic HART device may not be in the HART PV but it is translated into the FlexConn PV.

Commissioning

Example:

A HART temperature sensor may have a PV unit code Ohms, and a SV unit code Celsius. The required sensor value is temperature in Celsius, and this is translated into the FlexConn PV, and the Ohms value is translated into the FlexConn SV.

Translation is performed in the order: PV (Distance, Temperature, Pressure, and Density), SV (Distance, Temperature, Pressure, and Density), TV (Distance, Temperature, Pressure, and Density).

The required sensor value read from the generic HART devices will be converted into SI Units within the FlexConn PV as shown in TABLE 6-9.

The other sensor values of a generic HART device are not converted, and they are simply translated from the HART device environment into the FlexConn environment SV and TV.

| Accepted HART Units | Abbreviation | FlexConn PV Unit Translation | Abbreviation |
|---------------------------|--------------------|------------------------------|-------------------|
| Pounds per square inch | psi | Pascal | Pa |
| Pascal | Pa | | |
| Kilo Pascal | kPa | | |
| Degrees Celsius | °C | Celsius | °C |
| Degrees Fahrenheit | °F | | |
| Feet | ft | Meters | m |
| Meters | m | | |
| Inches | in | | |
| Kilograms per cubic meter | kg/m ³ | Kilograms per cubic meter | kg/m ³ |
| Pounds per cubic foot | lb/ft ³ | | |
| Degrees API | API | | |

TABLE 6-9

Generic HART device units into FlexConn PV unit translation

6.7.3.6 Function Identification

Functions 1 through 8 are identified by the entities: [Function Category], [Function Type], and [Function Sub-type].

Their default identification information is detailed in TABLE 6-10.

| Function | Allocation | Function Category | Function Type | Function Sub-type |
|------------|-------------|-------------------|----------------------|-------------------|
| Function 1 | P1 Pressure | Sensor (1) | Product pressure (5) | (6) |
| Function 2 | P3 Pressure | Sensor (1) | Vapour pressure (13) | (7) |

Commissioning

| Function | Allocation | Function Category | Function Type | Function Sub-type |
|------------|--------------|-------------------|-----------------------|-------------------|
| Function 3 | Distance | Sensor (1) | HART transmitter (12) | (16) |
| Function 4 | Temperature | Sensor (1) | HART transmitter (12) | (16) |
| Function 5 | Pressure | Sensor (1) | HART transmitter (12) | (16) |
| Function 6 | Density | Sensor (1) | HART transmitter (12) | (16) |
| Function 7 | Other | Sensor (1) | HART transmitter (12) | (16) |
| Function 8 | HIMS Density | Sensor (1) | Product density (6) | (8) |

TABLE 6-10

Default function category, type, and sub-type

The function type entity for Functions 3 through 7 can be changed from the default value <HART transmitter> to provide more information about the sensor, by setting the [User function type] entity and then resetting the FCI-HT board.

The possible values are detailed in TABLE 6-11.

| Function | Allocation | User Function Type | Value |
|------------|-------------|--|-------|
| Function 3 | Distance | User function type product level | 4 |
| | | User function type water level | 9 |
| Function 4 | Temperature | User function type product temperature | 8 |
| | | User function type vapour temperature | 7 |
| Function 5 | Pressure | User function type product pressure | 5 |
| | | User function type vapour pressure | 13 |
| Function 6 | Density | User function type product density | 6 |
| Function 7 | Other | User function type product level | 4 |
| | | User function type water level | 9 |
| | | User function type product temperature | 8 |
| | | User function type vapour temperature | 7 |
| | | User function type product pressure | 5 |
| | | User function type vapour pressure | 13 |
| | | User function type product density | 6 |

TABLE 6-11

Generic HART user function types

Functions 1 through 8 have fixed values for [PV Unit Type] and [Function Identification] entities, as detailed in TABLE 6-12.

Commissioning

| Function | Allocation | PV Unit Type | Function Identification |
|------------|--------------|-----------------------|-------------------------|
| Function 1 | P1 Pressure | UNIT_TYPE_PRESSURE | <P1 Pressure> |
| Function 2 | P3 Pressure | UNIT_TYPE_PRESSURE | <P3 Pressure> |
| Function 3 | Distance | UNIT_TYPE_LENGTH | <Distance> |
| Function 4 | Temperature | UNIT_TYPE_TEMPERATURE | <Temperature> |
| Function 5 | Pressure | UNIT_TYPE_PRESSURE | <Pressure> |
| Function 6 | Density | UNIT_TYPE_DENSITY | <Density> |
| Function 7 | Other | UNIT_TYPE_UNDEFINED | <Other Units> |
| Function 8 | HIMS Density | UNIT_TYPE_DENSITY | <HIMS Density> |

TABLE 6-12

PV unit type and function identification

6.7.3.7 SmartView Display

Although the Primary Values (PV) of functions 1 through 8 are *calculated* in SI units, the *SmartView display* supports the following units for local calibration, commissioning etc. The displayed unit depends on the value of the [PV selected unit] entity.

| PV Unit Type | Display Unit Type | Displayed Units | PV Selected Unit | Range |
|--------------|---|-----------------|------------------|---------------|
| Pressure | Pascal | <pas> | 1 | max. 0.99 MPa |
| | Kilo Pascal | <kpas> | 2 | max. 9.9 MPa |
| | Pounds per square inch (small) | <psi s> | 3 | max. 99 psi |
| | Pounds per square inch (large) | <psi l> | 4 | max. 999 psi |
| Temperature | Degrees Celsius | <°C> | 1 | - |
| | Degrees Fahrenheit | <°F> | 2 | - |
| Distance | Meters | <m> | 1 | - |
| | Feet | <ft> | 2 | - |
| | Inches | <in> | 3 | - |
| | Fractions (feet, inches, 1/16 th inch) | <f.i.s.> | 4 | - |
| Density | Kilograms per cubic meter | <kg/m3> | 1 | - |
| | Pounds per cubic foot | <lb/f3> | 2 | - |
| | Degrees API | <a.p.i> | 3 | - |

Commissioning

| PV Unit Type | Display Unit Type | Displayed Units | PV Selected Unit | Range |
|--------------|-------------------|-----------------|------------------|-------|
| Other | Milli | <m ...> | 1 | - |
| | (none) | <-> | 2 | - |
| | Kilo | <k ...> | 3 | - |
| | Mega | <M ...> | 4 | - |

TABLE 6-13

SmartView displayed unit types

The following PV types are supported on the *SmartView* display for P1 pressure and P3 pressure only. These are available changed by setting the [PV selected type] entity. This is detailed in TABLE 6-14.

| PV Unit Type | Display Unit Type | Displayed Type | PV selected type |
|--------------|-------------------|----------------|------------------|
| P1 Pressure | Absolute | <ABS> | 1 |
| P3 Pressure | Relative | <REL> | 2 |

TABLE 6-14

P1 and P3 pressure displayed unit types

6.7.4 Board Commissioning

The commissioning entity for each *function* is initially default to <False>. The commissioning entity for each function will only be <True> when the associated entities of each function have been set *within normal operating range*.

The *board-level* commissioned entity default is also <False>. It will only be <True> when all the function-level commissioned entities are <True>.

6.7.4.1 Function 1 Commissioning

Engauge
SmartView

- ☛ Set all Function 1 entities according to TABLE 6-15 requirements, to commission P1.

| HIMS Density | P1 Pressure Sensor Detected | P1 Ambient Air Pressure and P1 Installed | Commissioned |
|--------------|-----------------------------|---|--------------|
| <Enabled> | N/A | [P1 ambient air pressure] ≠ <default> AND [P1 installed] = <enable> | <True> |
| | | [P1 ambient air pressure] = <default> OR [P1 installed] = <disable> | <False> |

Commissioning

| HIMS Density | P1 Pressure Sensor Detected | P1 Ambient Air Pressure and P1 Installed | Commissioned |
|--------------|-----------------------------|---|--------------|
| <Disabled> | Yes | [P1 ambient air pressure] ≠ <default> AND [P1 installed] = <enable> | <True> |
| | | [P1 ambient air pressure] = <default> OR [P1 installed] = <disable> | <False> |
| | No | N/A | <True> |

TABLE 6-15 Function 1 commissioning entities

6.7.4.2 Function 2 Commissioning

Engauge
SmartView

- ☛ Set all Function 2 entities according to TABLE 6-16 requirements, to commission P3.

| HIMS Density | P3 Pressure Sensor Detected | P3 Installed | P3 Ambient Air Pressure | Commissioned |
|--------------|-----------------------------|--------------|---------------------------------------|--------------|
| <Enabled> | Yes | <Enable> | [P3 ambient air pressure] ≠ <default> | <True> |
| | | <Disable> | [P3 ambient air pressure] = <default> | <False> |
| | No | <Enable> | N/A | <False> |
| | | <Disable> | N/A | <True> |
| <Disabled> | Yes | <Enable> | [P3 ambient air pressure] ≠ <default> | <True> |
| | | <Disable> | [P3 ambient air pressure] ≠ <default> | <False> |
| | | N/A | [P3 ambient air pressure] = <default> | <False> |
| | No | N/A | N/A | <True> |

TABLE 6-16 Function 2 commissioning entities

Commissioning

6.7.4.3 Function 3 through 7 Commissioning

Engauge
SmartView

- ☛ Set all Function 3 through 7 entities according to TABLE 6-17 requirements, to commission all generic HART sensors.

| Function | HART Sensor Detected | User Function Type | Commissioned |
|----------|----------------------|-------------------------------------|--------------|
| 3 | Yes | = <Product level> OR <Water level> | <True> |
| | | ≠ <Product level> OR <Water level> | <False> |
| | No | N/A | <True> |
| 4 | Yes | = <Product temp.> OR <Vapour temp.> | <True> |
| | | ≠ <Product temp.> OR <Vapour temp.> | <False> |
| | No | N/A | <True> |
| 5 | N/A | N/A | <True> |
| 6 | N/A | N/A | <True> |
| 7 | N/A | N/A | <True> |

TABLE 6-17

Function 3 through 7 commissioning entities

Commissioning

6.7.4.4 Function 8 Commissioning

Engauge
SmartView

- Set Function 8 entities according to TABLE 6-18 requirements, to commission the HIMS density function.

| HIMS Density | Function 8 Commissioning Entities | Commissioned |
|--------------|---|--------------|
| Enabled | <Hydrostatic deformation level> ≠ <Default> AND <Hydrostatic deformation factor> ≠ <Default> AND <Local gravity> ≠ <Default> AND <Minimum HIMS level> ≠ <Default> AND <Ambient air density> ≠ <Default> AND <Tank vapour density> ≠ <Default> AND <Distance P1 to zero level> ≠ <Default> AND <Distance P3 to zero level> ≠ <Default> | <True> |
| | <Hydrostatic deformation level> = <Default> OR <Hydrostatic deformation factor> = <Default> OR <Local gravity> = <Default> OR <Minimum HIMS level> = <Default> OR <Ambient air density> = <Default> OR <Tank vapour density> = <Default> OR <Distance P1 to zero level> = <Default> OR <Distance P3 to zero level> = <Default> | <False> |
| Disabled | N/A | <True> |

TABLE 6-18 Function 8 commissioning entities

6.7.5 Hardware Configuration

6.7.5.1 Terminal Allocation

| Terminal Number | Name | Function |
|-----------------|----------|-----------------|
| 24 | V_Loop | HART Bus power |
| 25 | GND_Loop | HART Bus ground |

6.7.5.2 LED Allocation

| Terminal Number | Function |
|-----------------|--------------------|
| LE2 | HART data Transmit |
| LE3 | HART data Receive |

6.8 Average Temperature & Water Level Measurement (FII-VT)

6.8.1 Introduction

The Field Interface Instrument - VITO¹ (FII-VT) board is a VITO-data processor module, which calculates average product- and vapour temperatures, and optionally a water level.

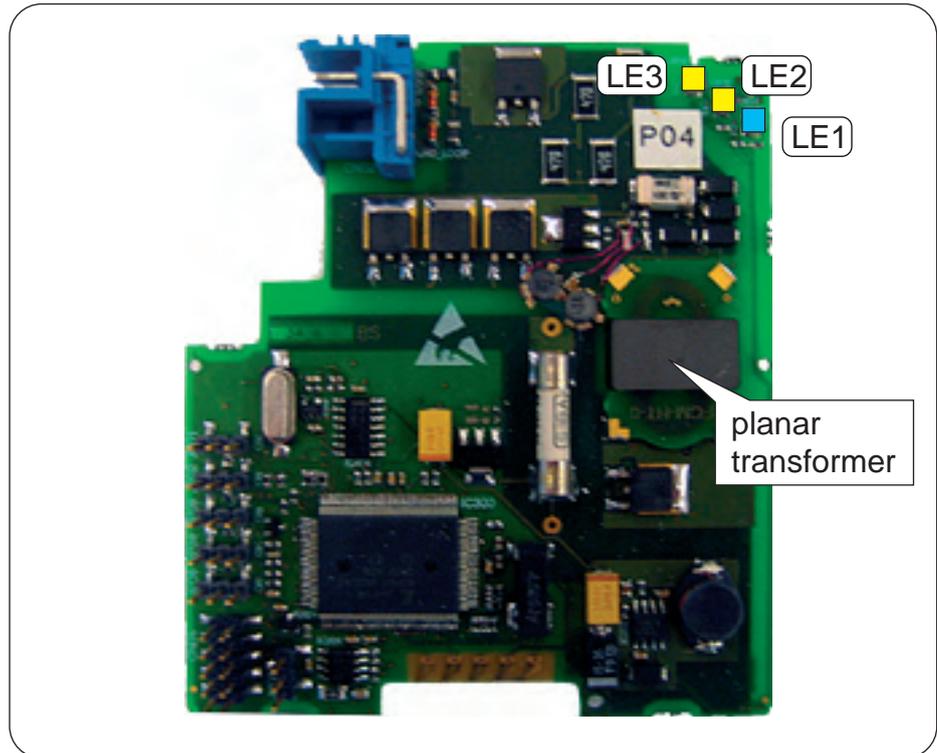


FIGURE 6-20

The FII-VT board with its planar transformer

ESF07-0016

By using the HART[®] protocol (see also 6.7.1), the FII-VT module can be connected to one VITO-interface which in turn is connected to a probe for *product temperature*, *vapour temperature*, *water level*, or a combination of these.

The FII-VT board has a planar transformer for galvanic isolation from the HART bus. See FIGURE 6-20.

LED LE1 is the board's [\[Health\]](#) LED. LEDs LE2 and LE3 will be flashing to indicate activity on the HART bus. LE2 indicates data is being transmitted (Tx), LE3 indicates data is being received (Rx).

1. Versatile In-Tank Observer

6.8.2 VITO Interface Types

For temperature and/or water level measurement, a proper VITO probe must be connected to the FII-VT module, using a VITO interface.

There are 3 VITO interface types:

- 762 VITO MTT interface for 16-spot temperature measurement (*thermocouple principle*) and optionally a water bottom measurement
- 762 VITO LT interface for 9-spot temperature measurement (*thermocouple principle*) and optionally a water bottom measurement
- 762 VITO MRT interface for Multiple Resistance Thermometer and multi-spot (*resistance variation principle*) measurement

6.8.3 Commissioning

6.8.3.1 Commissioning Parameters for MTT/LT Probes

The following 9 configurations are possible:

| Enraf Model | VITO Type | Description |
|-------------|-----------------------|--|
| 764C | MTT Temperature probe | lowest spot next to Pt100, no water probe |
| 764D | | lowest spot below Pt100, no water probe |
| 766C | MTT Combi probe | lowest spot next to Pt100, combined with water probe |
| 766D | | lowest spot below Pt100, combined with water probe |
| 767C | LT Temperature probe | lowest spot next to Pt100, no water probe |
| 767D | | lowest spot below Pt100, no water probe |
| 768C | LT Combi probe | lowest spot next to Pt100, combined with water probe |
| 768D | | lowest spot below Pt100, combined with water probe |
| 765 | Water probe | water probe only |

These models are depicted in FIGURE 6-21 and FIGURE 6-22.


Commissioning

762 VITO MTT interface

762 VITO MTT interface

762 VITO MTT interface

762 VITO MTT interface

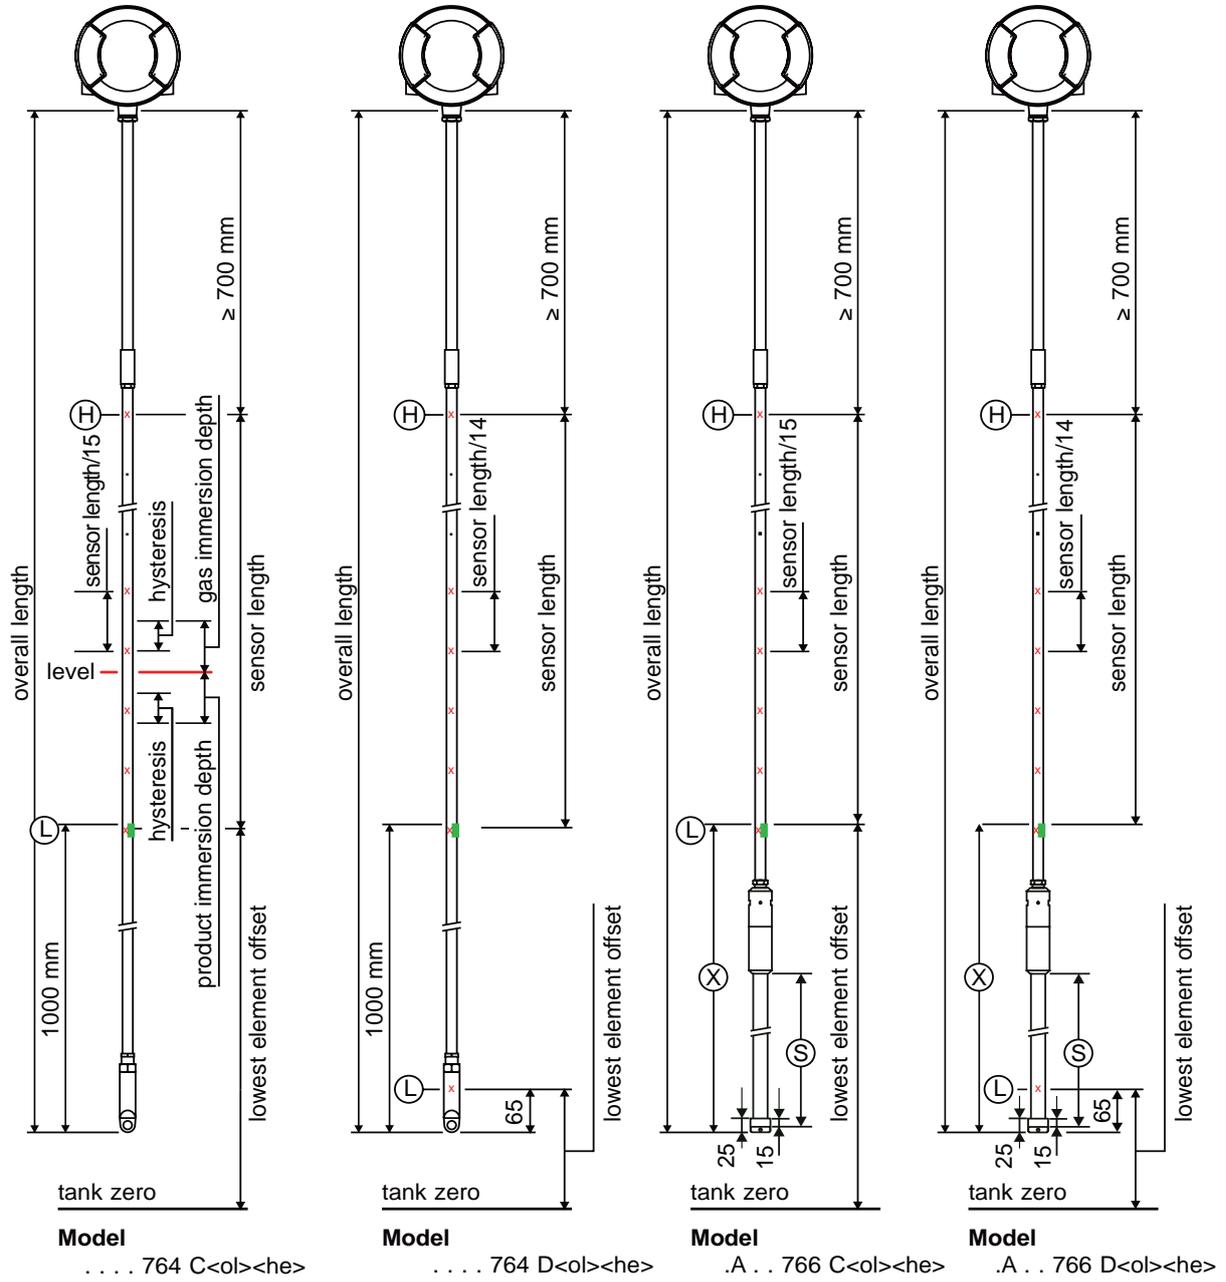

- Pt 100 reference resistor
- x Thermocouple (spot)
- H Highest spot
- L Lowest spot
- S Sensitive length = 0.5 / 1.0 / 1.5 / 2.0 m
- X Depending on actual Sensitive length, this length = 1.0 / 1.5 / 2.0 / 2.5 m

FIGURE 6-21

Tank and temperature probe data (1)

ESF07-0017

Commissioning

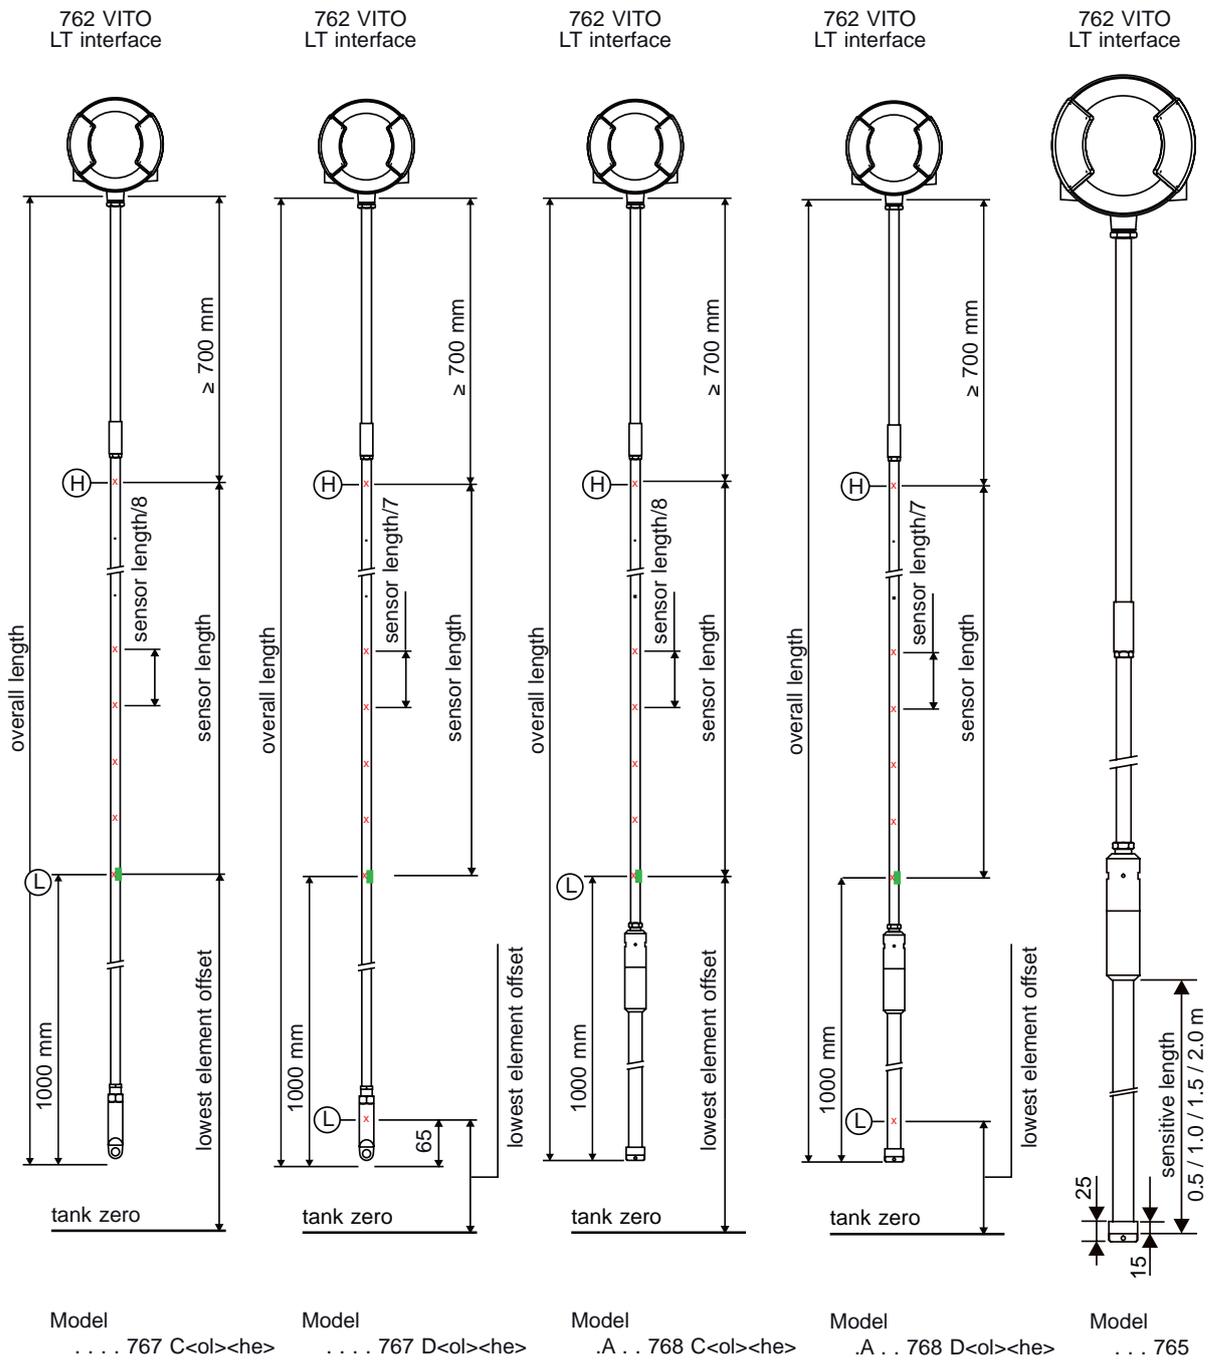


FIGURE 6-22

Tank and temperature probe data (2)

ESF07-0018

Commissioning

6.8.3.1.1 Product Temperature

Engauge
SmartView

☛ The following entities **must** be set by *Engauge* or *SmartView* for a correct functioning of the FII-VT module in an instrument.

NOTE: Using *Engauge*, following entities are set within the *Engauge Product temperature* tab.

| Name | Explanation | Value Range | Default |
|-------------------------|---|--|---------|
| [Lowest element offset] | The distance from tank zero till the lowest element position in the temperature probe | floating point number: <-X.X .. +X.X> | <80.0> |
| [Sensor length] | The distance from the Pt100 position till the highest element position | floating point number: <-X.X .. +X.X> | <80.0> |

The following entities **can** be set by *Engauge* or *SmartView* for a correct functioning of the FII-VT module in an instrument.

Engauge
SmartView

☛ Check each entity for its correctness.

| Name | Explanation | Value Range | Default |
|--|--|--|-----------|
| [Product immersion depth] | The minimum required distance of the product level above an element before it is taken into account in the average product temperature calculation | floating point number: <-X.X .. +X.X> | <0.5> |
| [Hysteresis] | The distance for a hysteresis mechanism around the switching point of the elements that are taken into account in the calculation | floating point number: <-X.X .. +X.X> | <0.1> |
| [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm]  | 4 thresholds for activating a related alarm status in the Primary Value | floating point number: <-X.X .. +X.X> | <+1.0E22> |

Commissioning

| Name | Explanation | Value Range | Default |
|--|---|---|--|
| [Alarm test enable]  | Enables (if activated, see next listed entity) the simulation of one of the 4 alarms for a minute, by simulating the actual measured Primary Value is below or above the alarm threshold. | <enable> <disable> | <disable> |
| [Alarm test]  | Activates and selects at the same time the Alarm test (if enabled with the [Alarm test enable] listed before, and the 4 alarm thresholds are properly set). | [No Alarm] [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm] | <No Alarm> |
| [Element wiring] | Used for excluding an element from the average product temperature calculation. | 16 characters A non-zero ($\neq 0$) character at position x results in element x being excluded from calculation. | <0000000000000000> |
| [Function identification]  | The current module's function name. This function is visible on the <i>SmartView</i> display. | 13 characters | <Product temp.> |

6.8.3.1.2 Vapour Temperature

*NOTE: Using Engauge, following entities are set within the Engauge **Vapour temperature** tab. Some Vapour temperature settings are shared with Product temperature settings.*

The following entities **can** be set by *Engauge* or *SmartView* for a correct functioning of the FII-VT module in an instrument.

☛ Check each entity for its correctness.

| Name | Explanation | Value Range | Default |
|--|--|--|---------------------------------|
| [Gas immersion depth] | The minimum required distance below an element before it is taken into account in the average vapour temperature calculation | floating point number: <-X.X .. +X.X> | <0.5> |
| [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm]  | 4 thresholds for activating a related alarm status in the Primary Value | floating point number: <-X.X .. +X.X> | <+1.0E22> |

Commissioning

| Name | Explanation | Value Range | Default |
|--|---|---|----------------|
| [Alarm test enable]  | Enables (if activated, see next listed entity) the simulation of one of the 4 alarms for a minute, by simulating the actual measured Primary Value is below or above the alarm threshold. | <enable> <disable> | <disable> |
| [Alarm test]  | Activates and selects at the same time the Alarm test (if enabled with the [Alarm test enable] listed before, and the 4 alarm thresholds are properly set). | [No Alarm] [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm] | <No Alarm> |
| [Function identification]  | The current module's function name. This function is visible on the SmartView display. | 13 characters | <Vapour temp.> |

6.8.3.1.3 Water Level (for 766/768 Combi probes and 765 Water probe only)

Engauge
SmartView

☛ The following entities **must** be set by Engauge or SmartView for a correct functioning of the FII-VT module in an instrument.

| Name | Explanation | Value Range | Default |
|-------------------------------|--|--|---------|
| [Maximum water capacity] | The maximum capacity when the probe is fully submerged in water (in pF) | floating point number: <-X.X .. +X.X> | <20000> |
| [Minimum water capacity] | The minimum capacity when the probe is not submerged in water (in pF) | floating point number: <-X.X .. +X.X> | <20000> |
| [Water probe bottom position] | The offset to the water probe zero point in relation with the tank zero point | floating point number: <-X.X .. +X.X> | <80> |
| [Upper reference level] | The distance from tank zero point to upper reference point; is used for water ullage calculation | floating point number: <-X.X .. +X.X> | <80> |

Commissioning

Engauge
SmartView

The following entities **can** be set by *Engauge* or *SmartView* for a correct functioning of the FII-VT module in an instrument.

| Name | Explanation | Value Range | Default |
|--|---|---|---------------|
| [Water probe length] | The length of a water probe | floating point number: <-X.X .. +X.X> | <0.5> |
| [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm]  | 4 thresholds for activating a related alarm status in the Primary Value | floating point number: <-X.X .. +X.X> | <+1.0E22> |
| [Alarm test enable]  | Enables (if activated, see next listed entity) the simulation of one of the 4 alarms for a minute, by simulating the actual measured Primary Value is below or above the alarm threshold. | <enable> <disable> | <disable> |
| [Alarm test]  | Activates and selects at the same time the Alarm test (if enabled with the [Alarm test enable] listed before, and the 4 alarm thresholds are properly set). | [No Alarm] [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm] | <No Alarm> |
| [Function identification]  | The current module's function name. This function is visible on the <i>SmartView</i> display. | 13 characters | <Water level> |

Commissioning

6.8.3.2 Commissioning Parameters for MRT or RTD

| Enraf Model | VITO Type | Description |
|-------------|--|--|
| MRT | Multiple Resistance Thermometer | MRT with up to 13 temperature elements with one spot element |
| RTD | 3-spot Resistance Temperature Detector | 1..3 RTD spots in a 3-wire connection |
| | multi-spot Resistance Temperature Detector | 1..14 RTD spots in a 2-wire connection |

See FIGURE 6-23 and FIGURE 6-24.

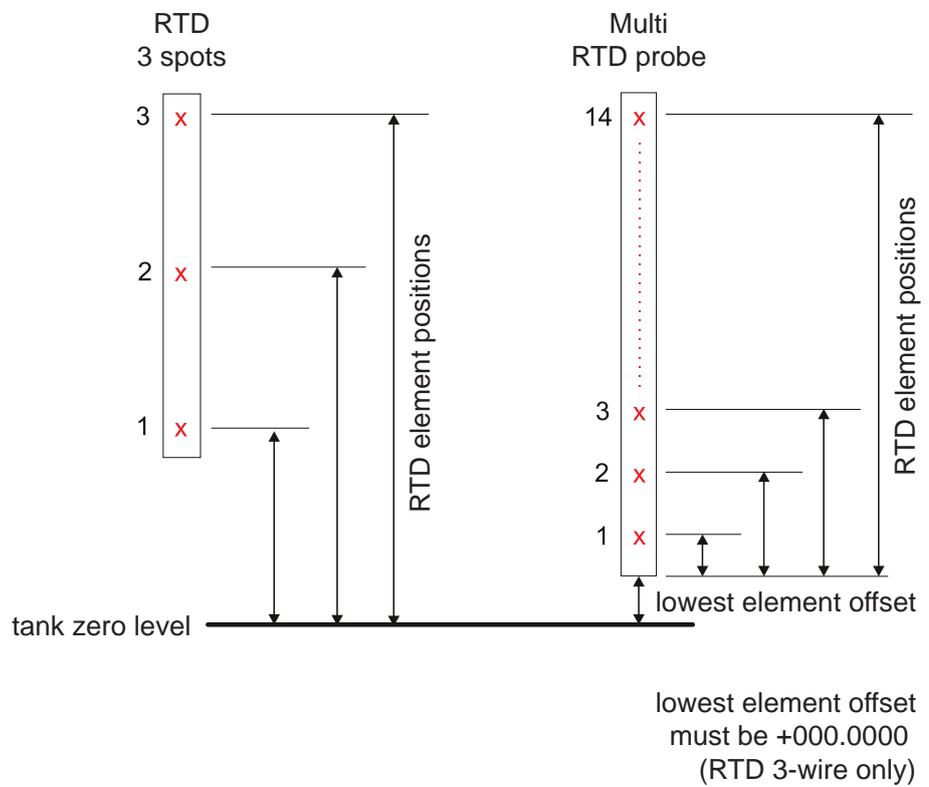


FIGURE 6-23

Resistance Temperature Detector (RTD) elements positions

ESF07-0020

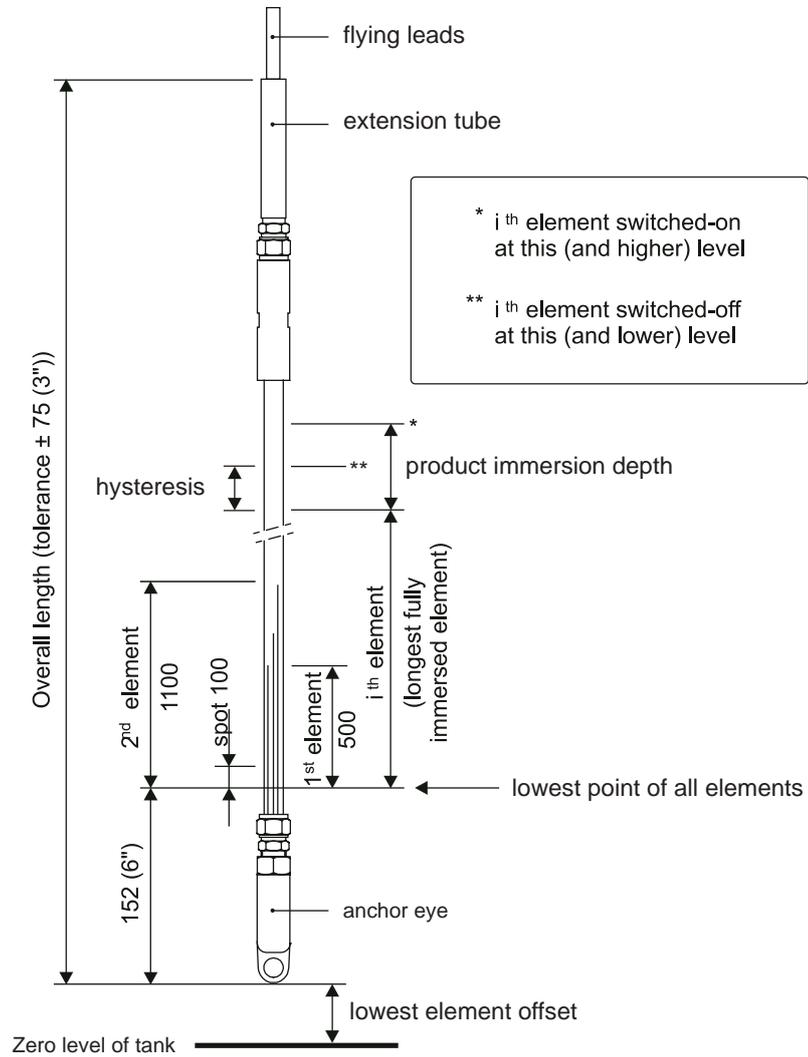


FIGURE 6-24

Multiple Resistance Thermometer (MRT) parameters

ESF07-0019

6.8.3.2.1 Product Temperature

Engauge
SmartView

The following entities **must** be set by *Engauge* or *SmartView* for a correct functioning of the FII-VT module in an instrument.

NOTE: Using *Engauge*, following entities are set within the *Engauge Product temperature* tab.

Commissioning

■ RTD 3 spots (see FIGURE 6-23 *left side*)

| Name | Explanation | Value Range | Default |
|--|---|--|---------|
| [Element type] | The supported element type is: SPL | 3 characters <SPL> | <---> |
| [Number of elements] | The number of elements a RTD probe has | <1 .. 3> | <0> |
| [Lowest element offset] | The distance from tank zero till the lowest position of the multi-RTD probe. So not used for the 3-wire version and it must be 0. | floating point number: <-X.X .. +X.X> MUST BE <0.0> | <80.0> |
| [RTD element positions]  | The positions of the RTDs from tank zero level | 3 floating point numbers: <-X.X .. +X.X> Note: Only <i>actually used</i> elements to be entered. | <0,0,0> |

■ Multi RTD probe (see FIGURE 6-23 *right side*)

| Name | Explanation | Value Range | Default |
|--|--|---|---------------------------------|
| [Element type] | The supported element type is : SPL | 3 characters <SPL> | <---> |
| [Number of elements] | The number of elements a RTD probe has | <1 .. 14> | <0> |
| [Lowest element offset] | The distance from tank zero till the lowest position of the multi-RTD probe | floating point number: <-X.X .. +X.X> | <80.0> |
| [RTD element positions]  | The positions of the RTDs from the lowest position of the probe. So not tank zero level! | 14 floating point numbers: <-X.X .. +X.X> Note: Only <i>actually used</i> elements to be entered. | <0,0,0,0,0,0,0,0,0,0,0,0,0,0,0> |

Commissioning

■ MRT (see FIGURE 6-24)

| Name | Explanation | Value Range | Default |
|---|---|--|-------------------------------|
| [Element type] | See Table TABLE 6-19 below. | 3 characters <RCB> <RCN> <RCS> <QCB> <QCN> <QCS> | <----> |
| [Number of elements] | The number of elements (resistors) an MRT probe has | <1 .. 14> | <0> |
| [Lowest element offset] | The distance from tank zero till the lowest position of the MRT probe | floating point number: <-X.X .. +X.X> | <80.0> |
| [MRT element length] if MRT length table = <T>  | The lengths of the MRTs including anchor eye | 14 floating point numbers: <-X.X .. +X.X> | <0,0,0,0,0,0,0,0,0,0,0,0,0,0> |
| [MRT length table]  | Specifies whether a fixed range of MRT resistors is used (= <F>) or user-configured lengths (= <T>). Fixed lengths are: 0.25 / 0.65 / 1.25 / 1.95 / 2.85 / 4.15 / 5.65 / 7.35 / 9.25 / 11.65 / 14.65 / 18.45 / 22.95 / 29.65 | 1 character <F> <T> | <F> |

| | |
|------------|--|
| R.. | = an MRT <i>without</i> spot element |
| Q.. | = an MRT <i>with</i> spot element |
| .CB | $R_{th} = 90.2935 + T \times 0.38826$ (- 100 through + 280 °C) |
| .CN | $R_{th} = 90.4778 + T \times 0.38090$ (- 100 through + 280 °C) |
| .CS | $R_{th} = 90.5000 + T \times 0.38730$ (- 100 through + 280 °C) |

TABLE 6-19

Element type definitions

Commissioning

The following entities **can** be set by *Engauge* or *SmartView* for a correct functioning of the FII-VT module in an instrument.

☛ Check each entity for its correctness.

| Name | Explanation | Value Range | Default |
|--|---|---|-----------------|
| [Product immersion depth] | The minimum required product level distance above an element before this element is taken into account in the average product temperature calculation | floating point number: <-X.X .. +X.X> | <0.5> |
| [Hysteresis] | This is a hysteresis mechanism distance around the switching points of the elements that are taken into account in the calculation | floating point number: <-X.X .. +X.X> | <0.1> |
| [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm]  | 4 thresholds for activating a related alarm status in the Primary Value | floating point numbers: <-X.X .. +X.X> | <1.0E22> |
| [Alarm test enable]  | Enables (if activated, see next listed entity) the simulation of one of the 4 alarms for a minute, by simulating the actual measured Primary Value is below or above the alarm threshold. | <enable> <disable> | <disable> |
| [Alarm test]  | Activates and selects at the same time the Alarm test (if enabled with the [Alarm test enable] listed before, and the 4 alarm thresholds are properly set). | [No Alarm] [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm] | <No Alarm> |
| [Function identification]  | The current module's function name. This function is visible on the <i>SmartView</i> display. | 13 characters | <Product temp.> |

Commissioning

6.8.3.2.2 Vapour Temperature

NOTE: Using Engauge, following entities are set within the Engauge **Vapour temperature** tab.
Some Vapour temperature settings are shared with Product temperature settings.

The following entities **can** be set by Engauge or SmartView for a correct functioning of the FII-VT module in an instrument.

☛ Check each entity for its correctness.

| Name | Explanation | Value Range | Default |
|--|---|---|----------------|
| [Gas immersion depth] | The minimum required distance below an element before it is taken into account in the average vapour temperature calculation | floating point number: <-X.X .. +X.X> | <0.5> |
| [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm]  | 4 thresholds for activating a related alarm status in the Primary Value | floating point number: <-X.X .. +X.X> | <+1.0E22> |
| [Alarm test enable]  | Enables (if activated, see next listed entity) the simulation of one of the 4 alarms for a minute, by simulating the actual measured Primary Value is below or above the alarm threshold. | <enable> <disable> | <disable> |
| [Alarm test]  | Activates and selects at the same time the Alarm test (if enabled with the [Alarm test enable] listed before, and the 4 alarm thresholds are properly set). | [No Alarm] [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm] | <No Alarm> |
| [Function identification]  | The current module's function name. This function is visible on the SmartView display. | 13 characters | <Vapour temp.> |

6.8.3.3 Commissioning Parameters for the 765 VITO Water Probe

For the entities to be set for the stand-alone 765 VITO water probe (see FIGURE 6-25), see 6.8.3.3.1.

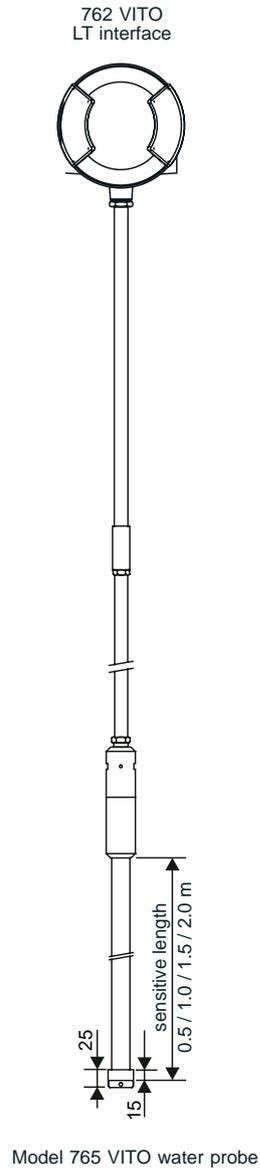


FIGURE 6-25

The model 765 VITO water probe

ESF07-0042

Commissioning

6.8.3.3.1 Water Level

Engauge
SmartView

The following entities **must** be set by *Engauge* or *SmartView* for a correct functioning of the FII-VT module in an instrument.

| Name | Explanation | Value Range | Default |
|-------------------------------|--|--|---------|
| [Maximum water capacity] | The maximum capacity when the probe is fully submerged in water (in pF) | floating point number: <-X.X .. +X.X> | <20000> |
| [Minimum water capacity] | The minimum capacity when the probe is not submerged in water (in pF) | floating point number: <-X.X .. +X.X> | <20000> |
| [Water probe bottom position] | The offset to the water probe zero point in relation with the tank zero point | floating point number: <-X.X .. +X.X> | <80> |
| [Upper reference level] | The distance from tank zero point to upper reference point; is used for water ullage calculation | floating point number: <-X.X .. +X.X> | <80> |

Engauge
SmartView

The following entities **can** be set by *Engauge* or *SmartView* for a correct functioning of the FII-VT module in an instrument.

| Name | Explanation | Value Range | Default |
|--|---|--|-----------|
| [Water probe length] | The length of the 765 VITO water probe | floating point number: <-X.X .. +X.X> | <0.5> |
| [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm]  | 4 thresholds for activating a related alarm status in the Primary Value | floating point number: <-X.X .. +X.X> | <+1.0E22> |
| [Alarm test enable]  | Enables (if activated, see next listed entity) the simulation of one of the 4 alarms for a minute, by simulating the actual measured Primary Value is below or above the alarm threshold. | <enable> <disable> | <disable> |

Commissioning

| Name | Explanation | Value Range | Default |
|--|---|---|---------------|
| [Alarm test]  | Activates and selects at the same time the Alarm test (if enabled with the [Alarm test enable] listed before, and the 4 alarm thresholds are properly set). | [No Alarm] [High High alarm] [High Alarm] [Low Alarm] [Low Low alarm] | <No Alarm> |
| [Function identification]  | The current module's function name. This function is visible on the <i>SmartView</i> display. | 13 characters | <Water level> |

6.8.4 Commissioning Check

Engauge

SmartView

- ☛ After having checked/set all before listed entities, make sure
 - the [\[Board Commissioned\]](#), the [\[Product temperature Commissioned\]](#), the [\[Vapour temperature Commissioned\]](#), and - if applicable - the [\[Water level Commissioned\]](#) entities are <True>;
 - the [\[Board Health\]](#), the [\[Product temperature Health\]](#), the [\[Vapour temperature Health\]](#), and - if applicable - the [\[Water level Health\]](#) entities are <GOOD>.

Commissioning

Honeywell Enraf

Delftechpark 39

2628 XJ Delft

The Netherlands

Tel: +31 (0)15-2701 100

www.honeywell.com/ps

Honeywell Enraf

4417762 - Revision 1
April 2009
© 2009 Honeywell International Inc.